

Frequently Asked Questions

Answers to real questions that came up during installations, gathered from support cases. If your question isn't here, contact support@trikdis.lt.

FLEXi SP3

? How do I set up a single Wiegand reader (no keypad) to pulse a door output? ✓

1. Wire the reader's data lines to the panel's **GRN/YEL** terminals.
2. In TrikdisConfig, set **Keypad type = Wiegand reader** even though no physical keypad is connected ("Modules" window → "Keypads" tab → Keypad parameters).
3. Give the target output **Output definition = Remote control** and a **Pulse time, s** (e.g. 5) in the **"PGM" window**.
4. On the **"PGM" window's "Control" tab**, tick **En** for that reader, set **PGM** to the output number, and **PGM mode = Pulse**.

NOTE

RFID/Wiegand cards can't be enrolled by tapping the reader — enter each card's Tag code by hand, as a **decimal** number, under "Linking RFID key fobs (cards)".

See the FLEXi SP3 manual for full wiring diagrams and TrikdisConfig settings.