


KEYPADS

# FLEXi / Keypad SK-LCD button – Brief User Guide

## 1. Keypad overview

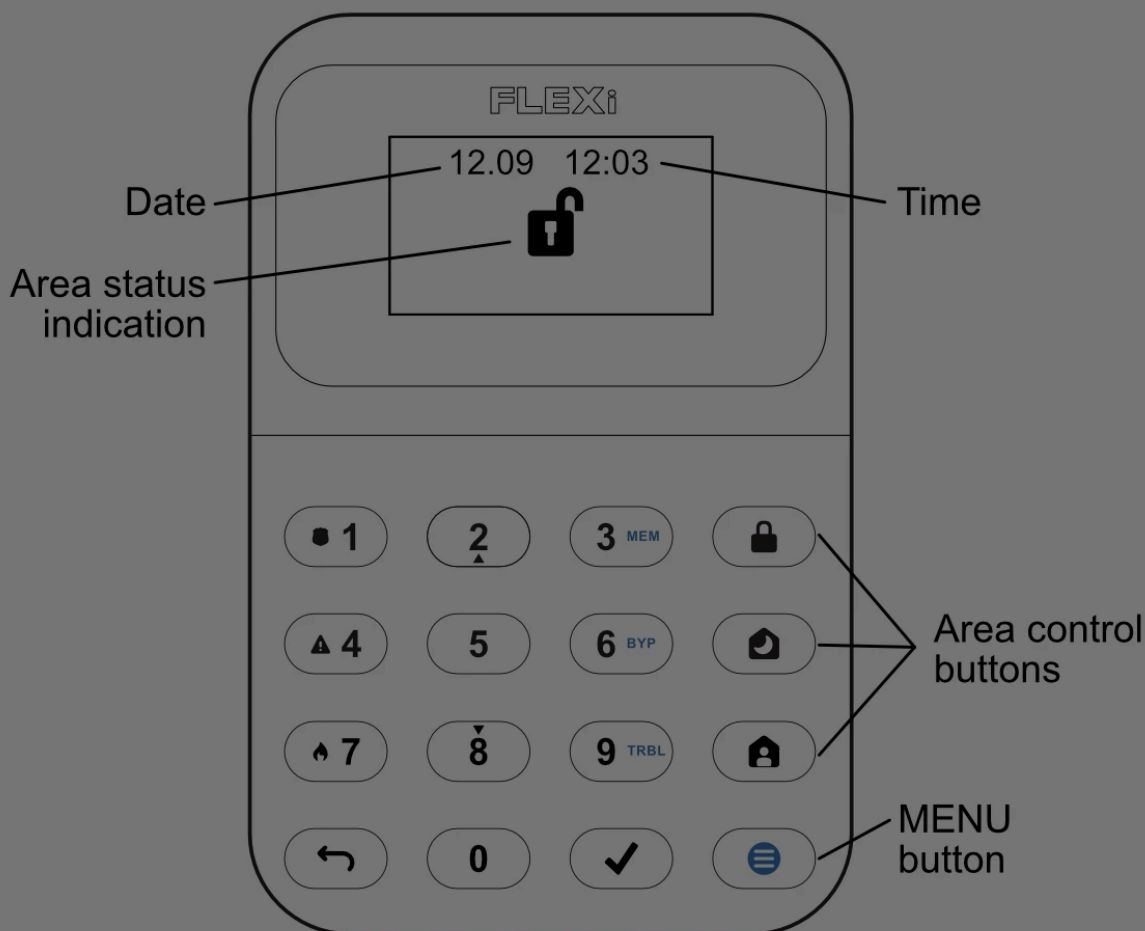

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Accept


Reject




## 2. Alarm system arming / disarming

### 2.1 Alarm system ARM

1. Make sure all zones are not violated.
2. Press the  button.
3. Enter User code.
4. Select the button of area to be activated.
5. Press  button.
6. Exit the premises within time delayed.

When the system is armed, the  icon will light up.

### 2.2 Alarm system DISARM

1. Enter User code.
2. Press the button of particular area you wish to disarm.
3. Press  button.

When the alarm is disarmed the  icon must be illuminated.

### 2.3 SLEEP mode activation

(Premises perimeter is secured. Movement inside is allowed. If you open the entrance door, the alarm will actuate immediately):

1. Press  button

#### Cookie consent



We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics




## 2.4 STAY mode activation

(Premises perimeter is secured. Movement inside is allowed. Any opening of entrance door enables time delay during which you have to disarm the alarm):

1. Press  button.
2. Enter User code.
3. Press the button of area to be activated.
4. Press  button.
5. STAY mode will turn on immediately, without exit delay.

The  icon will illuminate when STAY mode is on.

### NOTE

For area status changing into the opposite one it is sufficient to enter User code and select the preferred area. To delete symbols or command entered, press button .

## 3. Emergency buttons

### To send emergency message to your security service

- **Police** – hold **1** button pressed for 3 sec.
- **Medical Aid** – hold **4** button pressed for 3 sec.
- **Fire Service** – hold **7** button pressed for 3 sec.


## 4. Illumination brightness and indication sound

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics




3. Press  to save the new value.

### **The brightness of the LCD display**

4. Press  button, then **5 2**.


5. Select the preferred illumination brightness of zone indication using **2** and **8** buttons.

6. Press  to save the new value.


### **Keypad keystroke volume**

7. Press  button, then **5 1**.

8. Select the preferred sound indication level using **2** and **8** buttons.

9. Press  to save the new value.

#### **NOTE**

Turn off keypad lighting in standby mode. Pressing  and then press **5 4**. Switch the keypad indicator backlight status in standby mode by pressing **1** (backlight on) or **2**

(backlight off). Press  to save the new value.

## **5. Entering or changing / User or Master codes**

### **5.1 To enter a new or change the existing User code**



#### **Cookie consent**

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

 Google Analytics

**NOTE**

Sequence number of **Master** code - **01**.

4. Enter a new User code twice.
5. Press the sequence numbers of areas which should be controlled by User.
6. Press  button. Press the  button to exit.

## 6. Fire (smoke) detector reset

### 6.1 To reset fire (smoke) detectors

- Hold button  pressed for 3 seconds.

**NOTE**

Fire (smoke) detectors do not reset automatically after fire emergency detection. They can be reset only manually.

## 7. Temporary zone monitoring deactivation (BYPASS function)

### 7.1 BYPASS function activation

1. Press  button, then **6**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics








Repeat the same actions as in deactivation of particular zone monitoring.

## 8. Deleting User codes

### 8.1 To delete User code

1. Press  button, then **0**.
2. Enter **Master** code.
3. Enter User's double-digit sequence number, e.g., **02**.
4. Press  keypad button. A sound signal will be heard.
5. Press  button to exit.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



## 9. Graphic symbols















Symbol	Description	Symbol	Description
	Control panel not connected		Fire loop trouble
	Partition 1 Armed		Network trouble list
	Partition 4 Disarmed		CMS 1 (2) trouble
	Partition 2 Stay		Cloud trouble
	Partition 3 Sleep		SIM card trouble
	MENU button		SIM card password trouble
	ENTER function button		SIM card network trouble
	Partition		WiFi trouble

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



Symbol	Description	Symbol	Description
	Fire		SIM card 2 trouble
	User code		LAN trouble
	User		Wireless low battery
	Entry/Exit		Power trouble
	Zone open		Bell trouble
	Bypass		Tamper trouble
	Memory		Antimasking trouble

**Cookie consent**

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics





Symbol	Description	Symbol	Description
	AC power trouble		Settings
	Battery trouble		Volume
	AUX overcurrent		LCD brightness
	Time not set		Keypad brightness
	Bell overcurrent		Standby light O-On / I-Off
	Bell missing		Info

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics

