


KEYPADS

FLEXi / Keypad SK-LCD TouchPad – Brief User Guide

1. Keypad overview

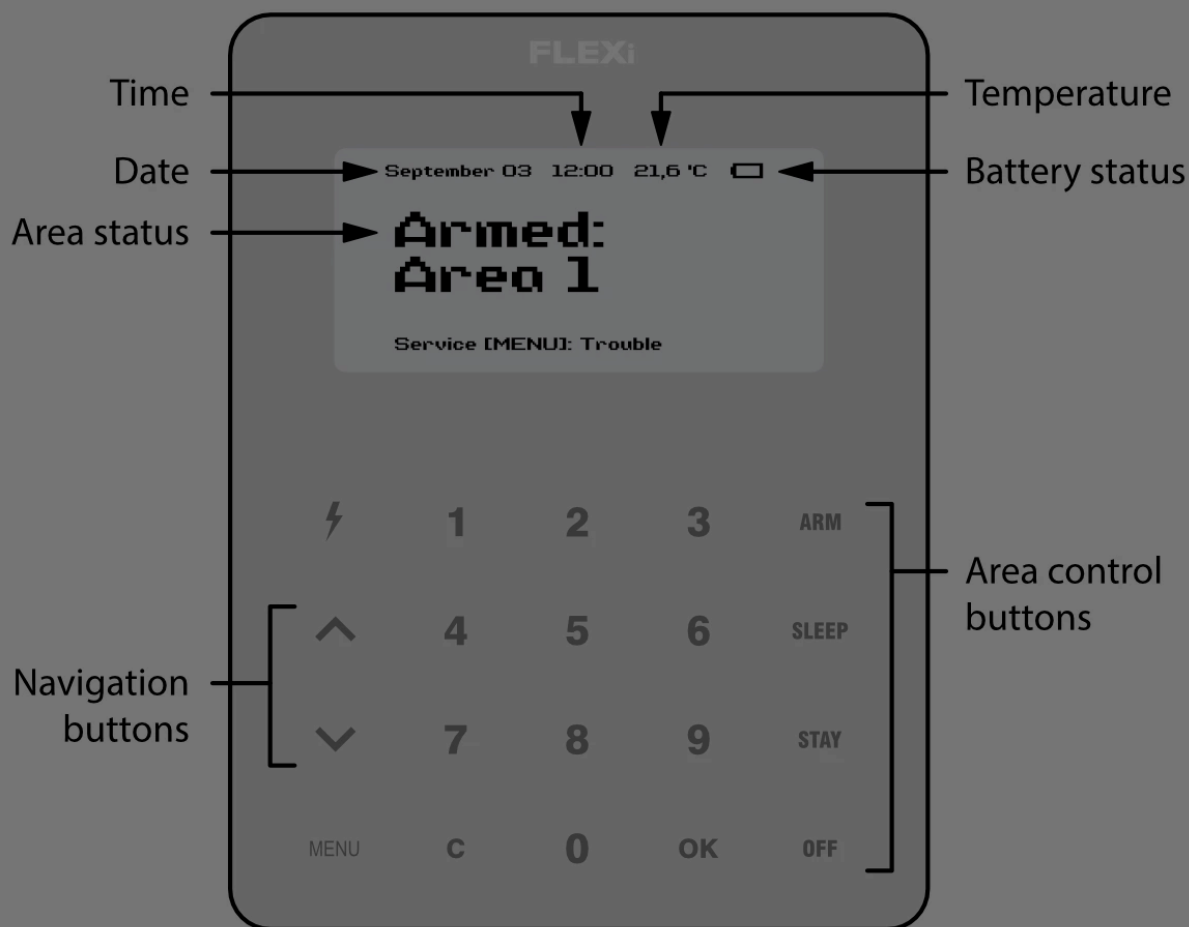

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

Accept

Reject



2. Alarm system arming / disarming

2.1 Alarm system ARM

Make sure all areas are not damaged.

1. Press **ARM** button.
2. Enter **[User Code]**.
3. If the system has only one partition, skip steps 4 and 5.
4. Press the buttons for the areas you want to control.
5. Confirm your selection by pressing the **OK** button.
6. Exit the premises within the **Exit Delay** time.

During the **Exit Delay** countdown, the time for the exit will be displayed on the keypad, and the text will appear on the keypad when the arming mode is activated: **Armed: Area**.

2.2 Alarm system DISARM

1. Press **OFF** button.
2. Enter **[User Code]**.
3. If the system has only one partition, skip steps 4 and 5.
4. Press the buttons for the areas you want to control.
5. Confirm your selection by pressing the **OK** button.

When the alarm is disarmed, the text **Disarmed: Area** will appear on the keypad display.

NOTE

For area status changing into the opposite one it is sufficient to enter User code and select the

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



2. Confirm your selection by pressing the **OK** button.

2.4 STAY mode activation

(Premises perimeter is secured. Movement inside is allowed. Any opening of entrance door enables time delay during which you have to disarm the alarm):

1. Enter **[User Code]**.
2. Confirm your selection by pressing the **OK** button.

3. Emergency buttons

To send emergency message to your security service:

- **Panic** – hold **1** button pressed for 3 sec.
- **Medical Aid** – hold **4** button pressed for 3 sec.
- **Fire Service** – hold **7** button pressed for 3 sec.

4. Illumination brightness and indication sound adjustment

To adjust keypad illumination brightness and indication sound:

1. Press **5** button.

5. Entering or changing User or Master codes

To enter a new or change the existing User code:

1. Enter **[Administrator Code]** (default code: 123456).

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics

 **NOTE**

Two-wire fire detectors do not reset automatically after fire emergency detection. They can be reset only manually.

7. Temporary zone monitoring deactivation (BYPASS function)

BYPASS function activation:

1. Press **3** button.

BYPASS function deactivation:

Repeat the same actions as in deactivation of particular zone monitoring.

8. Deleting User codes

To delete User code:

1. Enter [**Administrator Code**] (default code: 123456).

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics

