

COMUNICADORES

Interlogix NX-4V2 / NX-6V2 con GT/GT+/GET configuración rápida



GT product image

GT



GT+ product image

GT+



GET product image

GET

Pasos breves de cableado y programación para conectar el comunicador GT/GT+/GET a los paneles Interlogix NX-4V2, Interlogix NX-6V2 usando KeyBus, y luego añadir el sistema a Protegus2. Use esto junto con los manuales completos para otros ajustes. (Las etiquetas de terminal pueden variar ligeramente entre GT/GT+/GET, pero las conexiones son las mismas.)



PRECAUCIÓN

La instalación y el servicio deben ser realizados solo por personal cualificado. Desconecte la alimentación antes de cablear. Los cambios no autorizados anulan la garantía.

1. Requisitos

1. Firmware GT/GT+/GET 1.21, SIM insertada, PIN deshabilitado, plan de datos activo.
2. Panel Interlogix NX-4V2 / NX-6V2 con acceso al teclado (código de instalador disponible).
3. Número de cuenta CMS si reporta a CMS.
4. Cuenta de empresa/instalador de Protegus2 y IMEI del comunicador.

2. Cableado


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

Accept

Reject

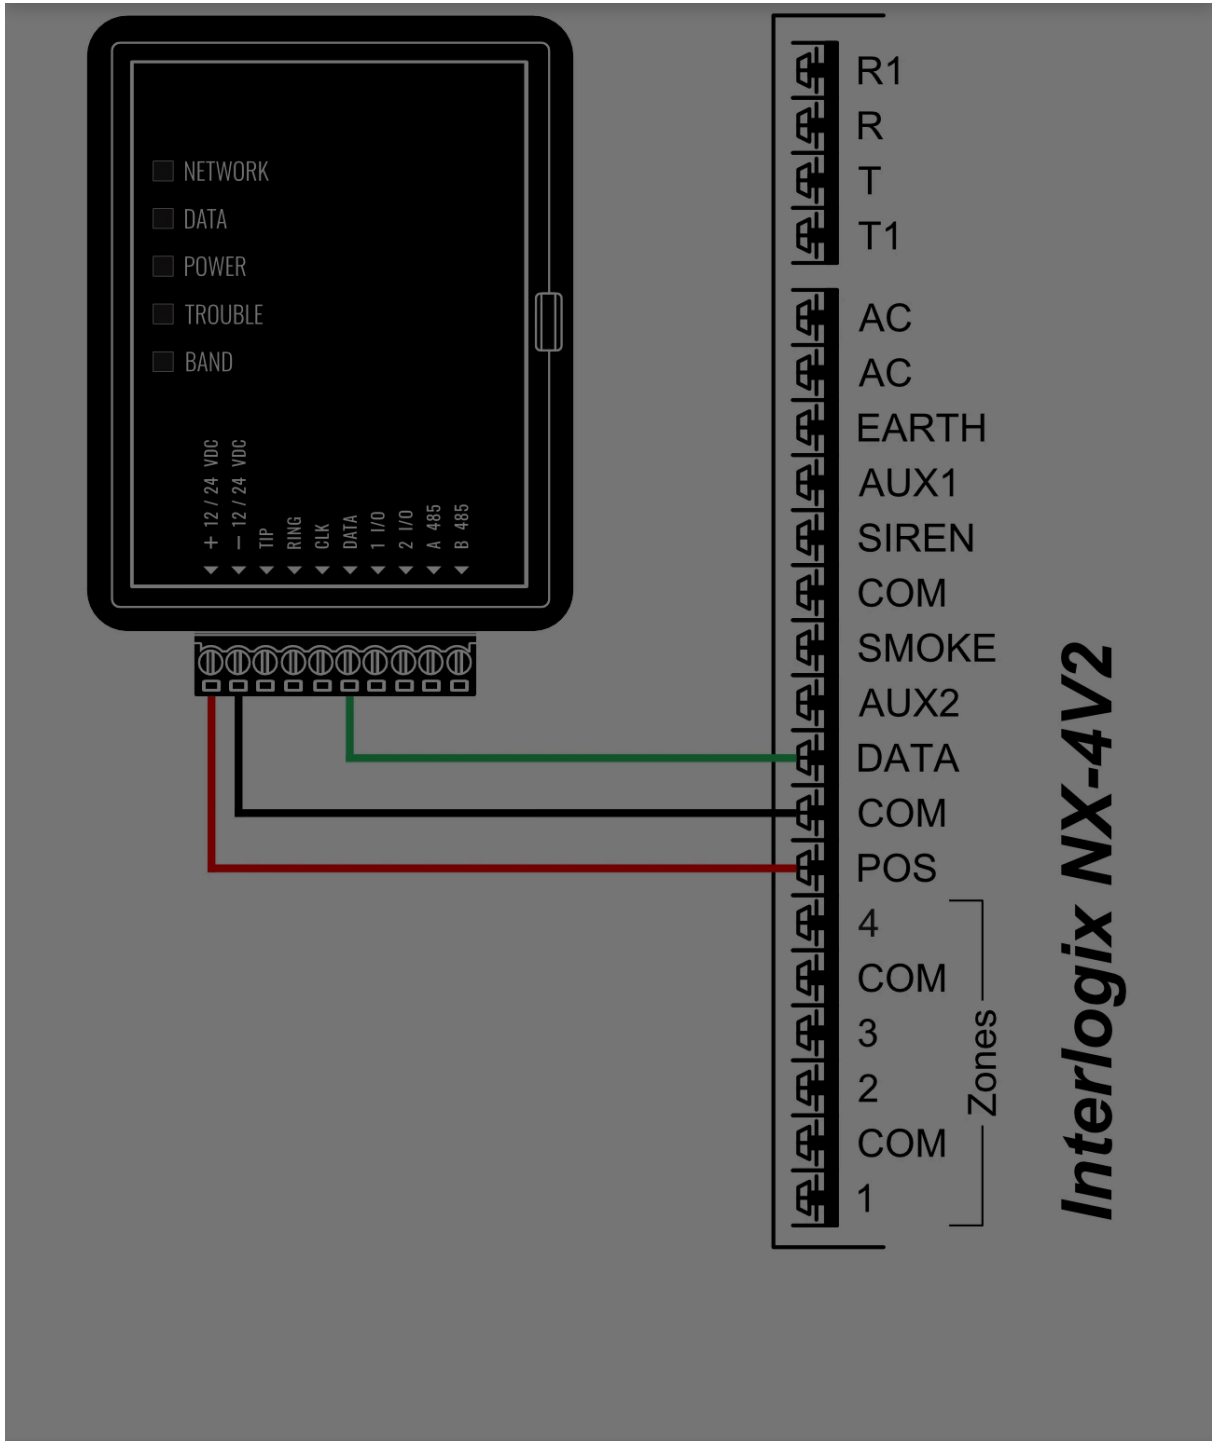


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



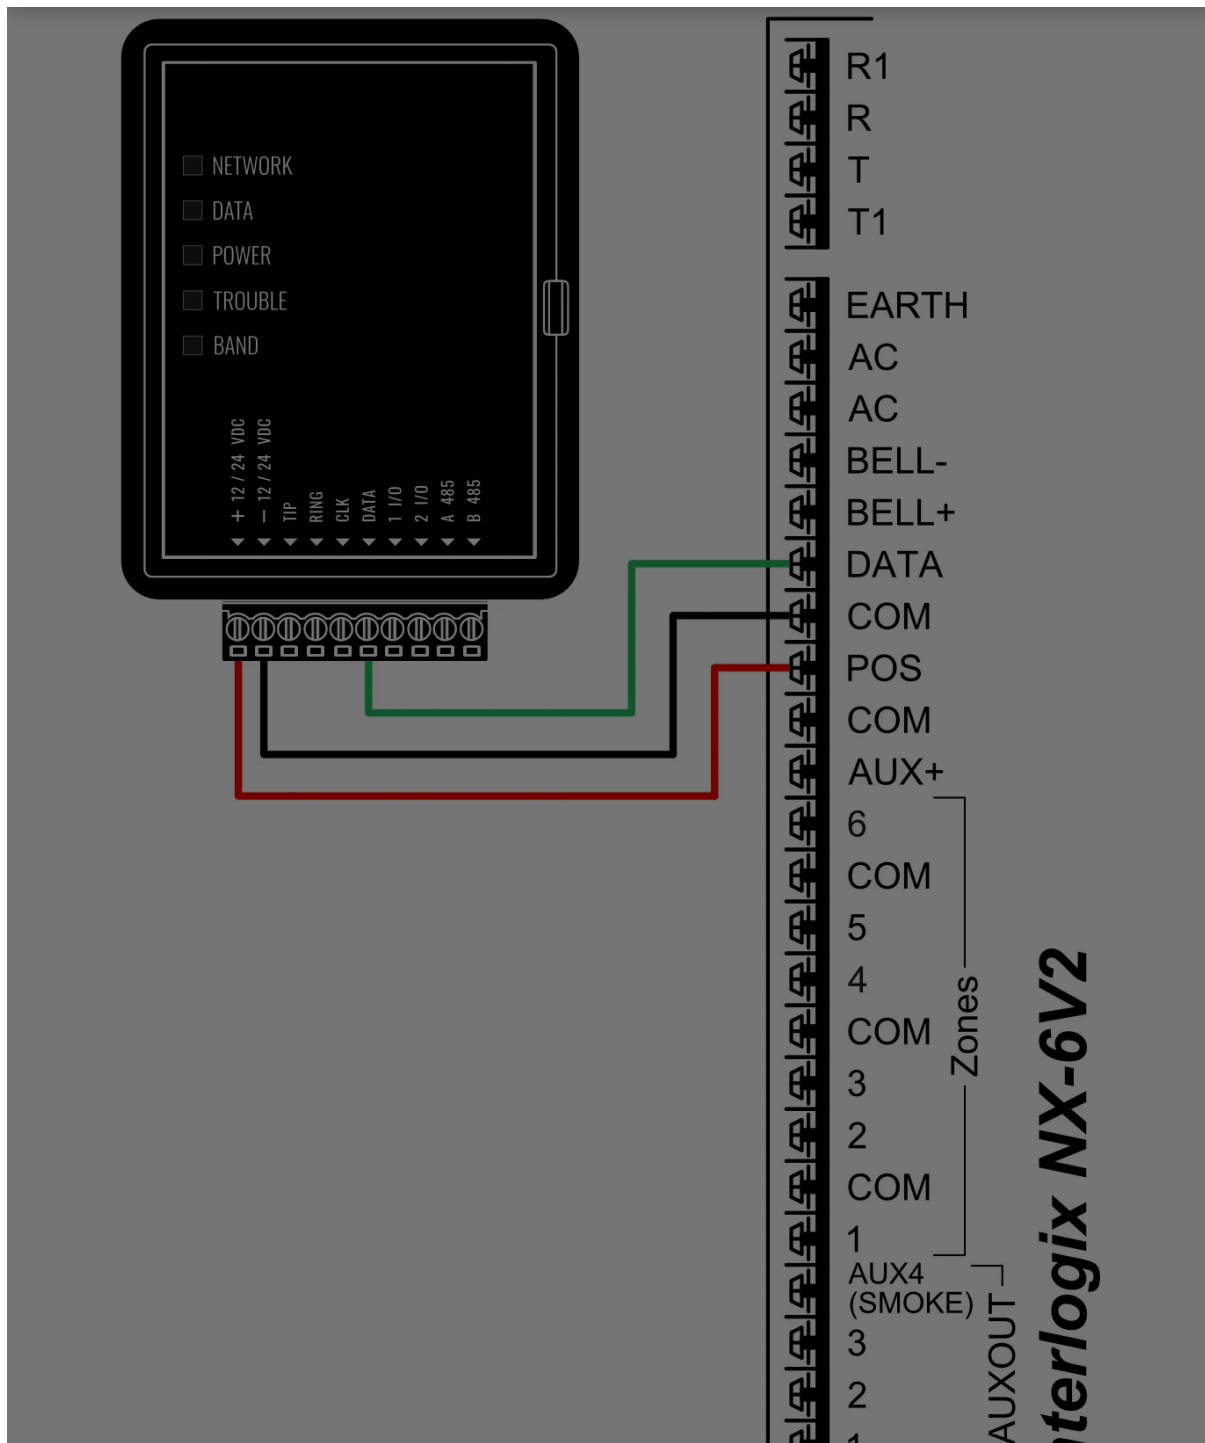

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics





Teclado LCD	Entrada de teclado	Descripción de la acción
System ready	*89713	Entrar en modo de programación
Enter device address	0#	Ir al menú principal de programación del panel
Enter location	4#	Ir al menú de conmutación "Phone1 events reported"
Loc#4 Seg#1	12345678*	Todas las opciones deben estar habilitadas. * para guardar y pasar al siguiente menú
Loc#4 Seg#2	12345678*	Todas las opciones deben estar habilitadas. * para guardar y volver atrás
Enter location	23#	Ir al menú "Partition features".
Loc#23 Seg#1	**	Pulse * dos veces para ir al menú de opciones de conmutación de la sección 3.
Loc#23 Seg#3	12345678*#	Segmento 3. Todas las opciones deben estar habilitadas, pulse * para guardar y luego # para guardar y volver al menú principal.
Enter location	37#	Ir al menú "Siren and system supervision".
Loc#37 Seg#1	**	Pulse * dos veces para ir al menú de opciones de conmutación de la sección 3.
Loc#37 Seg#3	12345678*	Segmento 3. Todas las opciones deben estar habilitadas, pulse * para guardar.
Loc#37 Seg#4	12345678*#	Segmento 4. Todas las opciones deben estar habilitadas, pulse * para guardar y luego # para guardar y volver al menú principal.
Enter location	EXIT EXIT	Pulse "EXIT" dos veces para salir del modo de programación.

4. Programación del panel de alarma Interlogix NX-4V2, Interlogix NX-6V2 mediante el teclado LCD

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




Teclado LED	Entrada de teclado	Descripción de la acción
LEDs Ready y Power encendidos fijos	*89713	Entrar en modo de programación
LED Service parpadea	0#	Ir al menú principal de programación del panel
LED Service parpadea, LED Armed fijo	4#	Ir al menú de conmutación "Phone1 events reported"
Todos los LEDs de zona encendidos	12345678*	Todas las opciones deben estar habilitadas. * para guardar y pasar al siguiente menú
Todos los LEDs de zona encendidos	12345678*	Todas las opciones deben estar habilitadas. * para guardar y volver atrás
LED Service parpadea, LED Armed fijo	23#	Ir al menú "Partition features and reporting selection".
LED Service parpadea, LED Ready fijo	**	Pulse * dos veces para ir al menú de opciones de conmutación de la sección 3.
LED Service parpadea, LED Ready fijo	12345678*#	Segmento 3. Todas las opciones deben estar habilitadas, pulse * para guardar y luego # para guardar y volver al menú principal.
LED Service parpadea, LED Armed fijo	37#	Ir al menú "Siren and system supervision".
LED Service parpadea, LED Ready fijo	**	Pulse * dos veces para ir al menú de opciones de conmutación de la sección 3.
LED Service parpadea, LED Ready fijo	12345678*	Segmento 3. Todas las opciones deben estar habilitadas, pulse * para guardar.
LED Service parpadea, LED Ready fijo	12345678*#	Segmento 4. Todas las opciones deben estar habilitadas, pulse * para guardar y luego # para guardar y volver al menú principal.
LED Service parpadea, LED Armed fijo	EXIT EXIT	Pulse "EXIT" dos veces para salir del modo de programación.

5. Añadir sistema a Protegus2

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

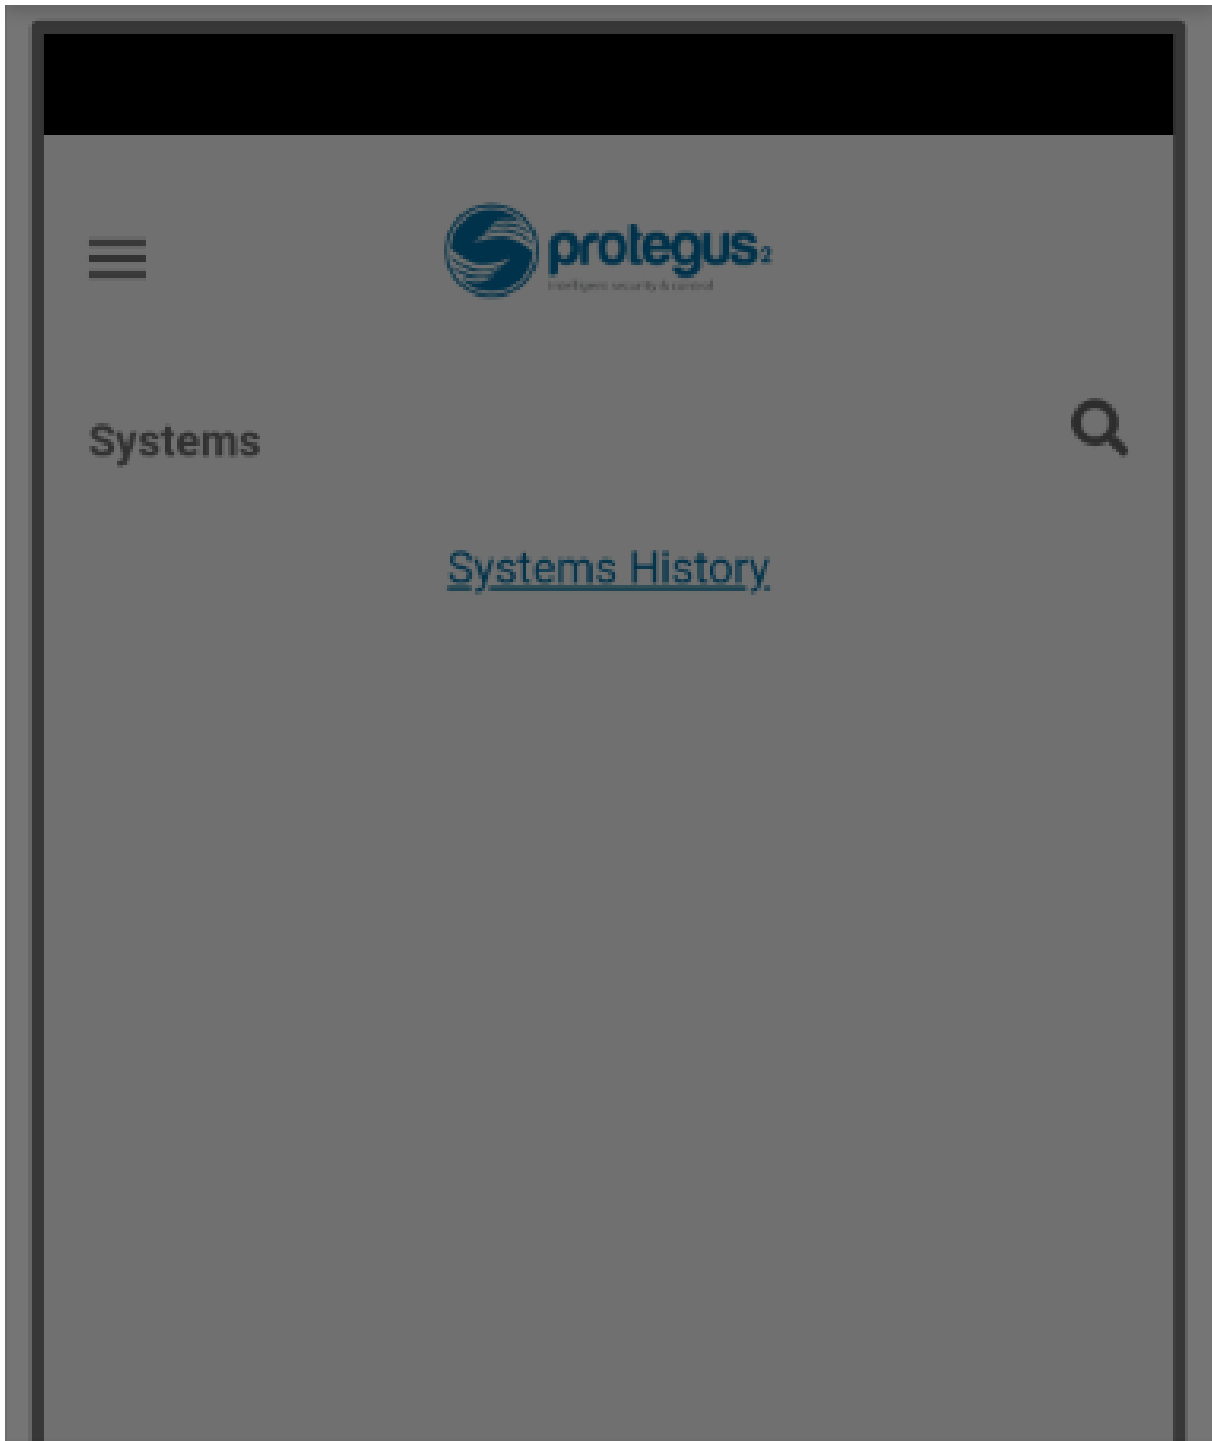

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Paso 2. Introduzca el **IMEI** del comunicador, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



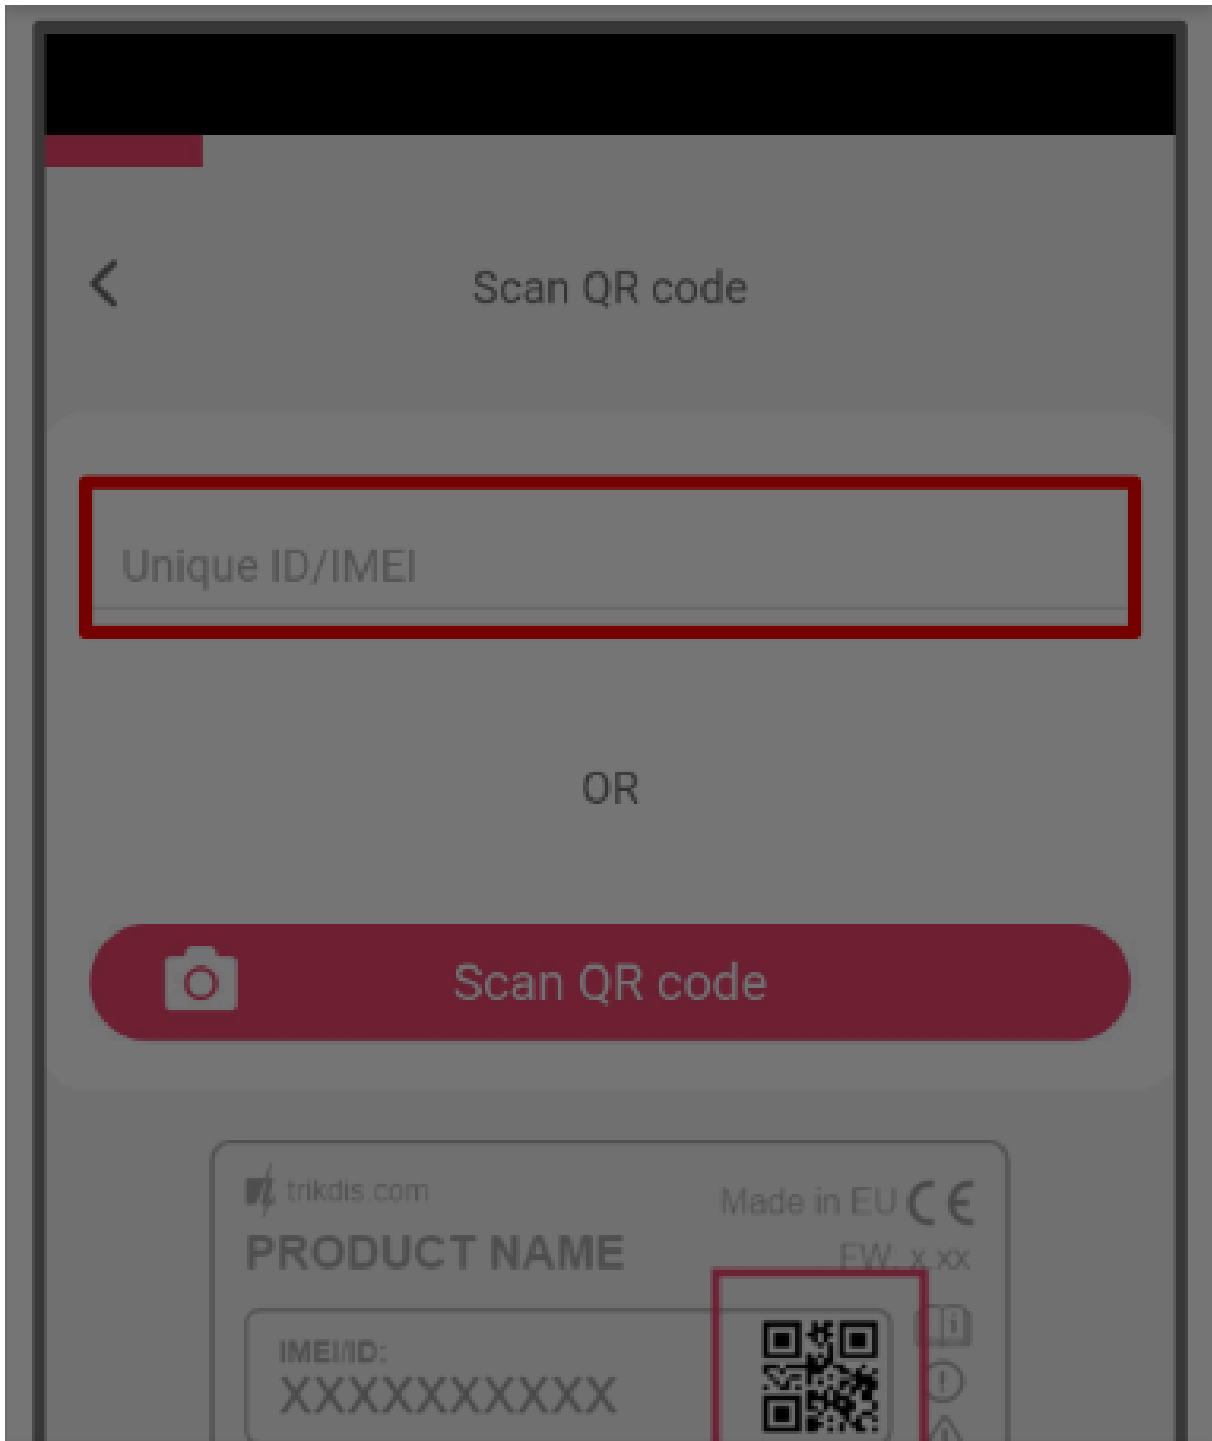


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



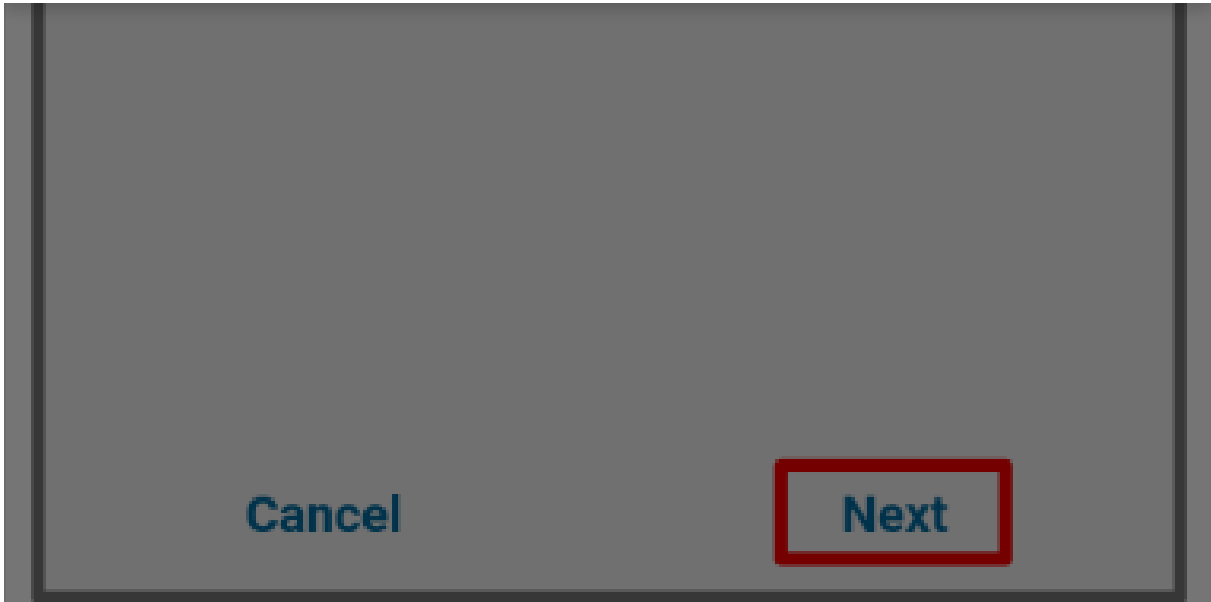


Paso 3. Seleccione la empresa de seguridad.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

 Google Analytics





Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cancel

Add only to Protegus2


Paso 4. Elija Interlogix.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



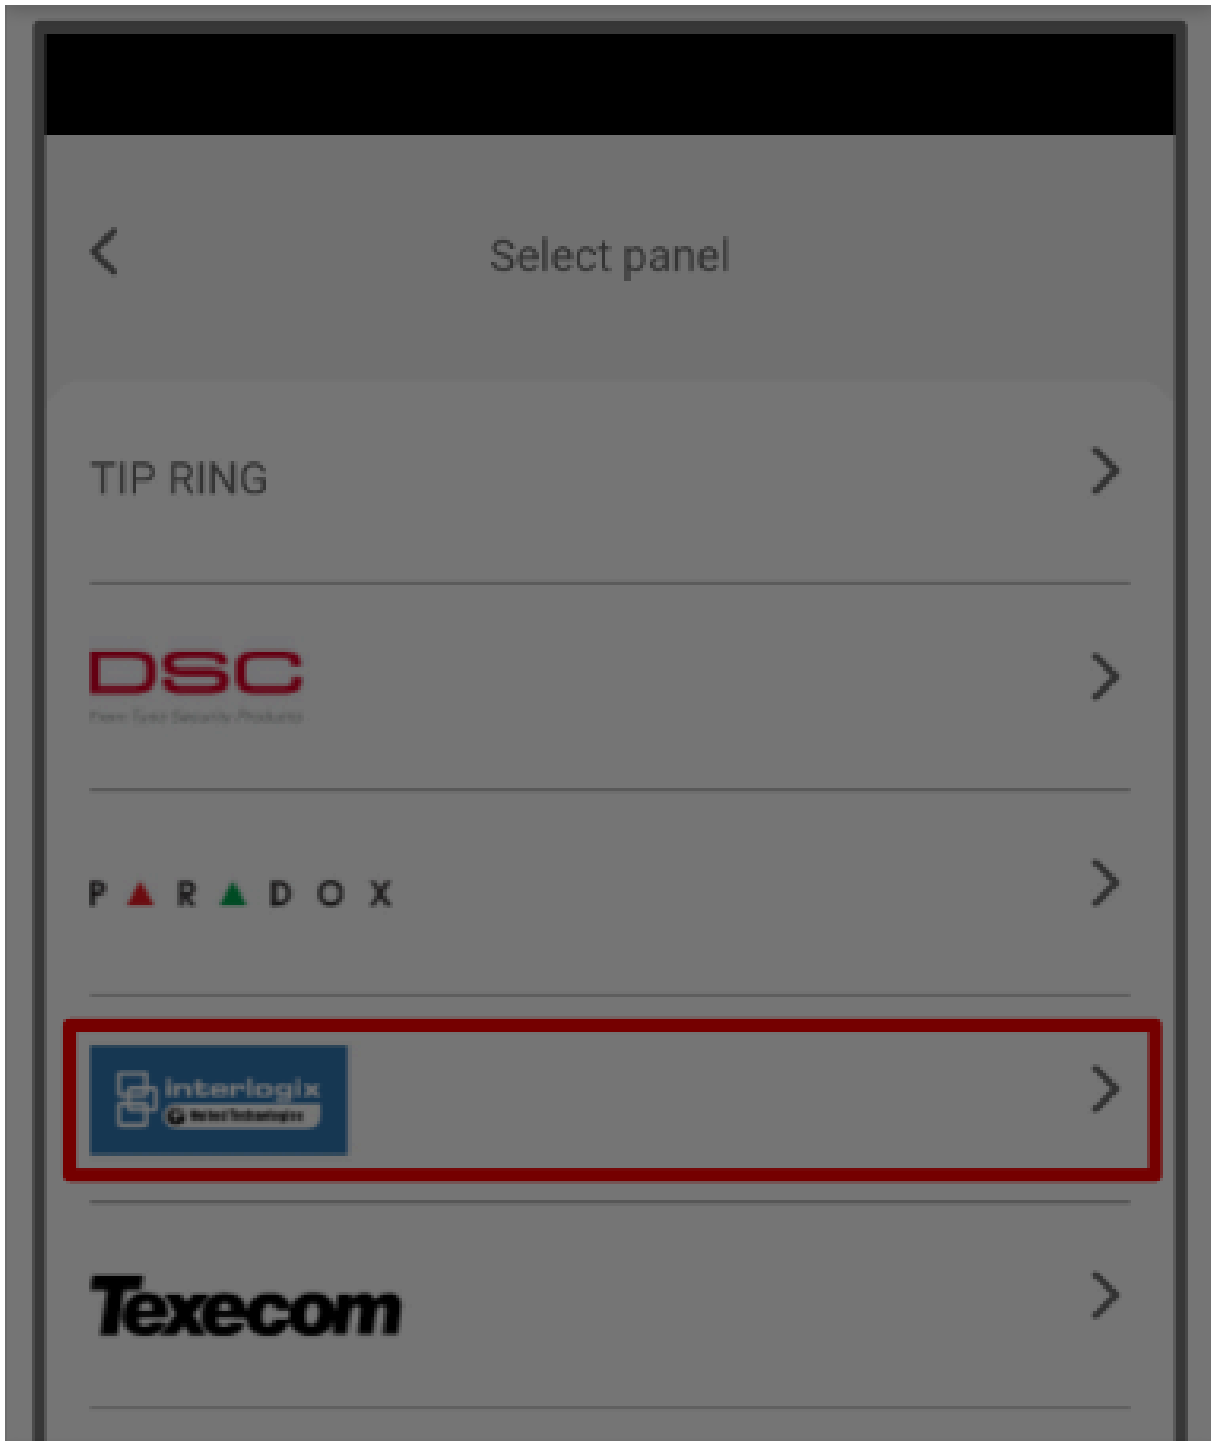

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cancel


Paso 5. Elija NX-4 (NX-6).

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



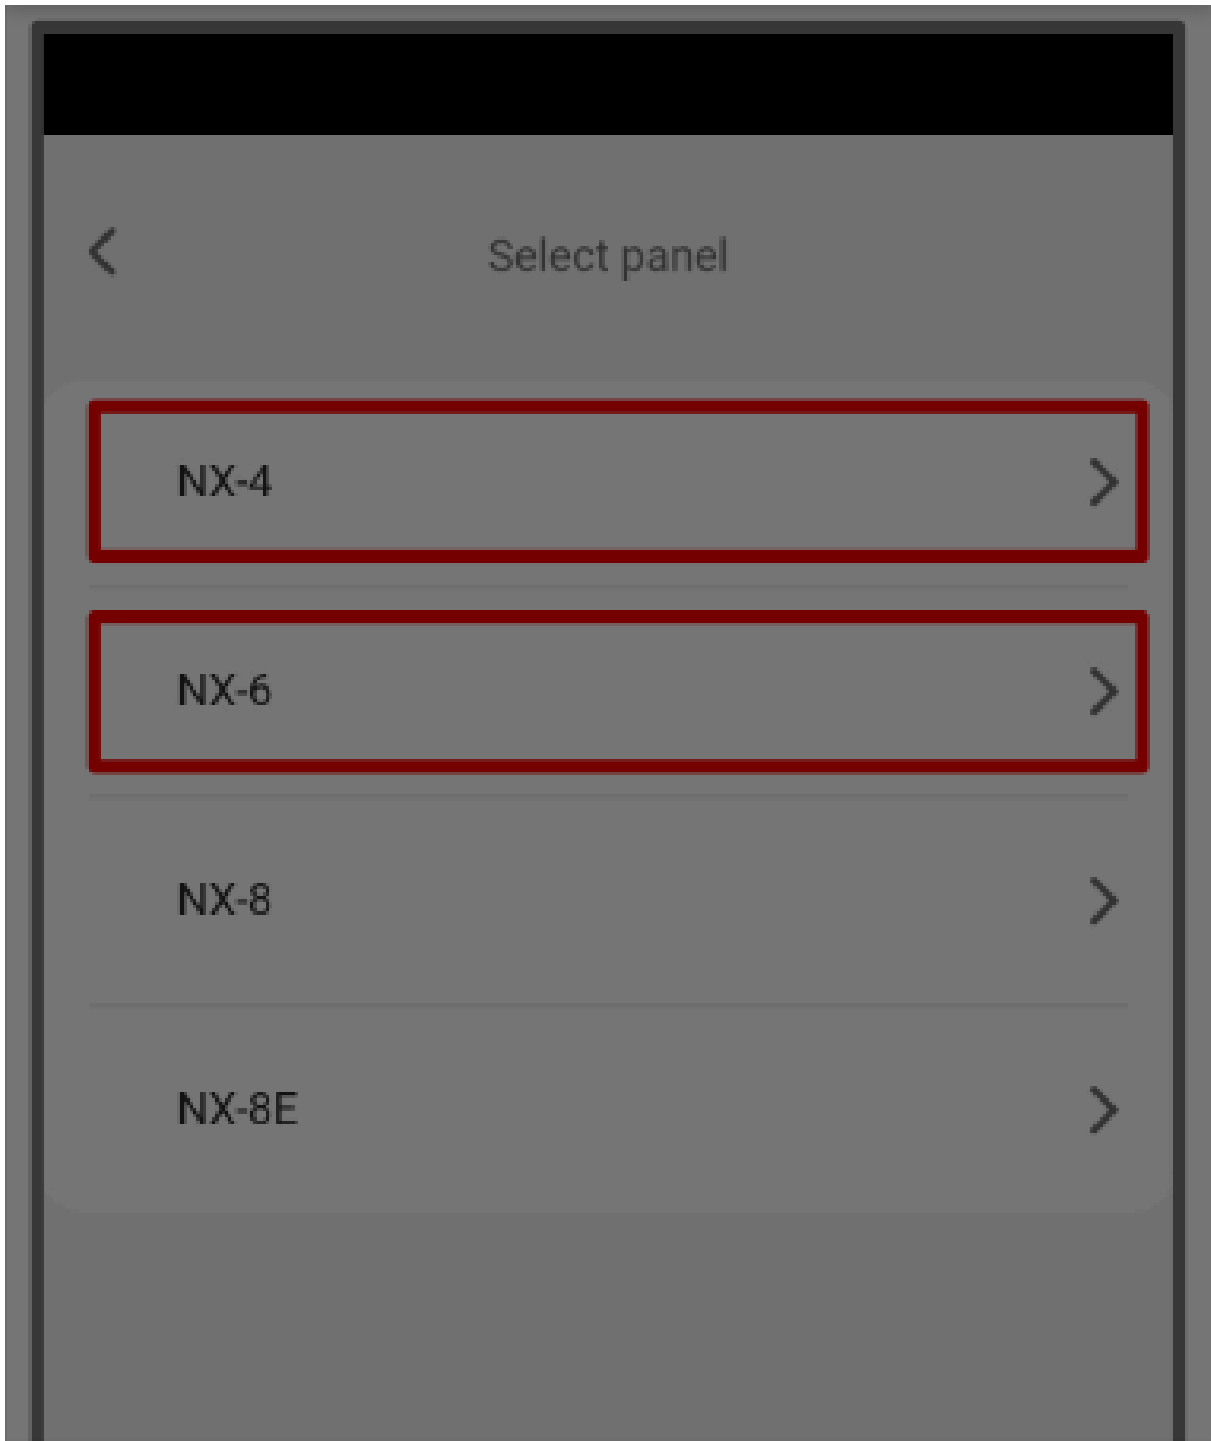

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Paso 6. Introduzca **Object ID** y **Module ID**, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




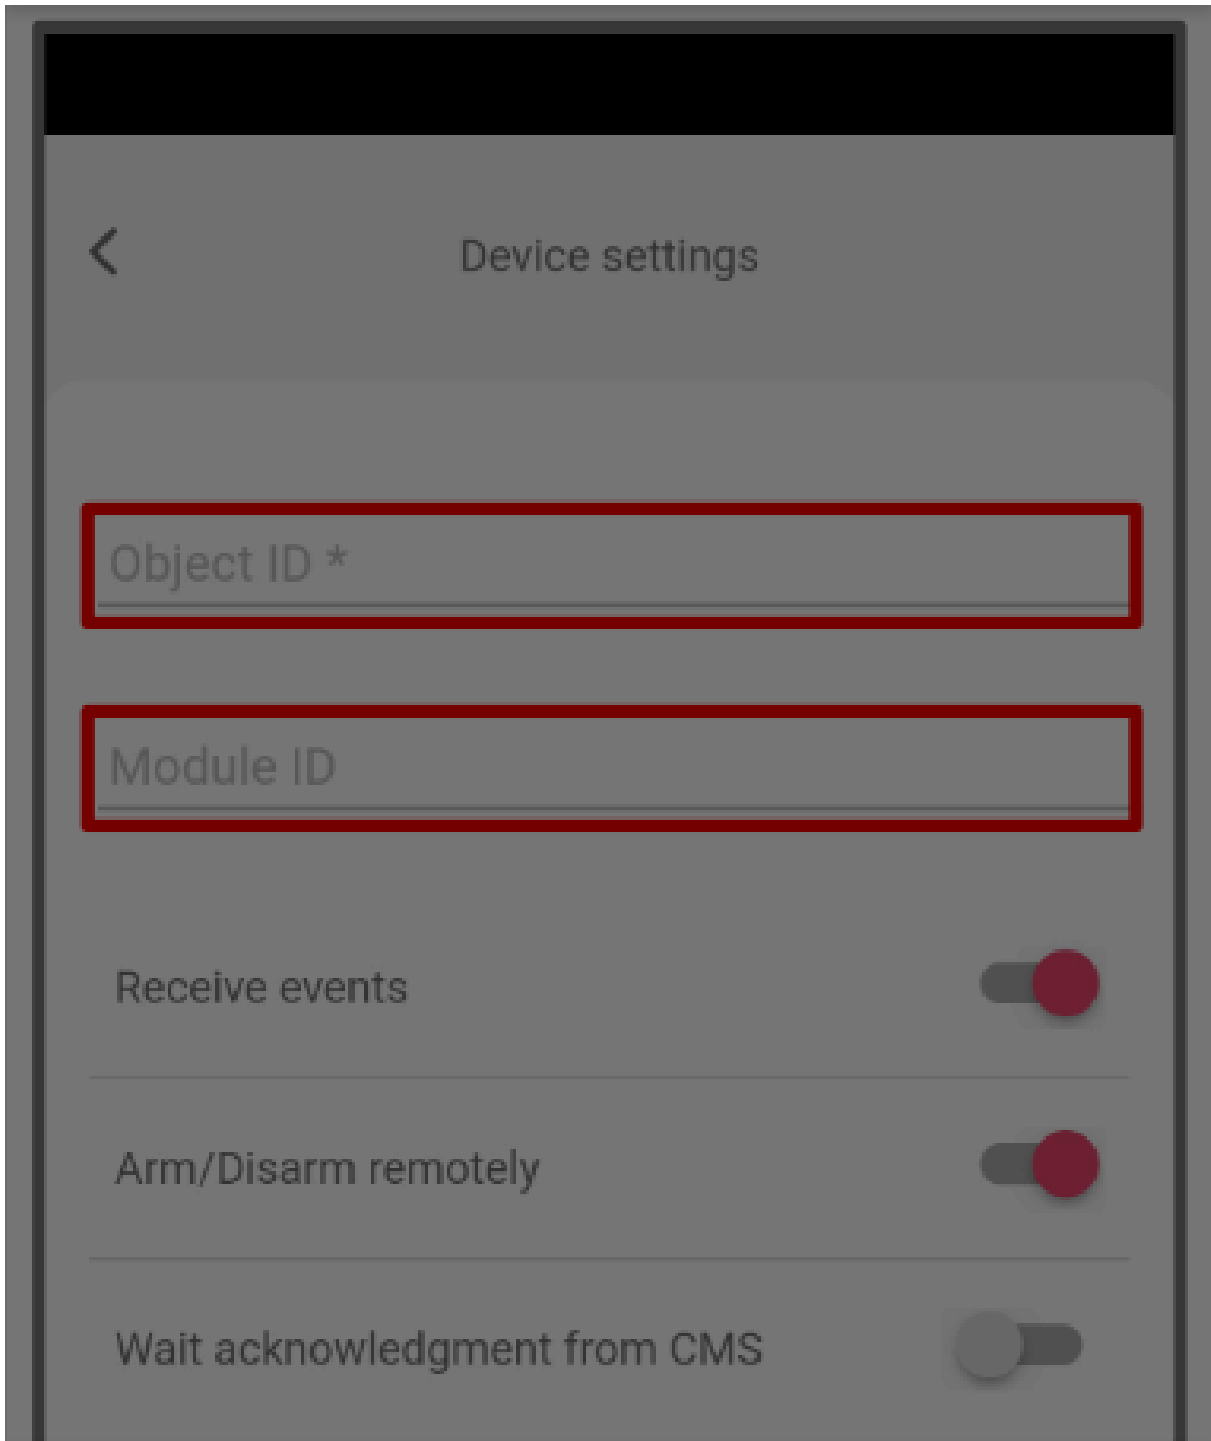

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

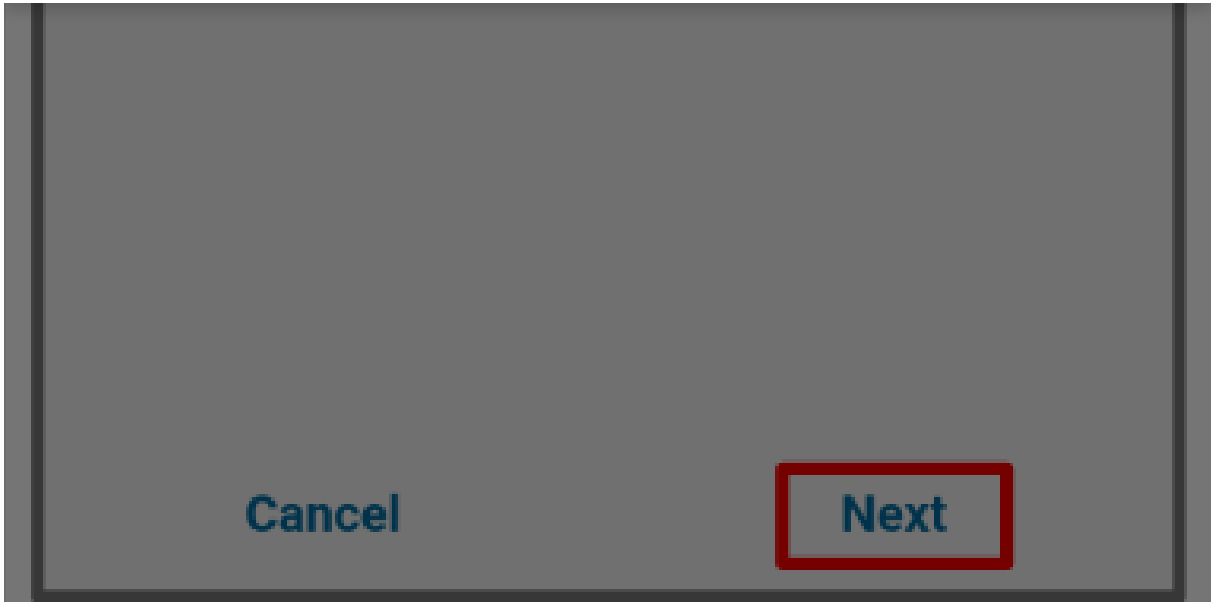


Paso 7. Espere mientras se escriben los datos.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



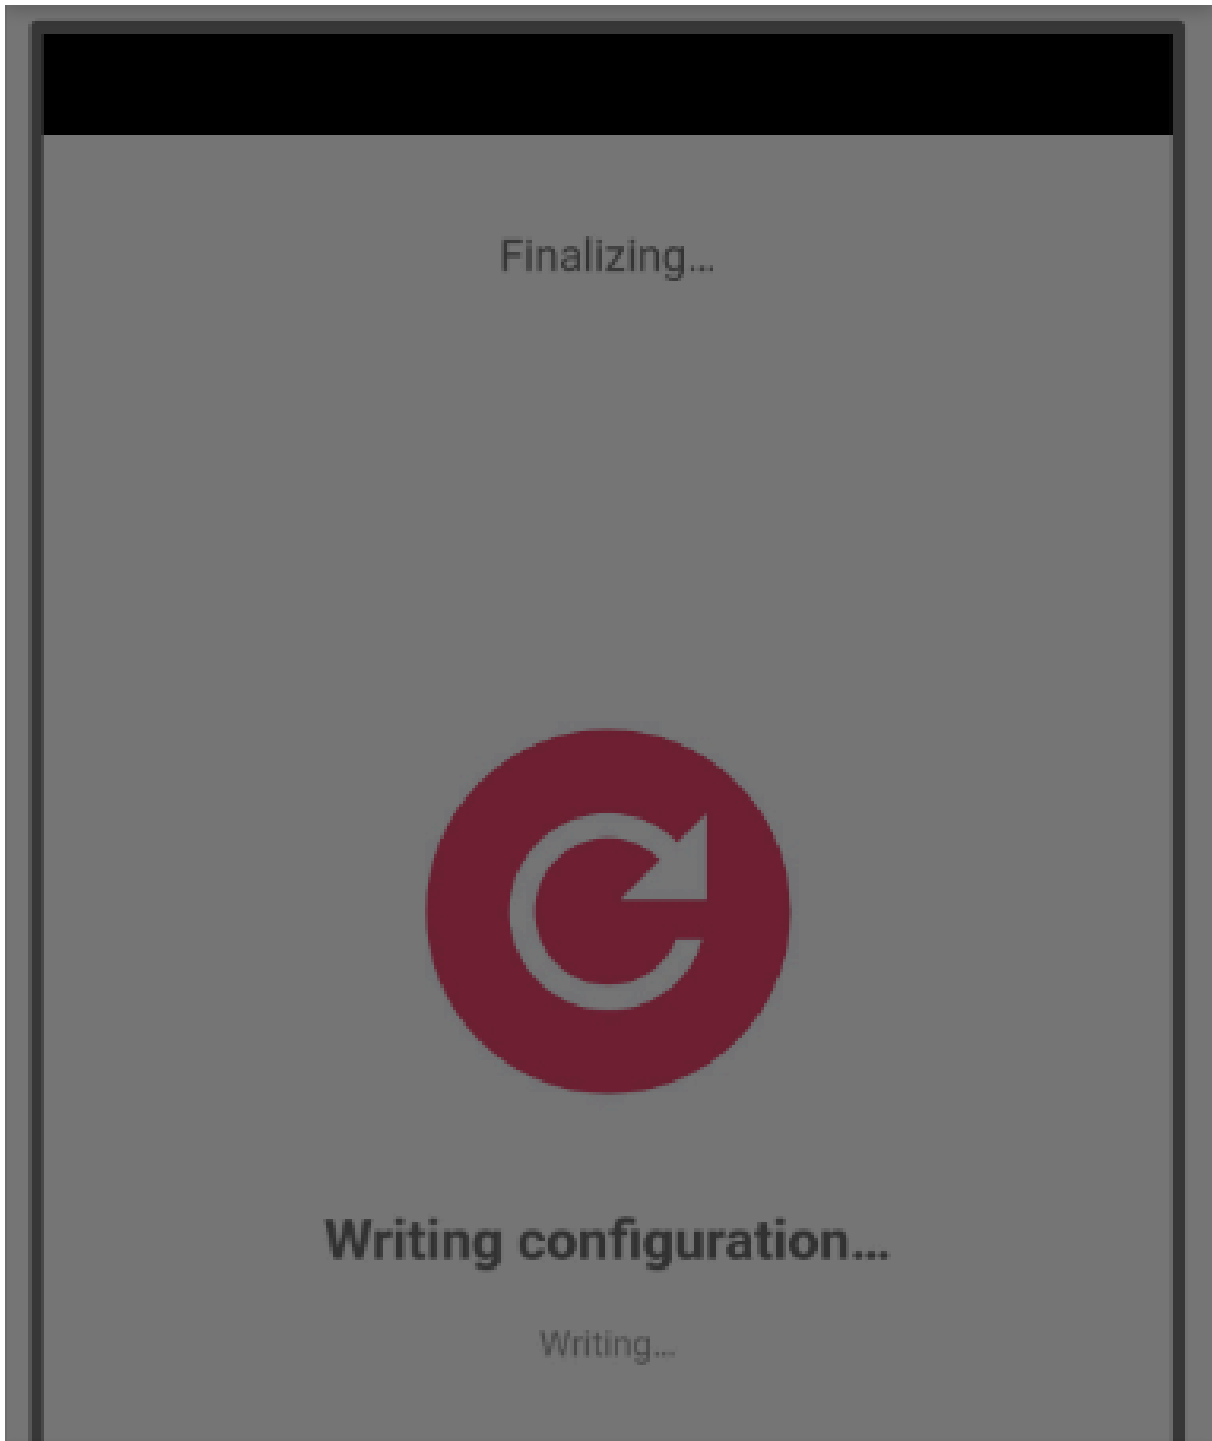

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Paso 8. Pulse **Agregar a Protegus2**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




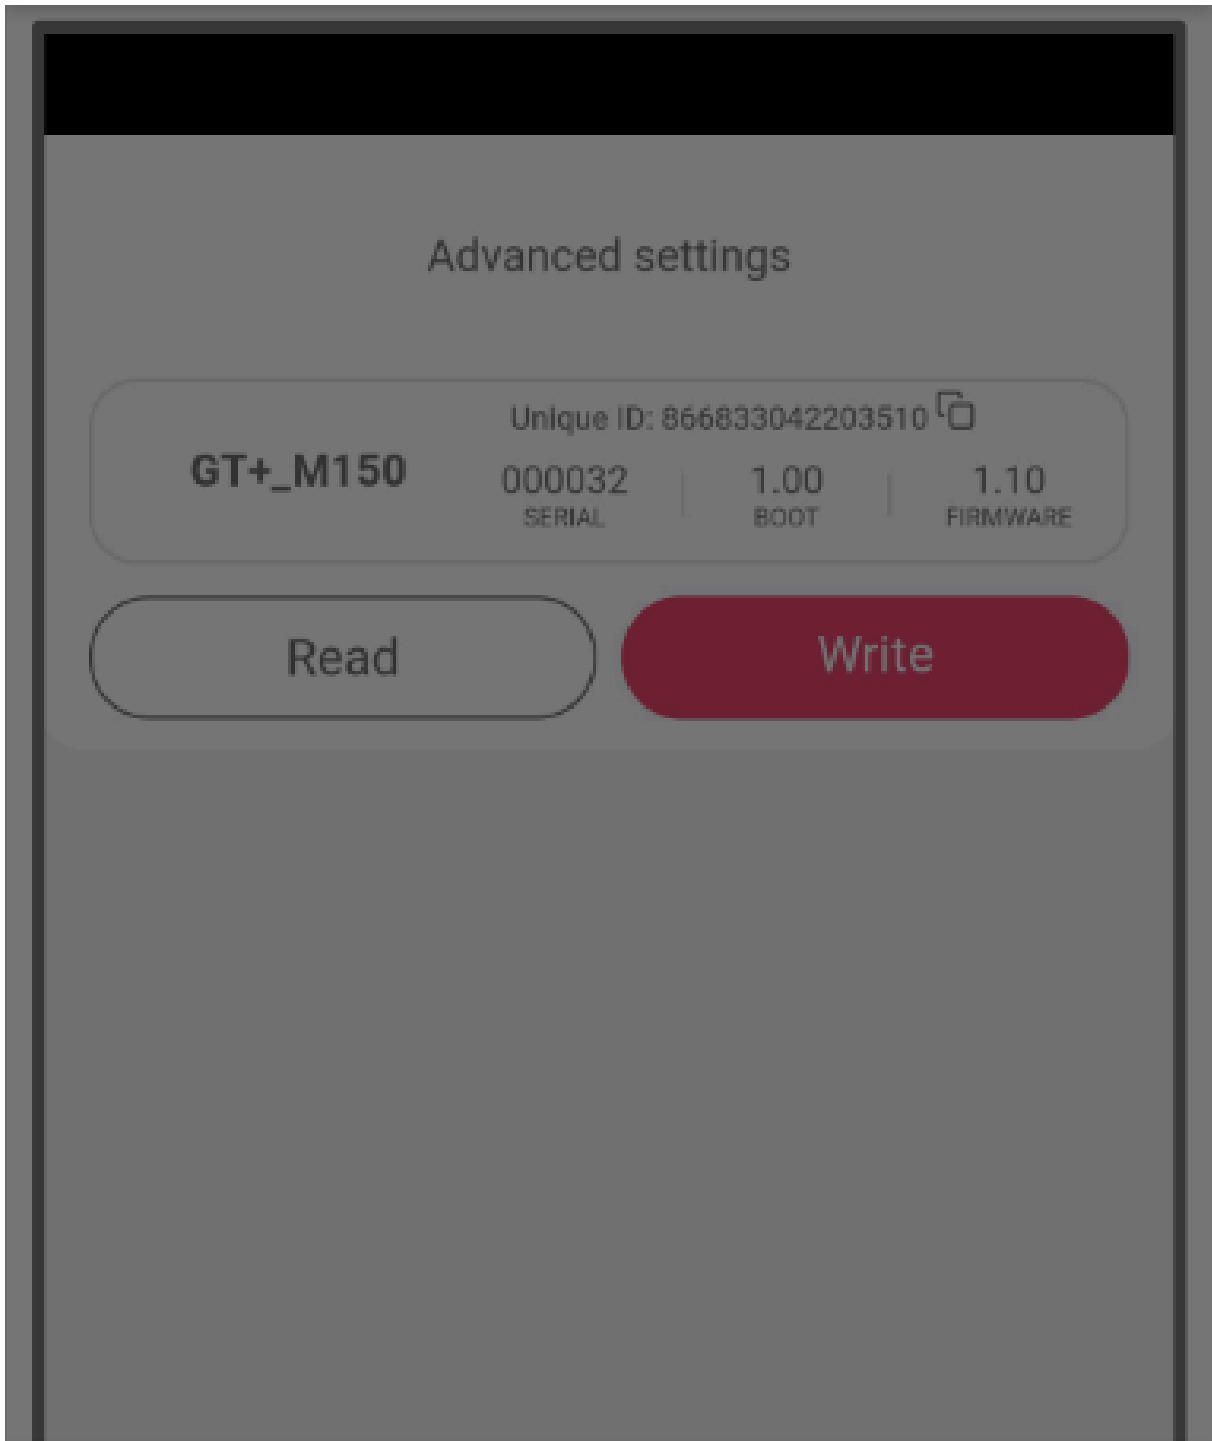

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

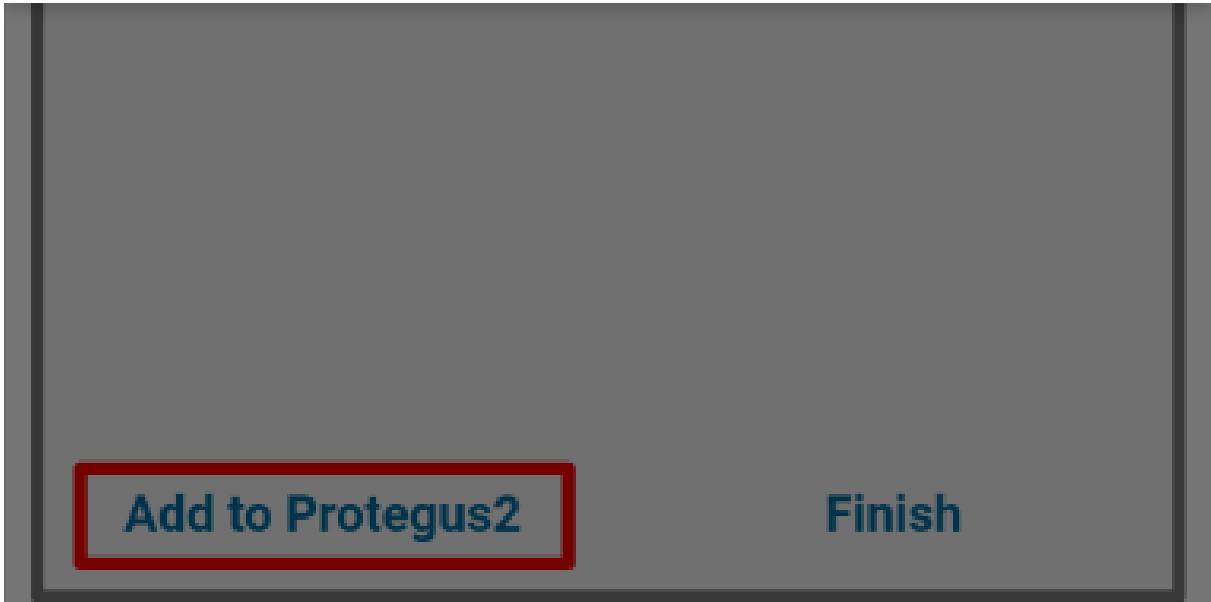


Paso 9. Introduzca el **Nombre** del sistema, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




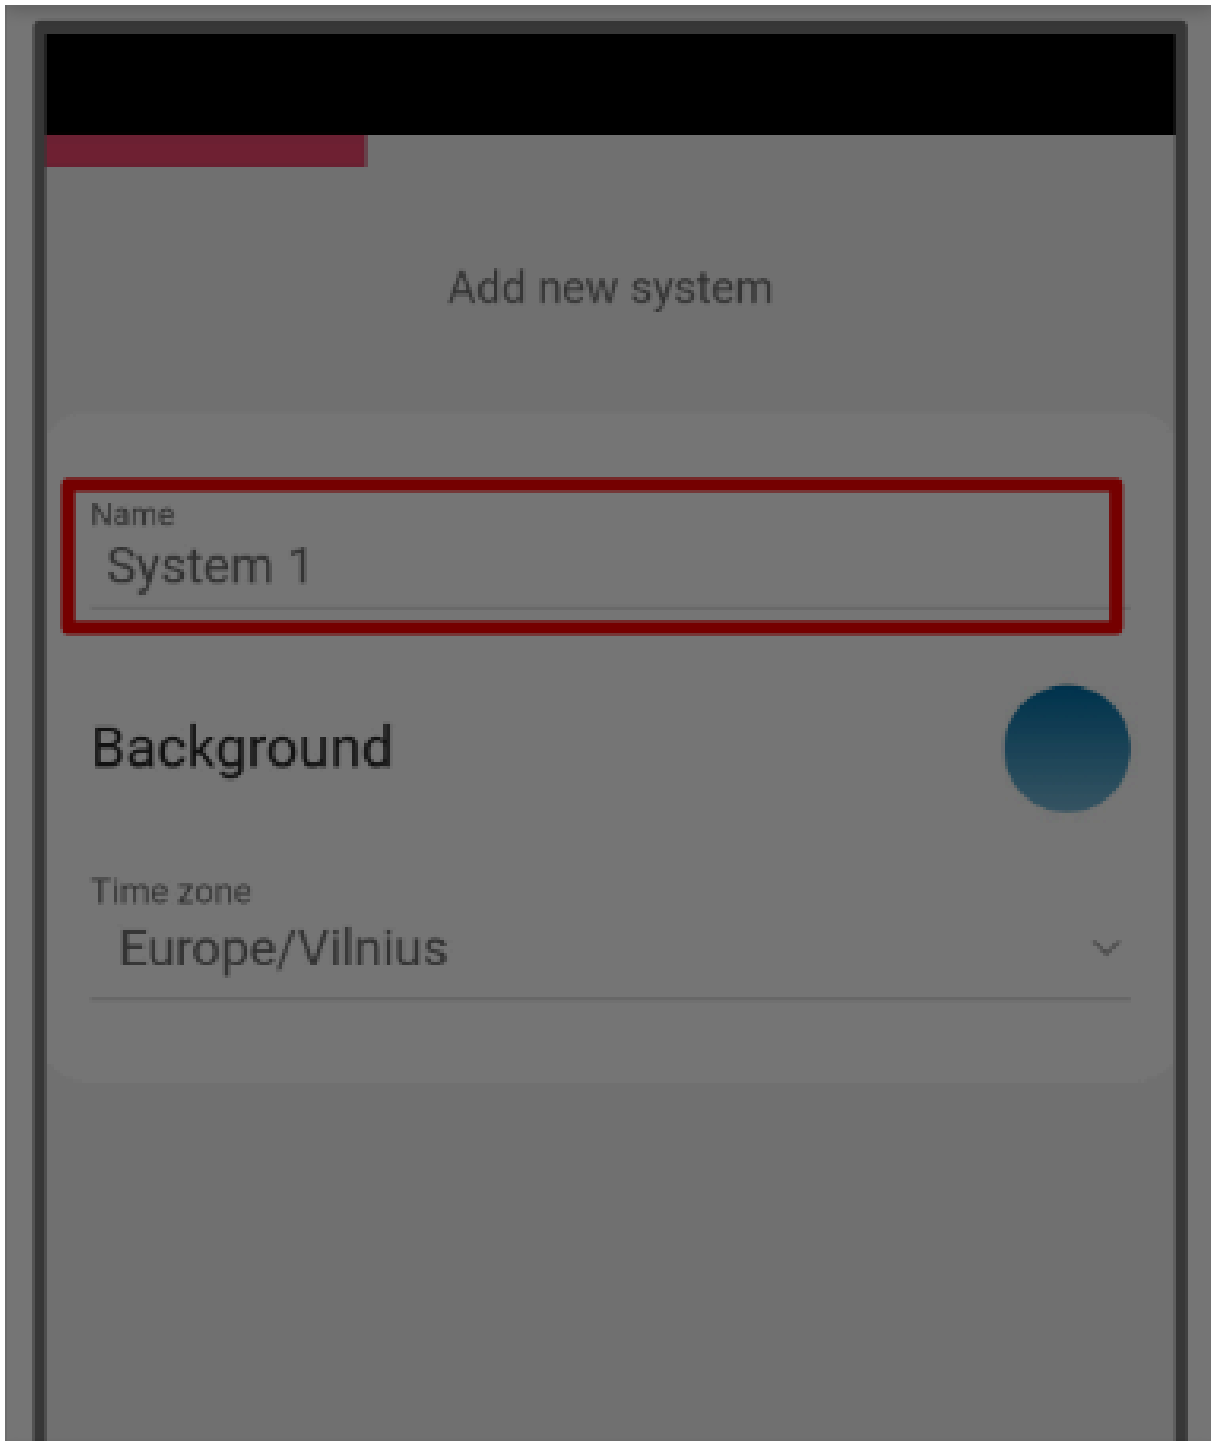

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

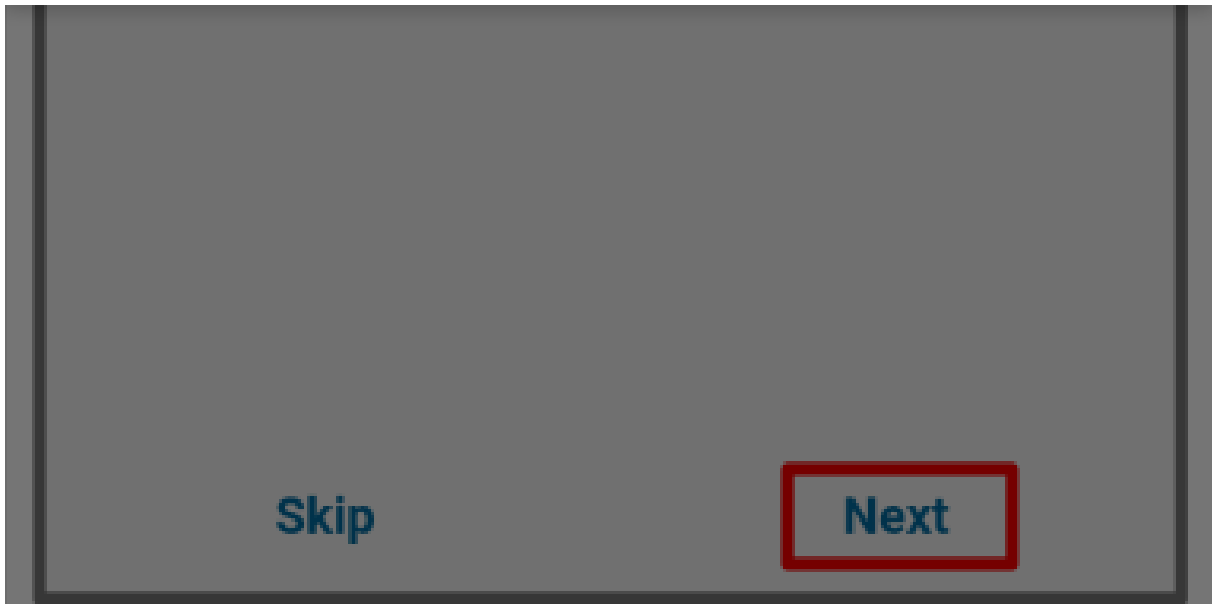


Paso 10. Pulse **Saltar**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



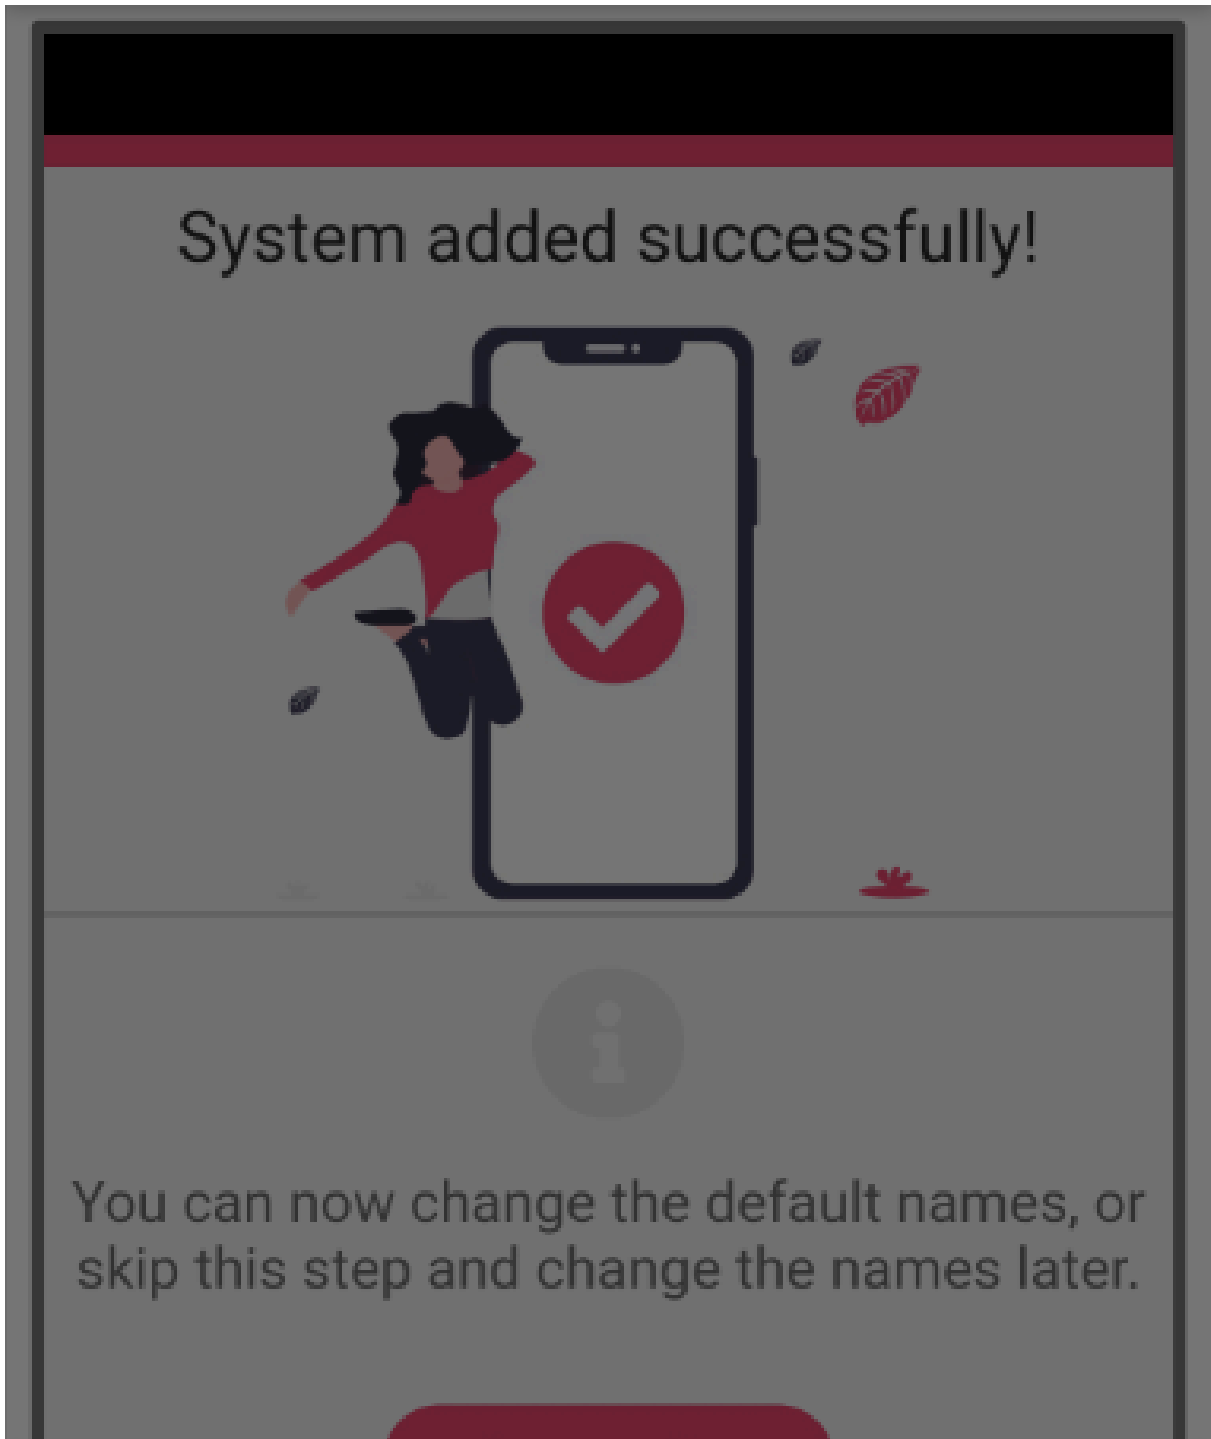


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

 Google Analytics






Paso 11. Pulse sobre el sistema.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



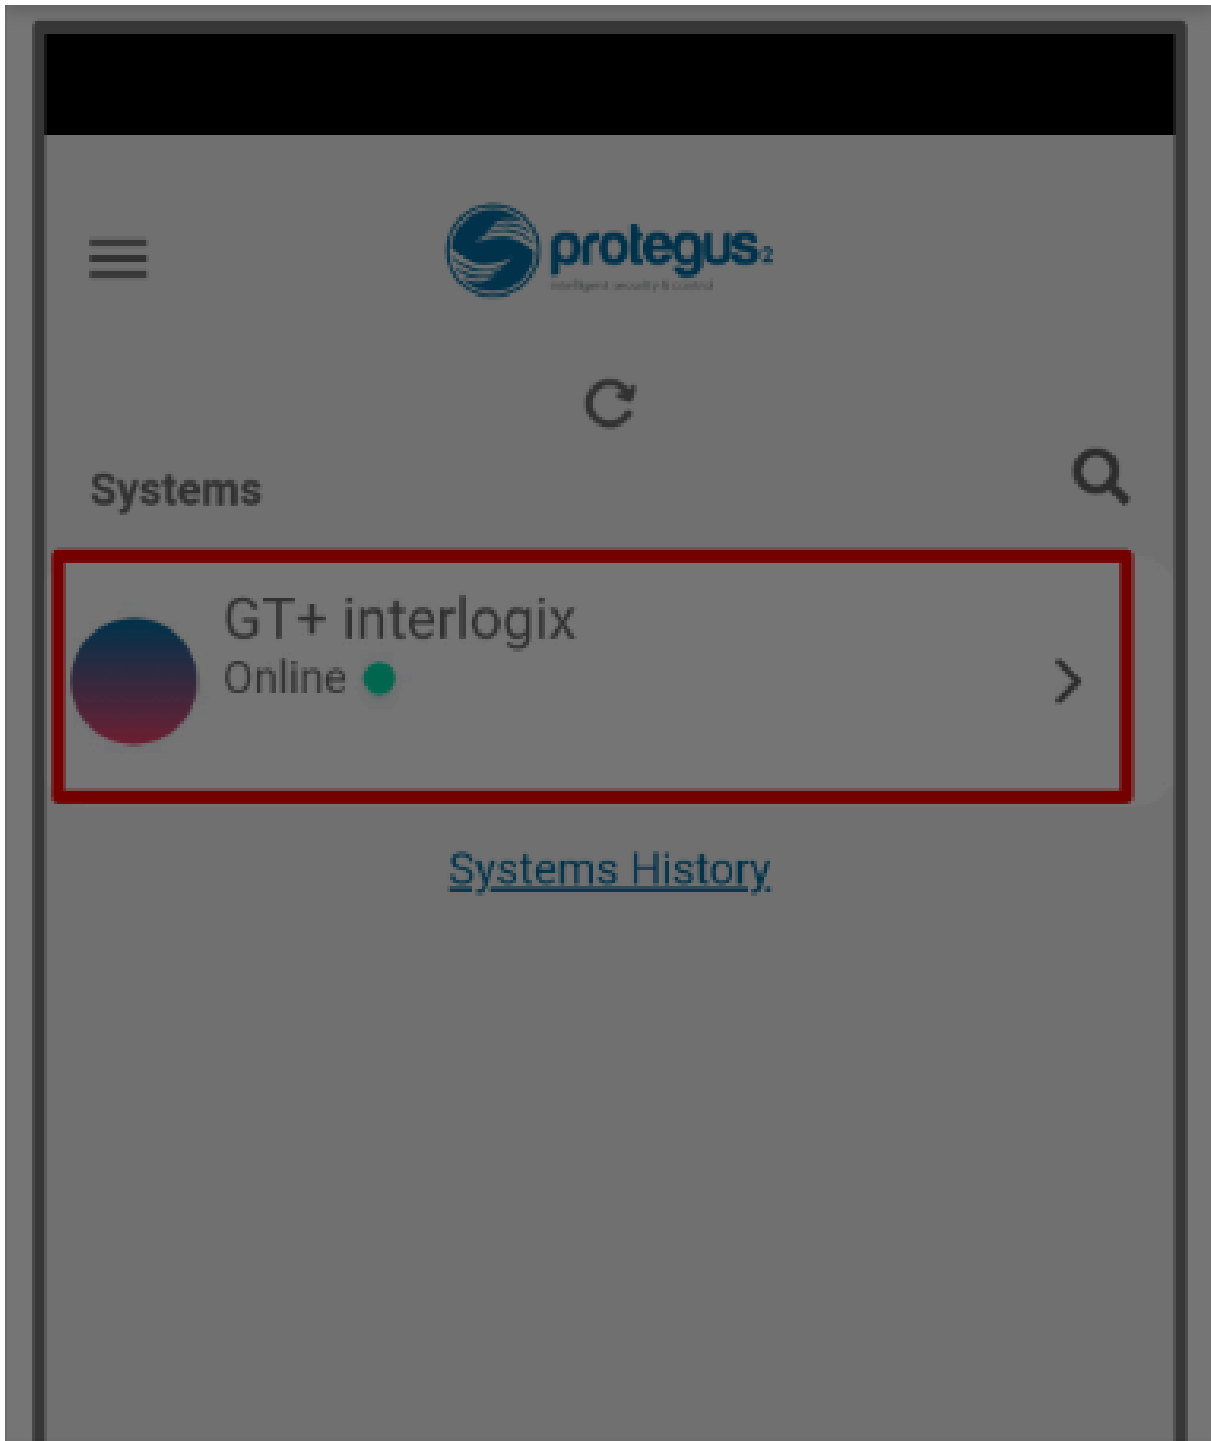

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Paso 12. Espere 1 minuto para completar y pulse **Transferir**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




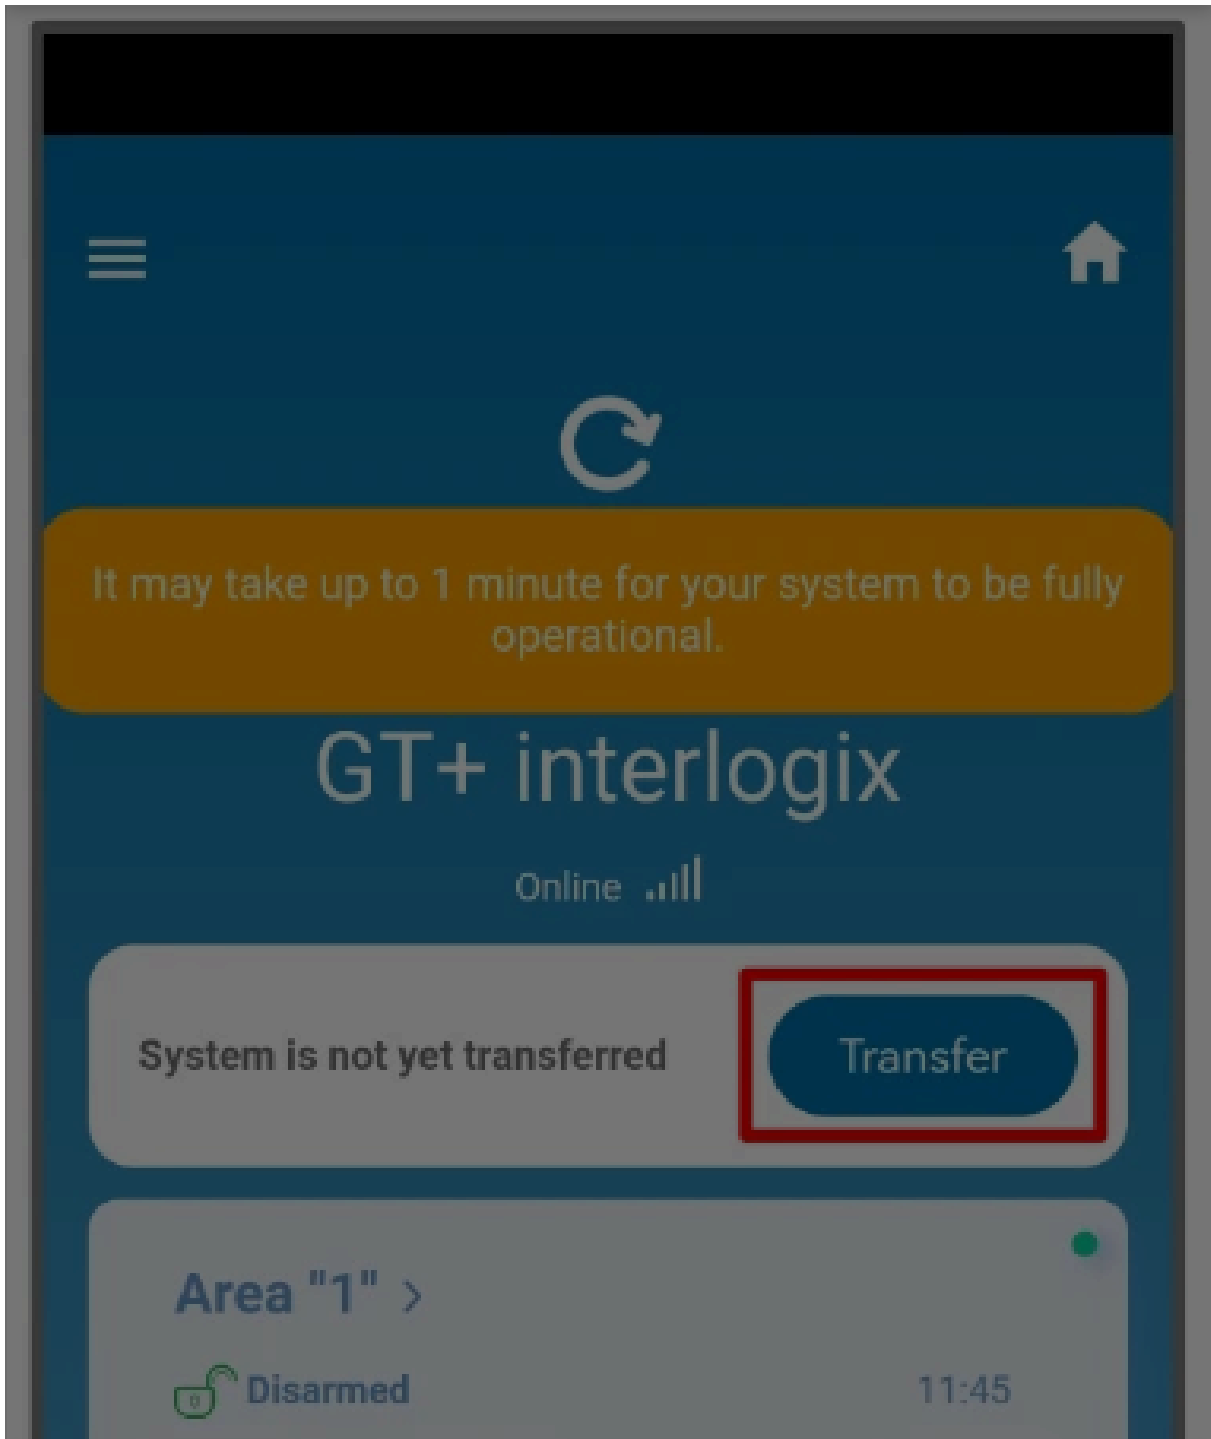

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

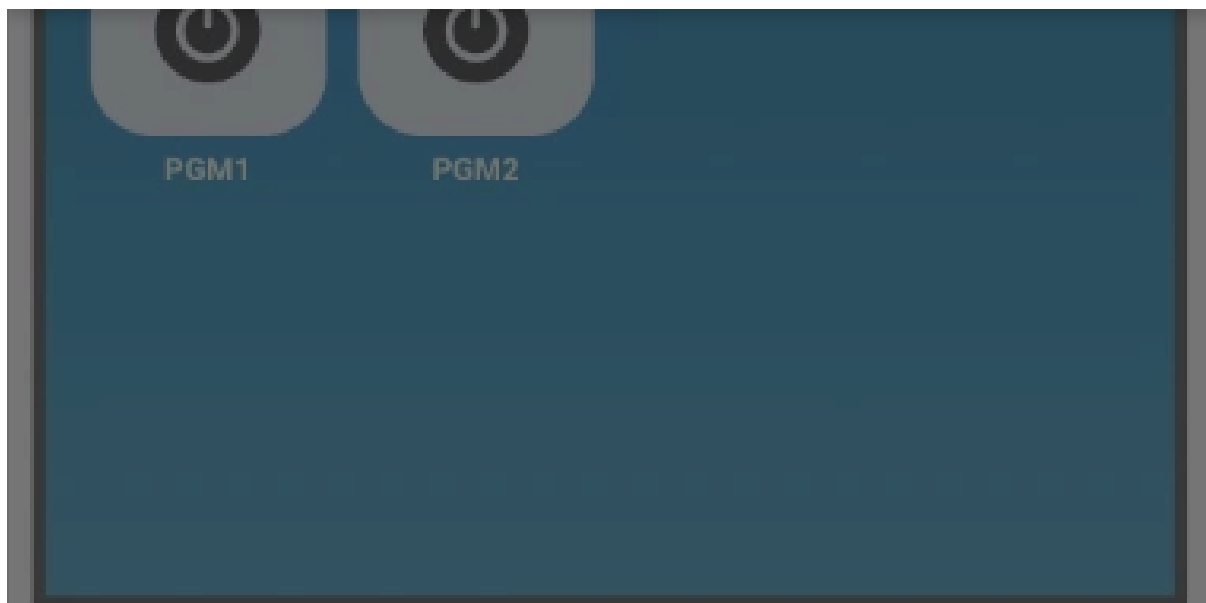


Paso 13. Introduzca el correo electrónico del usuario al que el instalador transferirá el sistema. Pulse **Transferir**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



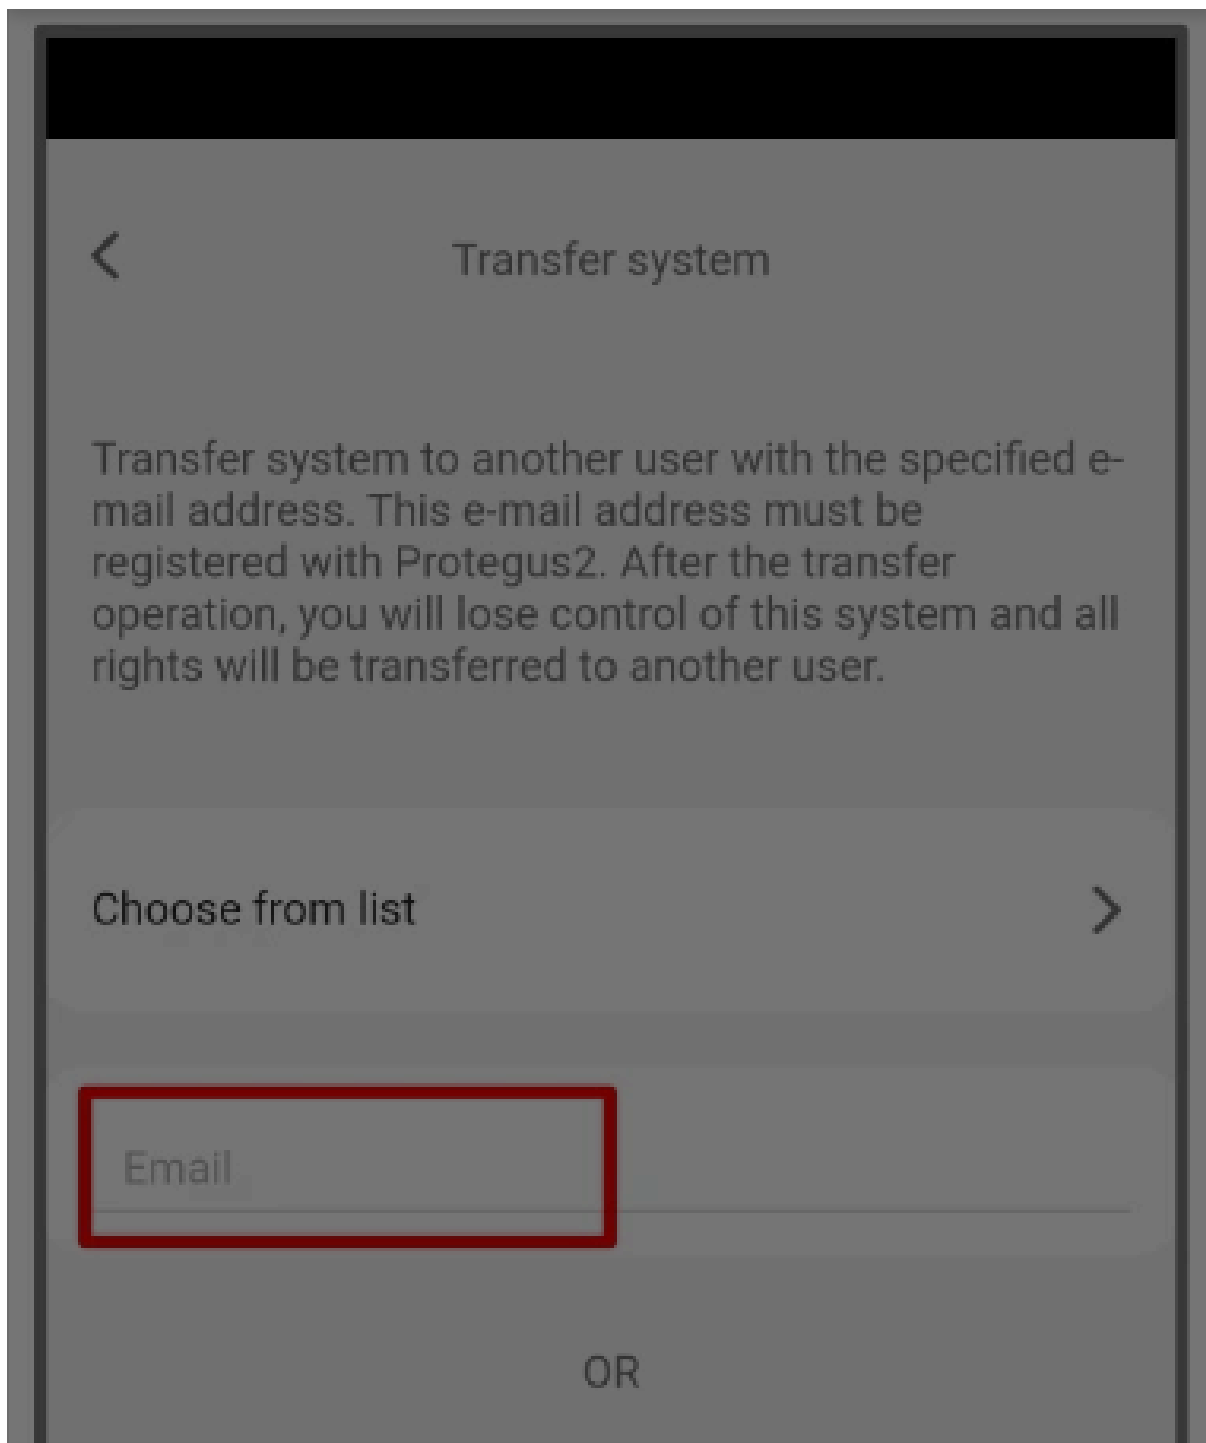


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



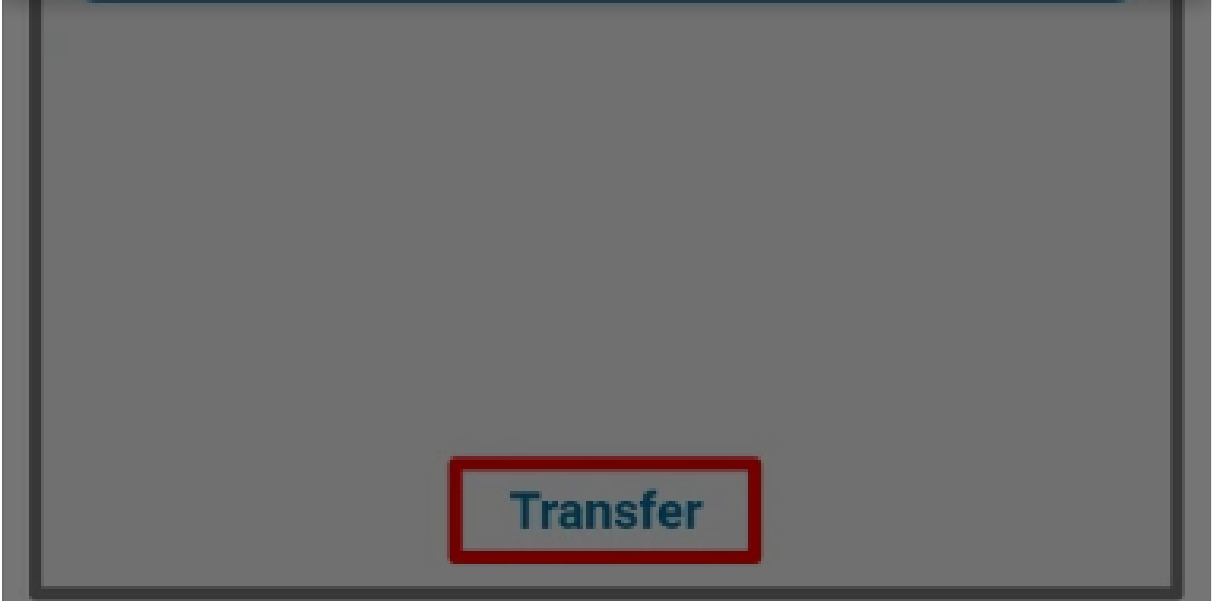

Transfer


Paso 14. El sistema aparecerá en Protegus en el teléfono del usuario.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



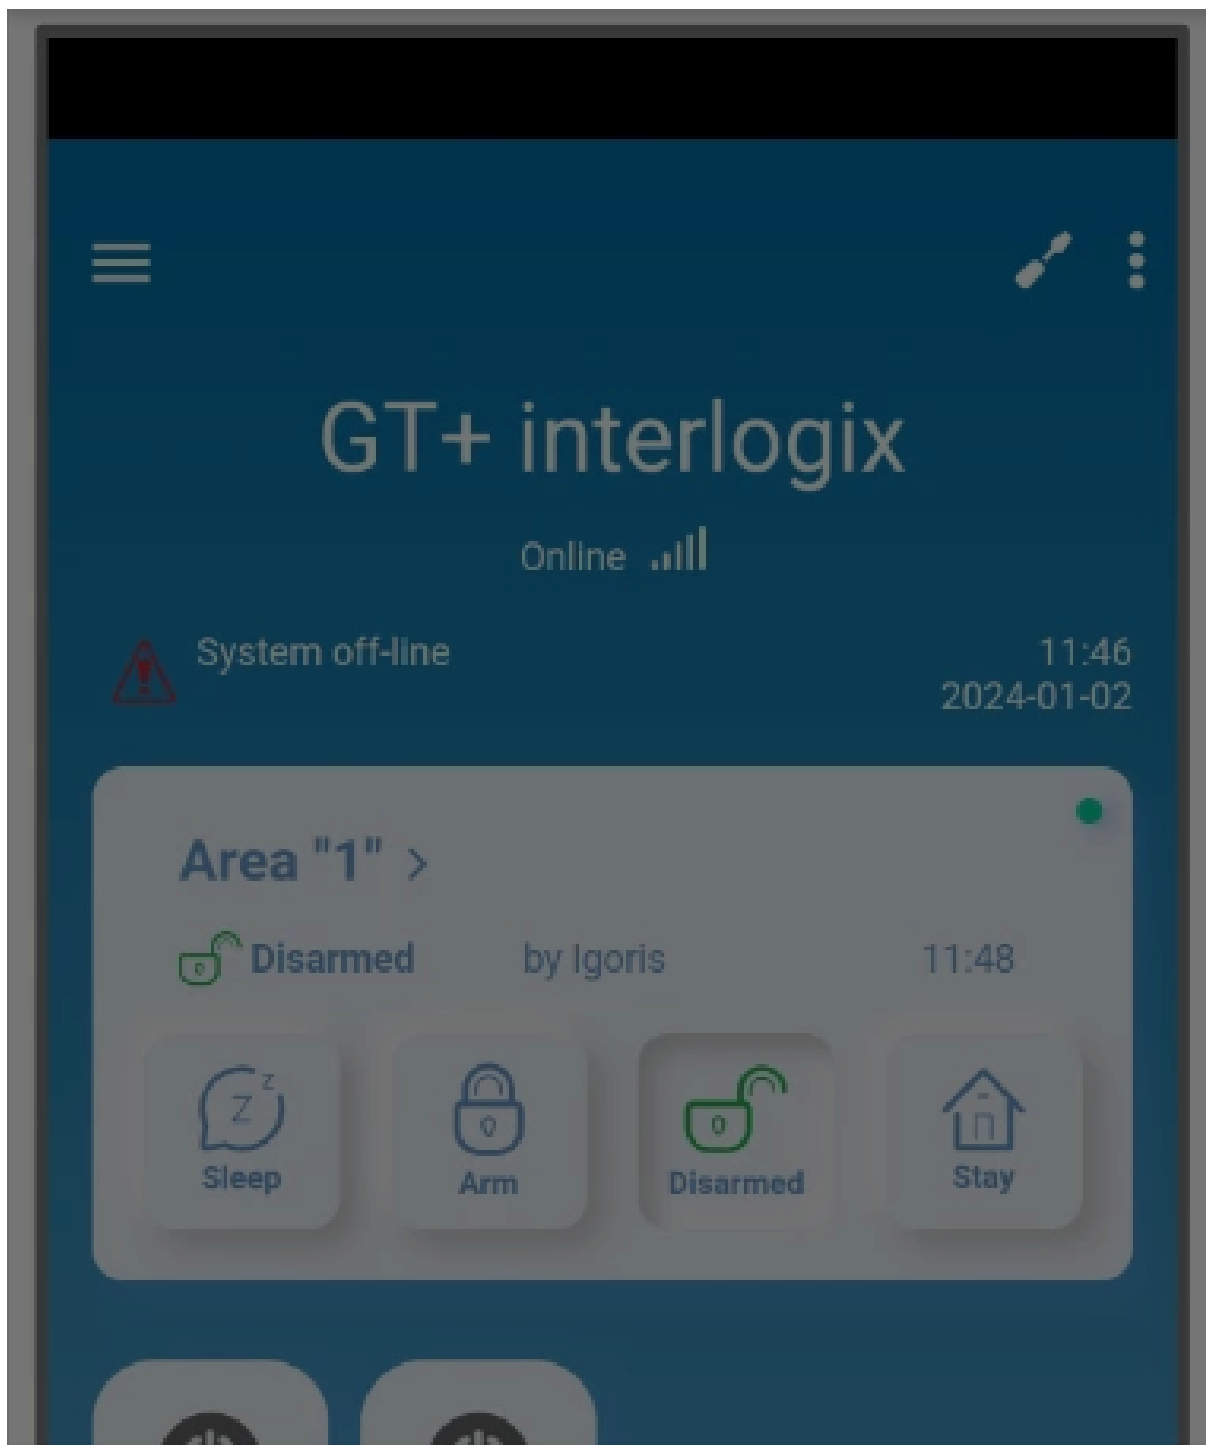

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





CONSEJO

Después de completar la configuración y la instalación realice una comprobación del sistema:

1. Cree un evento:

- armando/desarmando el sistema con el teclado del panel de control.
- provocando una alarma de zona cuando el sistema de seguridad está armado.

2. Asegúrese de que el evento llegue al CMS (Central Monitoring Station) y a la aplicación Protegus2.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

