

COMUNICADORES

Honeywell Vista-48 con GT/GT+/GET configuración rápida



GT product image

GT



GT+ product image

GT+



GET product image

GET

Pasos breves de cableado y programación para conectar el comunicador GT/GT+/GET al panel Honeywell Ademco Vista-48 (Vista-20, Vista-15) usando KeyBus, y luego añadir el sistema a Protegus2. Use esto junto con los manuales completos para otros ajustes. (Las etiquetas de terminal pueden variar ligeramente entre GT/GT+/GET, pero las conexiones son las mismas.)

PRECAUCIÓN

La instalación y el servicio deben ser realizados solo por personal cualificado. Desconecte la alimentación antes de cablear. Los cambios no autorizados anulan la garantía.

1. Requisitos

1. Firmware GT/GT+/GET 1.21, SIM insertada, PIN deshabilitado, plan de datos activo.
2. Panel Honeywell Ademco Vista-48 (Vista-20, Vista-15) con acceso al teclado (código de instalador disponible).
3. Número de cuenta CMS si reporta a CMS.
4. Cuenta de empresa/instalador de Protegus2 y IMEI del comunicador.


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

Accept

Reject

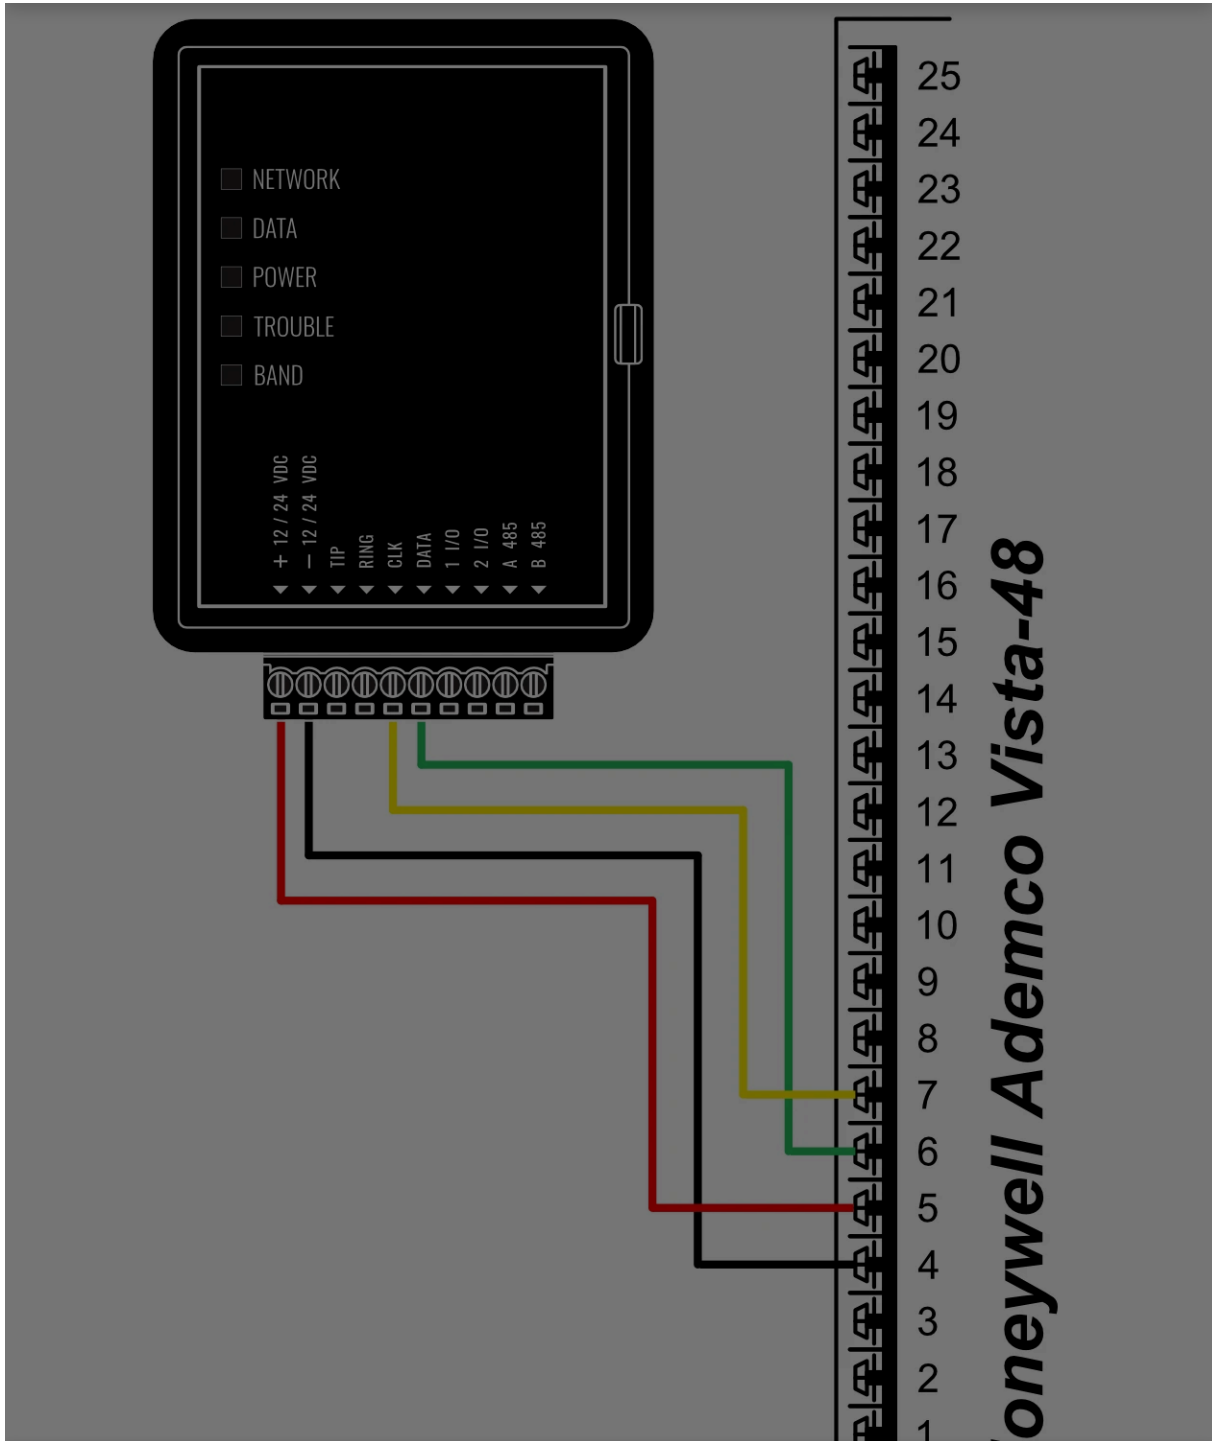

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics





Entrada de teclado	Descripción de la acción
*4112800 *	Entrar en modo de programación
*591 *	Habilitar "Exit Error Report Code".
*601 *	Habilitar "Trouble Report Code".
*611 *	Habilitar "Bypass reporting Code".
*621 *	Habilitar "AC Mains Loss Report Code".
*631 *	Habilitar "Low Battery Report Code".
*641 *	Habilitar "Test Report Code".
*651 *	Habilitar "Open Report Code".
*661 *	Habilitar "Arm Away/Stay Report Code".
*671 *	Habilitar "RF Low Battery Report Code".
*681 *	Habilitar "Cancel Report Code".
*691 *	Habilitar "Alarm Restores".
*701 *	Habilitar "Alarm Restore Report Code".
*711 *	Habilitar "Trouble Restore Report Code".
*721 *	Habilitar "Bypass Restore Report Code".
*731 *	Habilitar "AC Mains Restore Report Code".
*741 *	Habilitar "Low Battery Restore Report Code".
*751 *	Habilitar "RF Low Restore Code".
*761 *	Habilitar "Test Restore Report Code".
*291 *	Habilitar "ECP Contact ID Output for ACM".
*1891 *	Habilitar "AUI Device 1 and 2 Enable".
*99	Salir del modo de programación.


4. Añadir sistema a Protegus2

Paso 1. Pulse **Agregar nuevo sistema.**

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

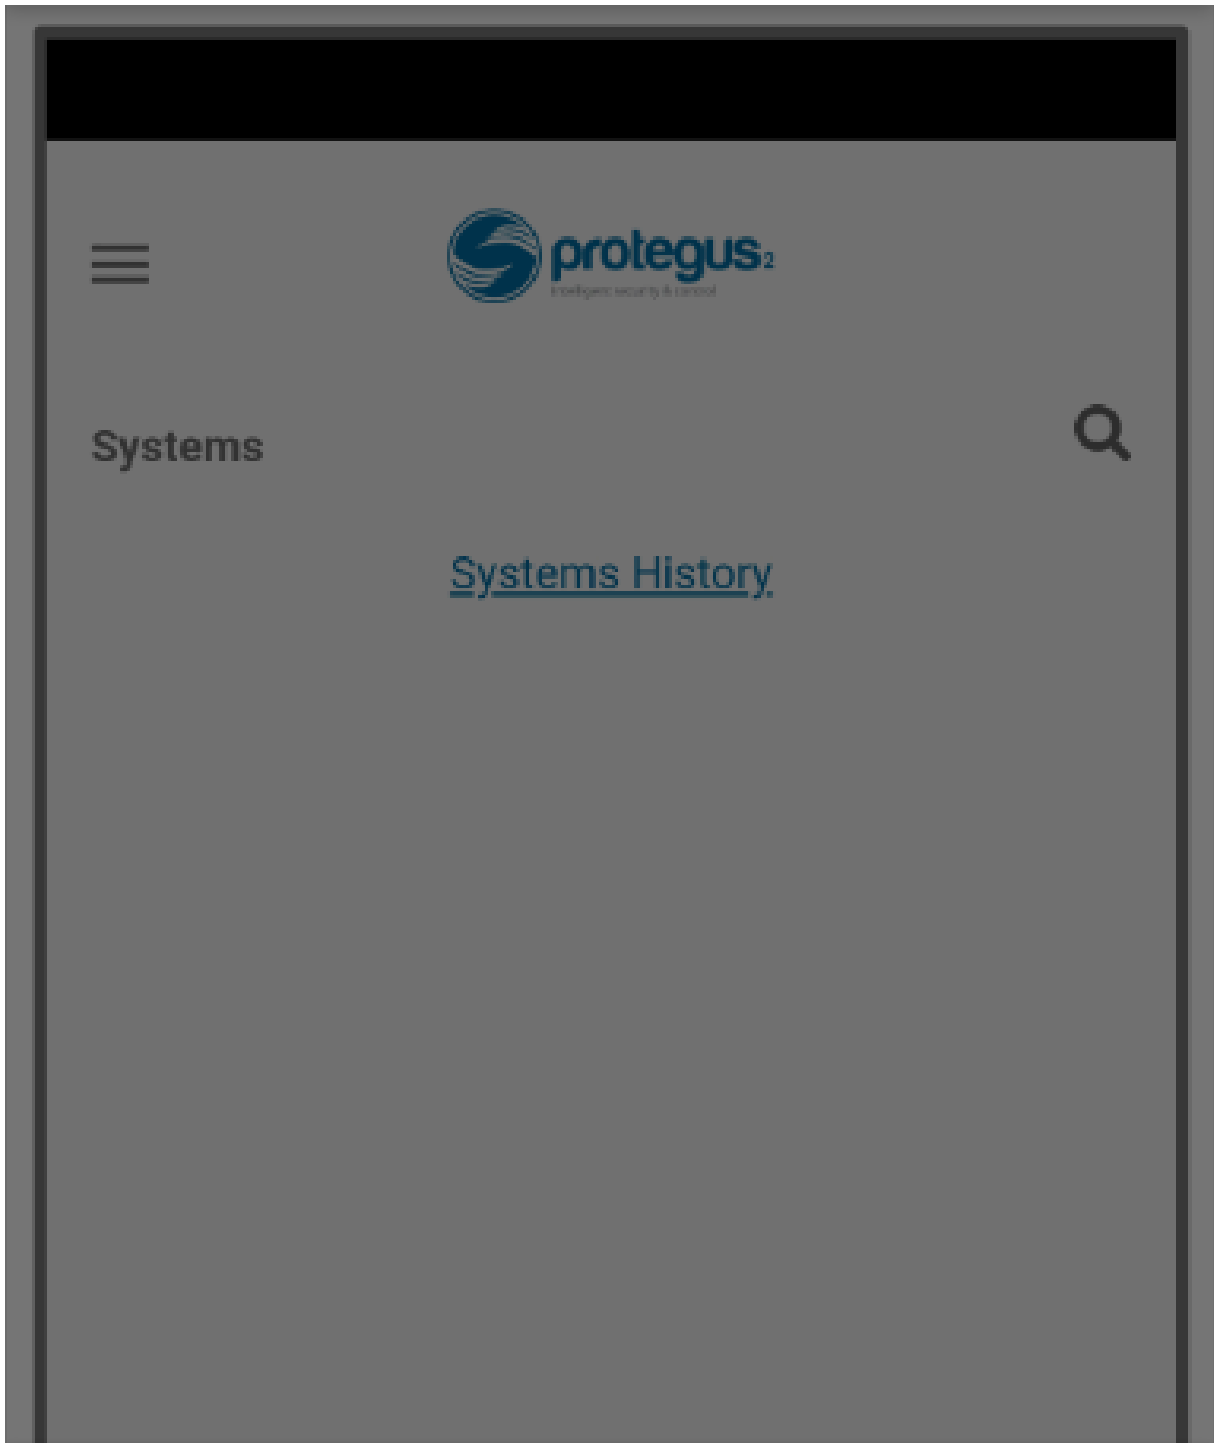

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Paso 2. Introduzca el **IMEI** del comunicador, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




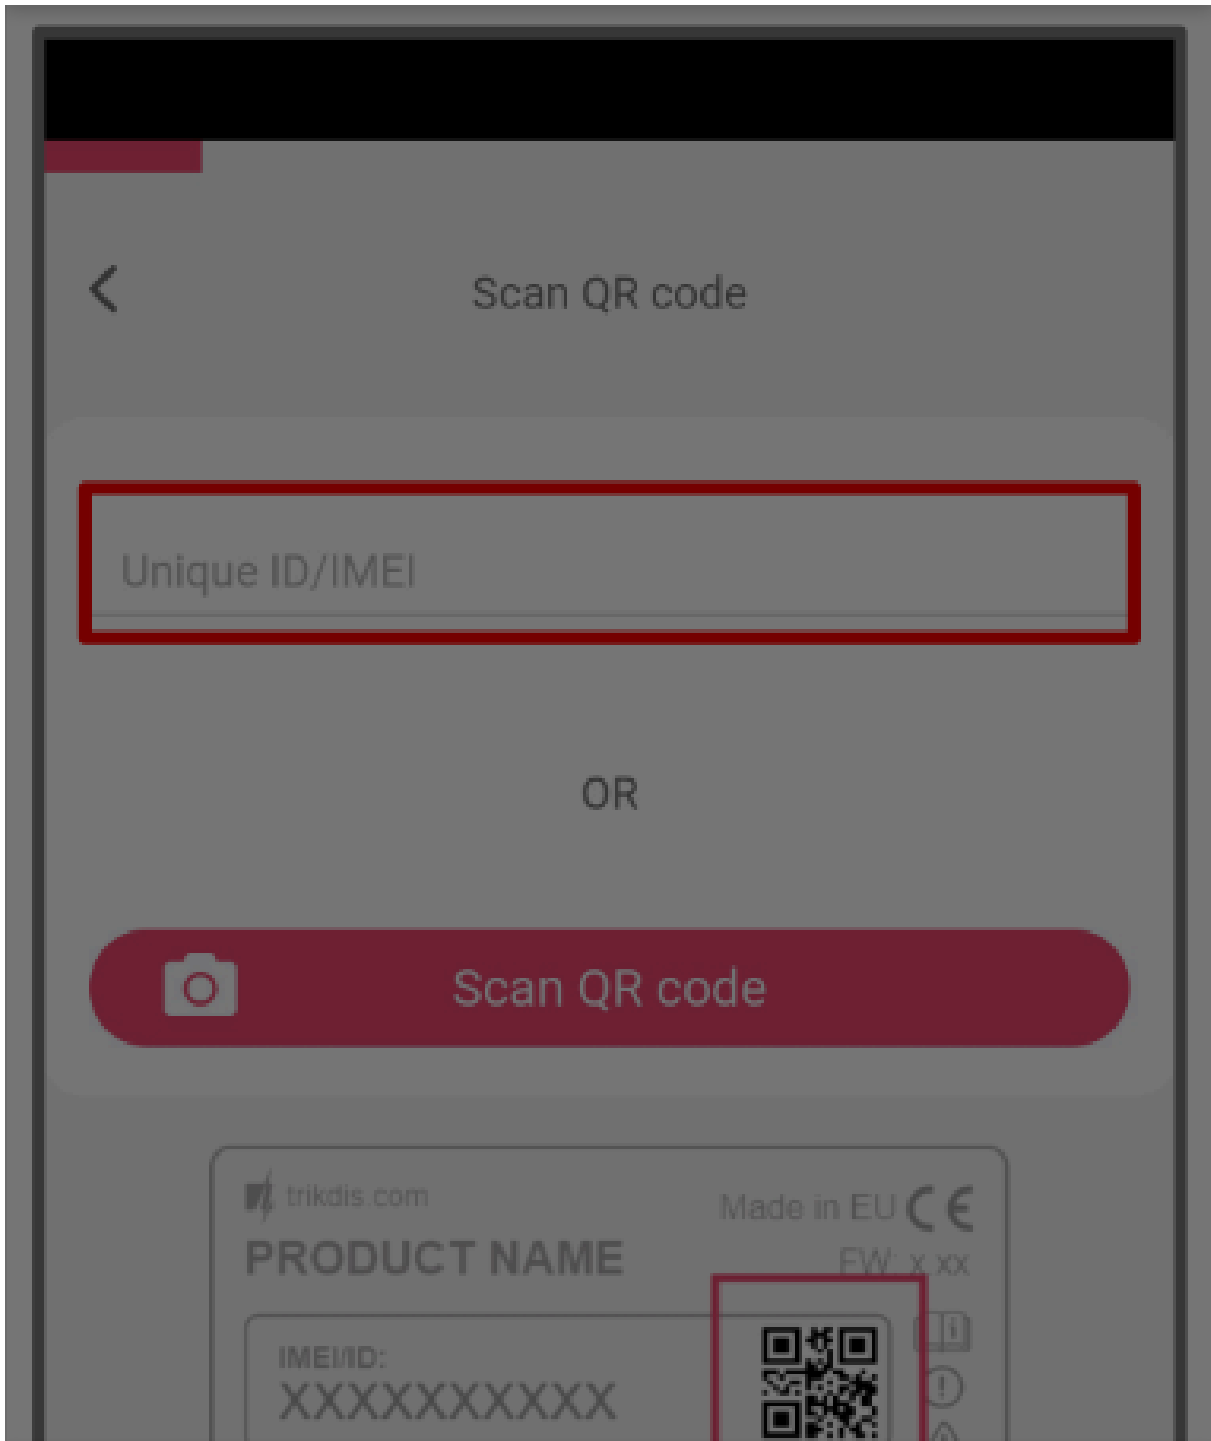

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




Paso 3. Seleccione la empresa de seguridad.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel

Add only to Protegus2


Paso 4. Elija Honeywell.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



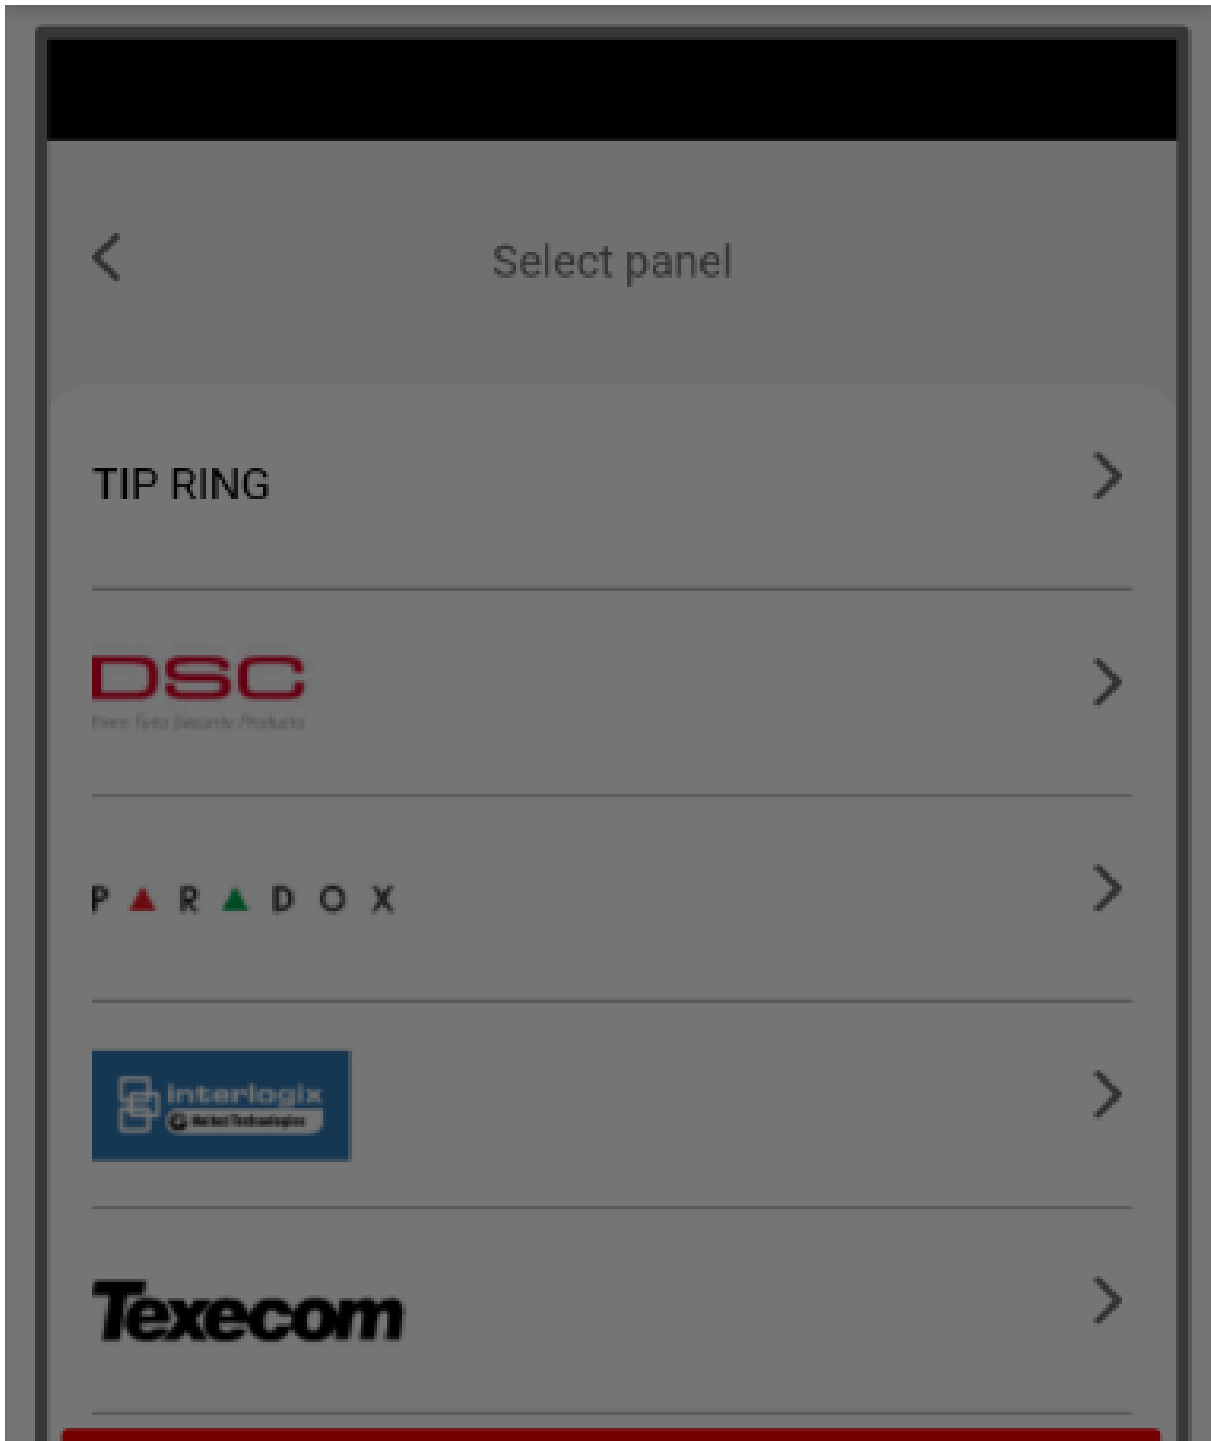

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cancel


Paso 5. Elija Vista 48 (Vista 20, Vista 15).

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Paso 6. Introduzca **Object ID** y **Module ID**, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




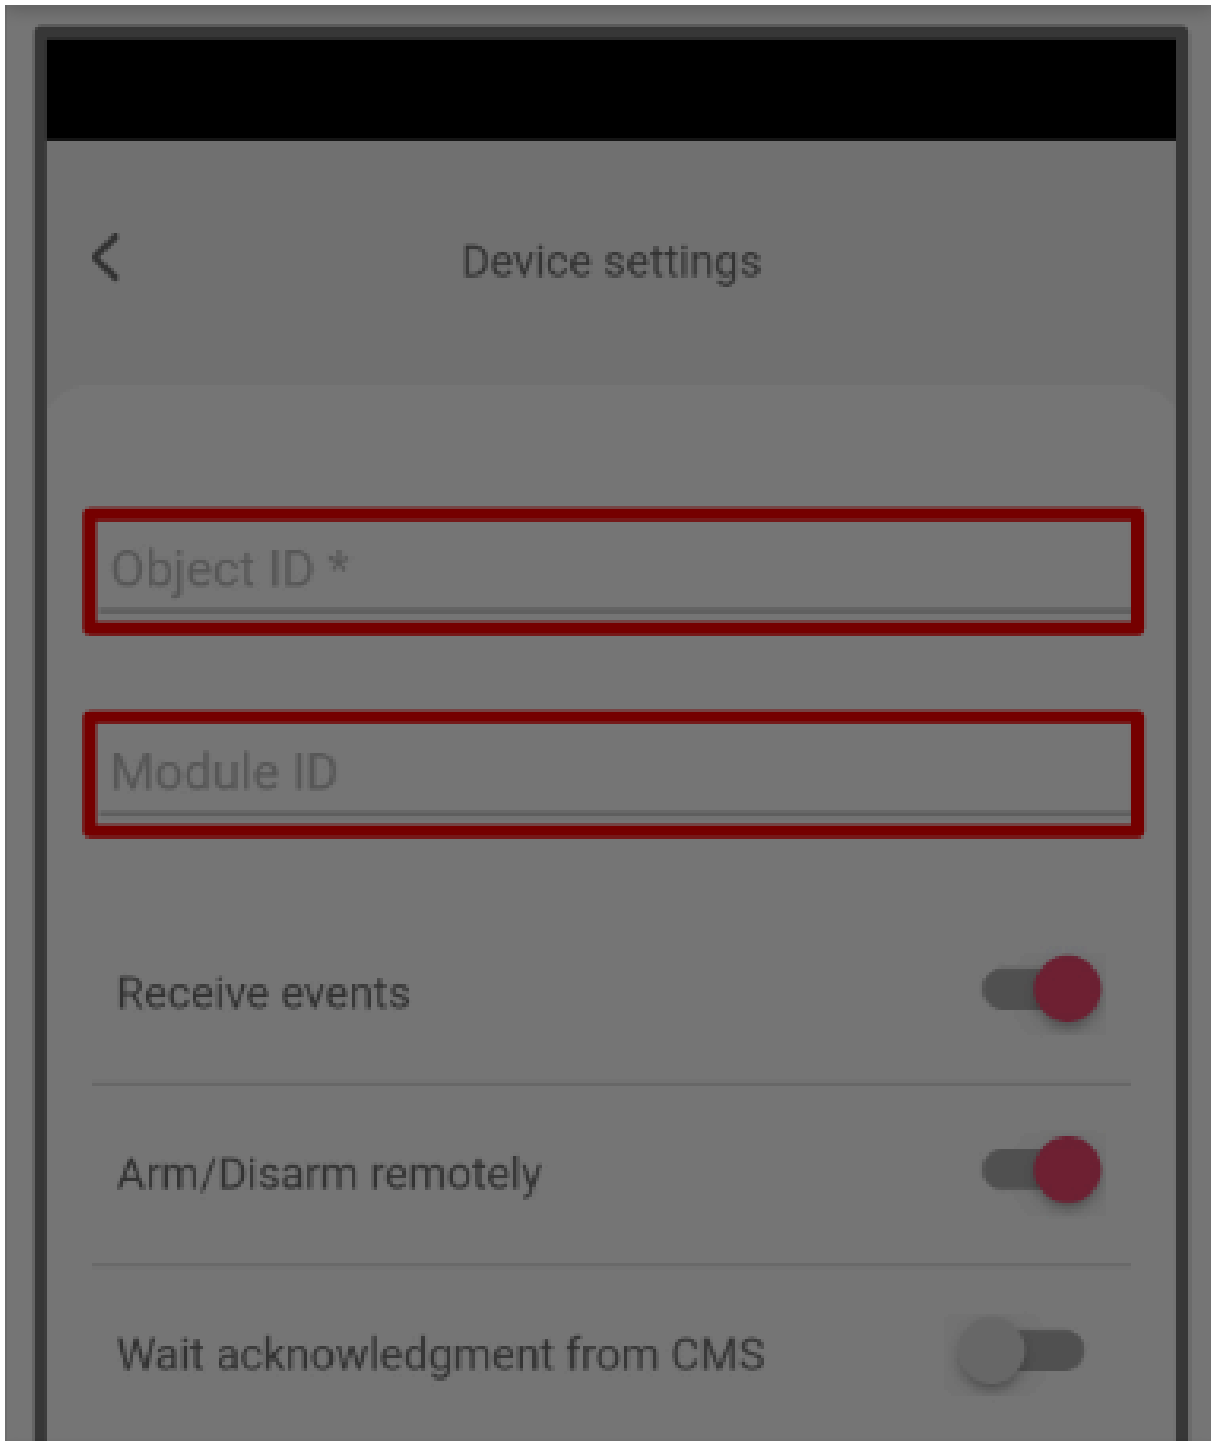

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

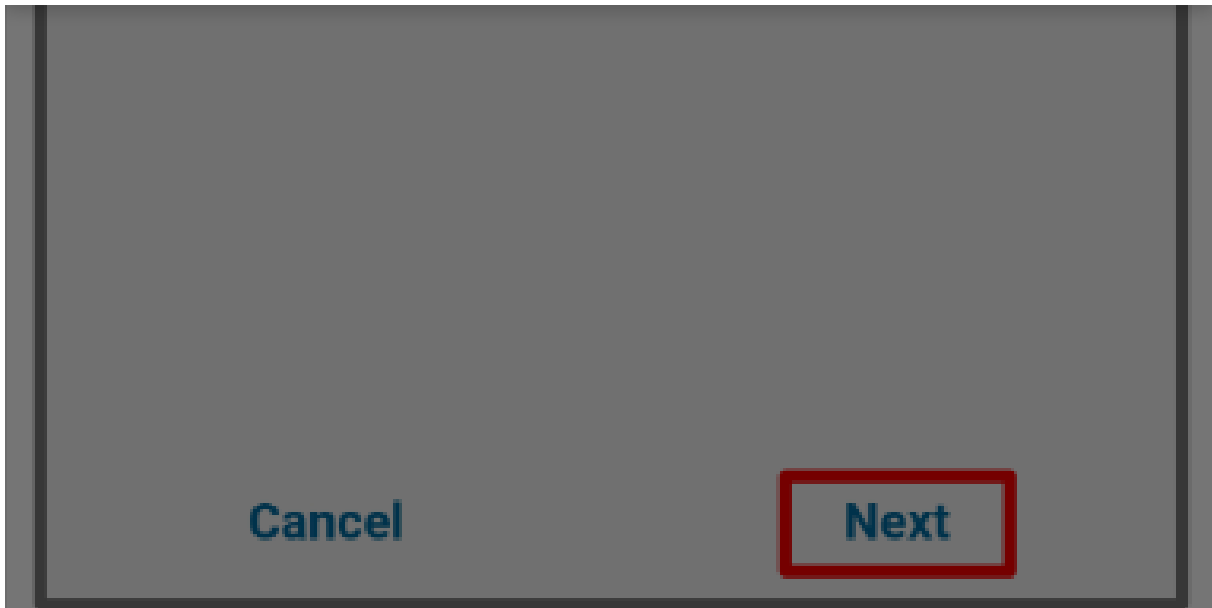


Paso 7. Espere mientras se escriben los datos.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



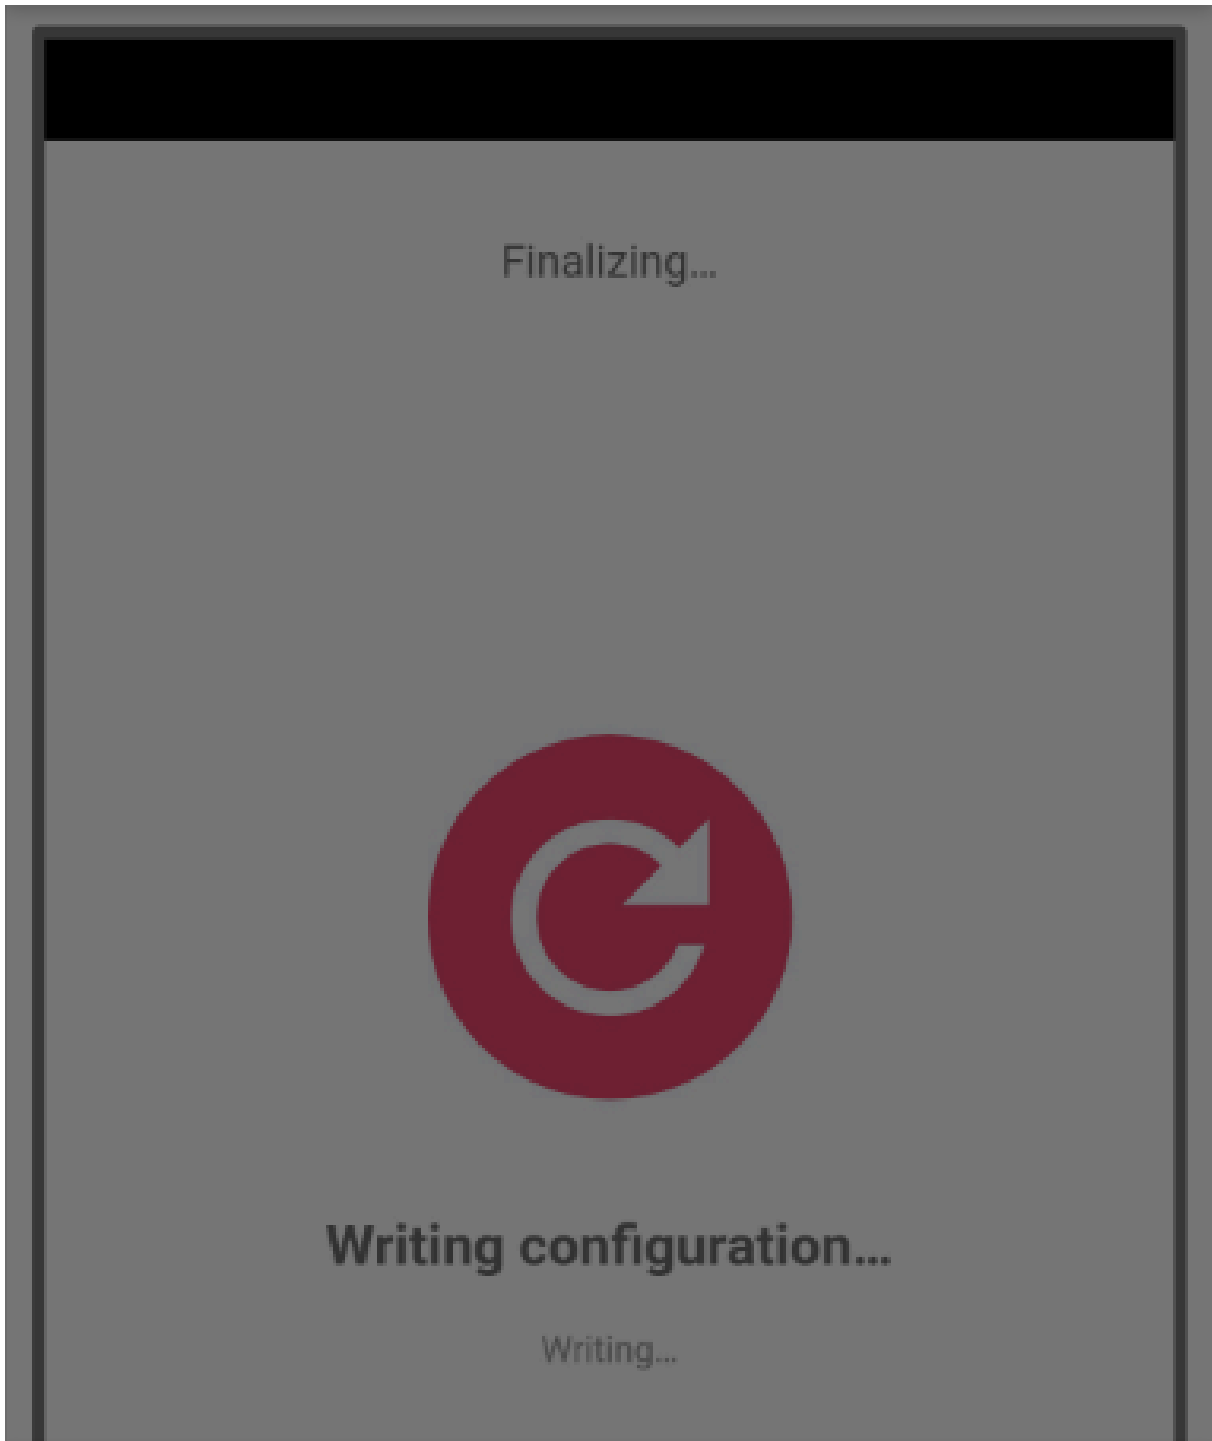

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Paso 8. Pulse **Agregar a Protegus2**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



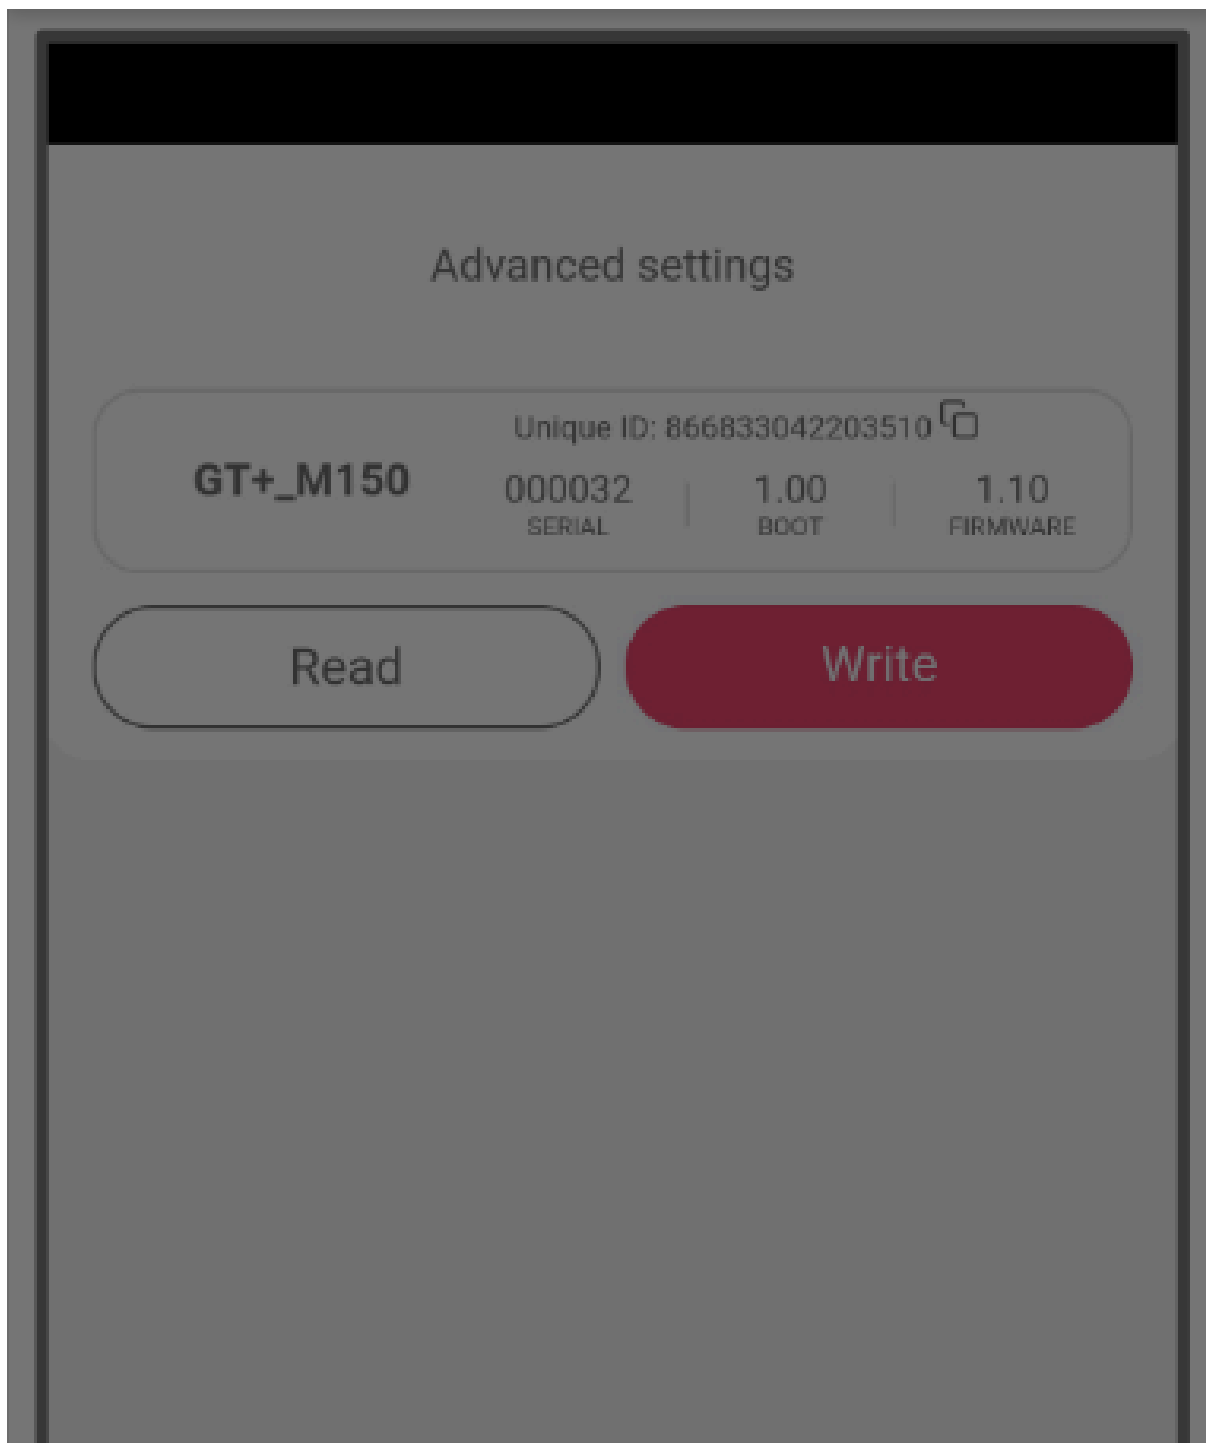


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



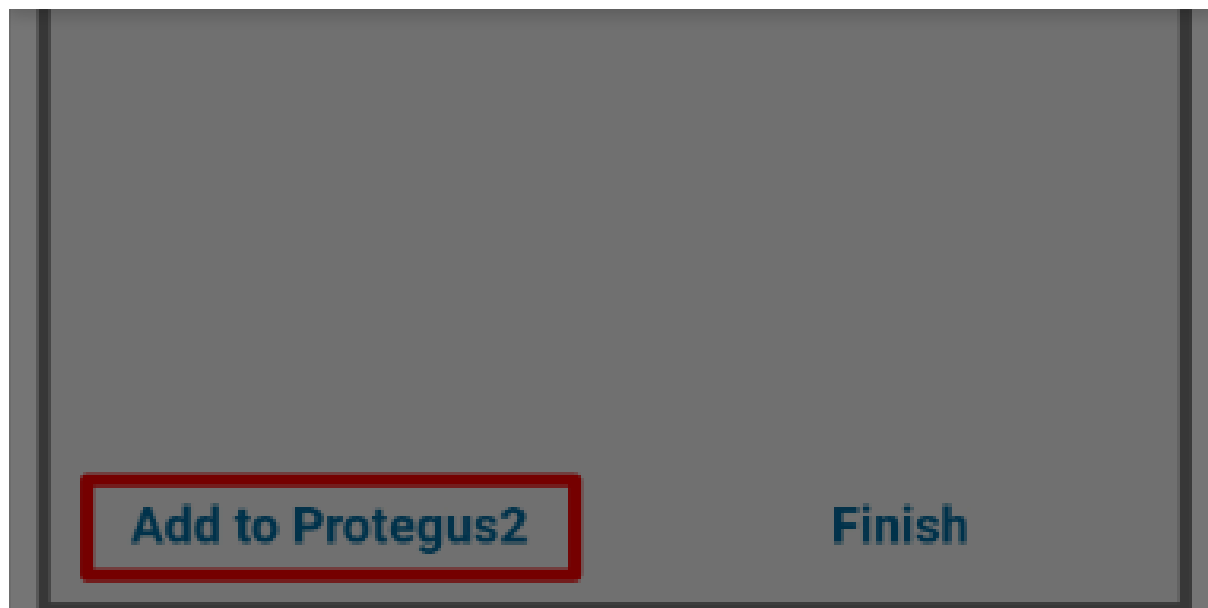


Paso 9. Introduzca el **Nombre** del sistema, pulse **Siguiente**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



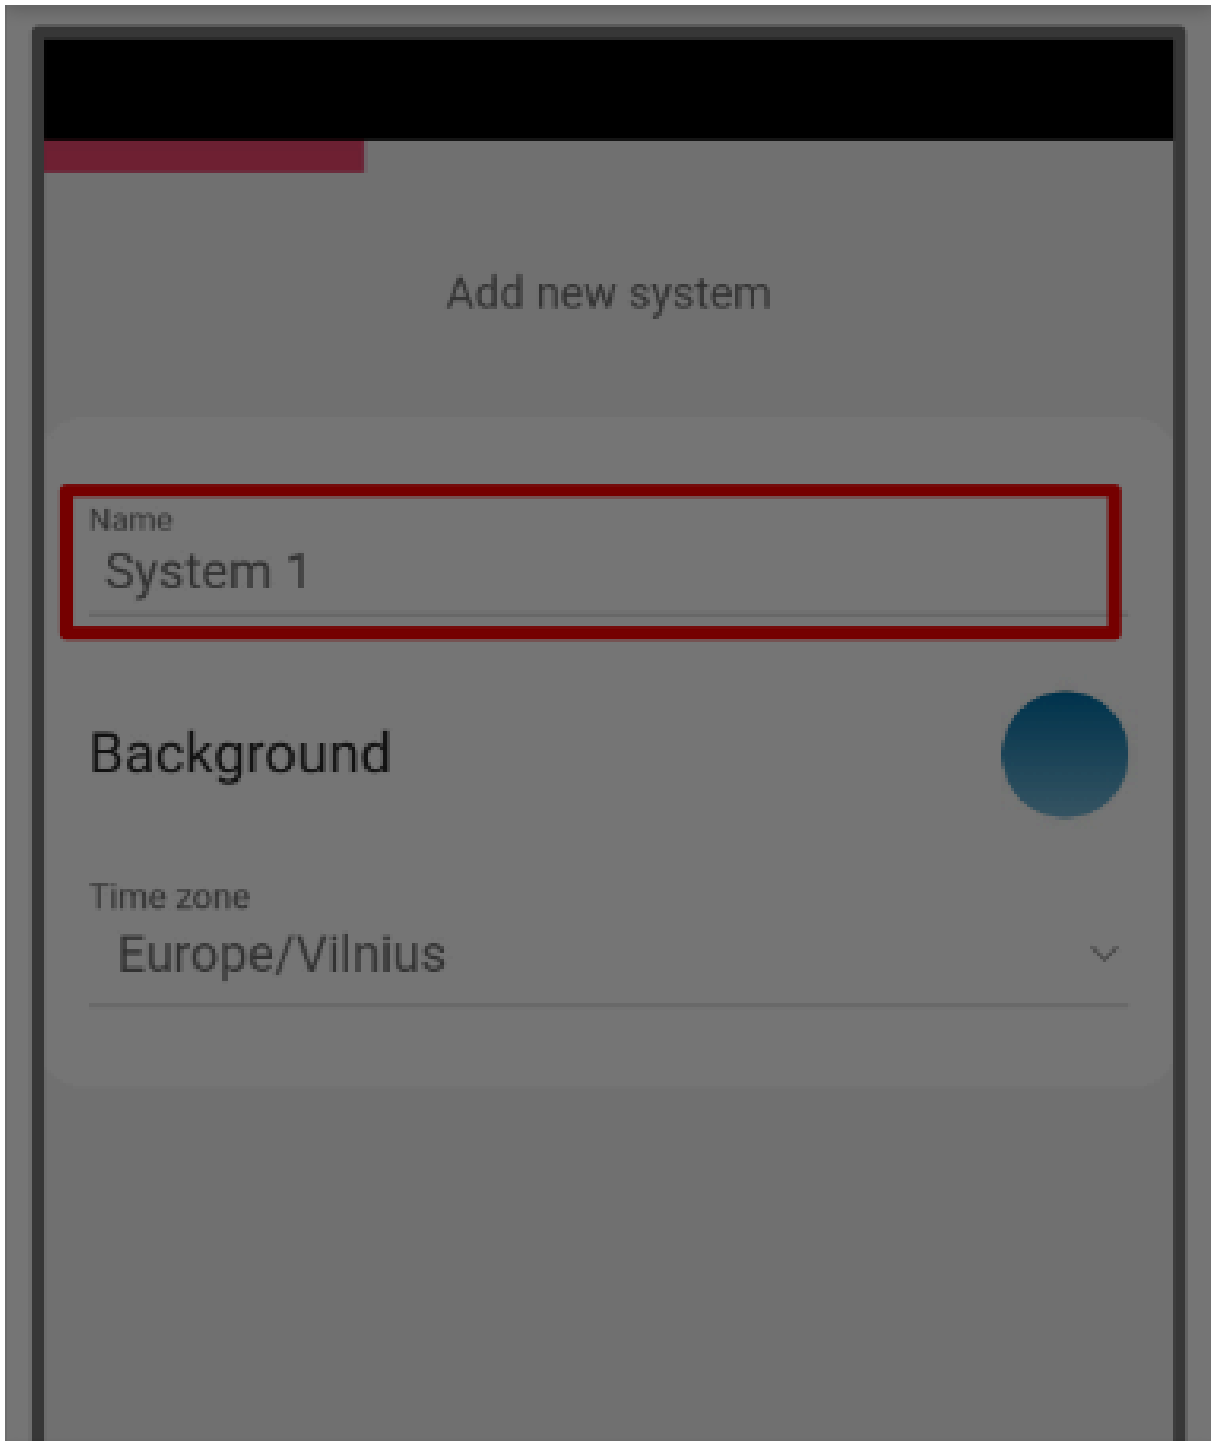


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



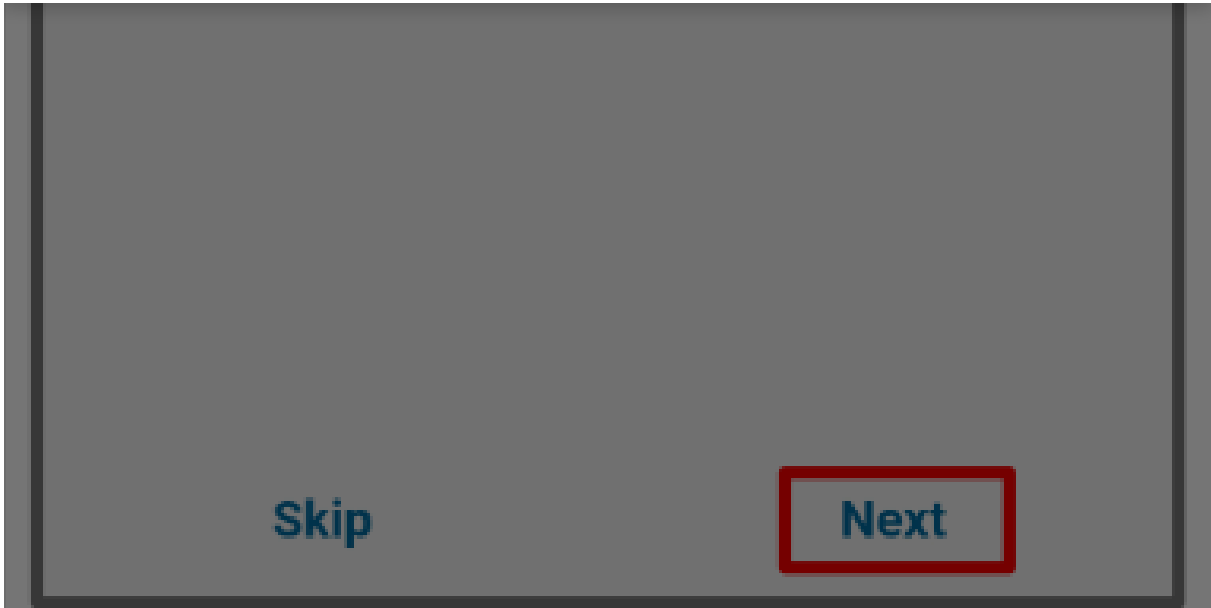


Paso 10. Pulse **Saltar**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




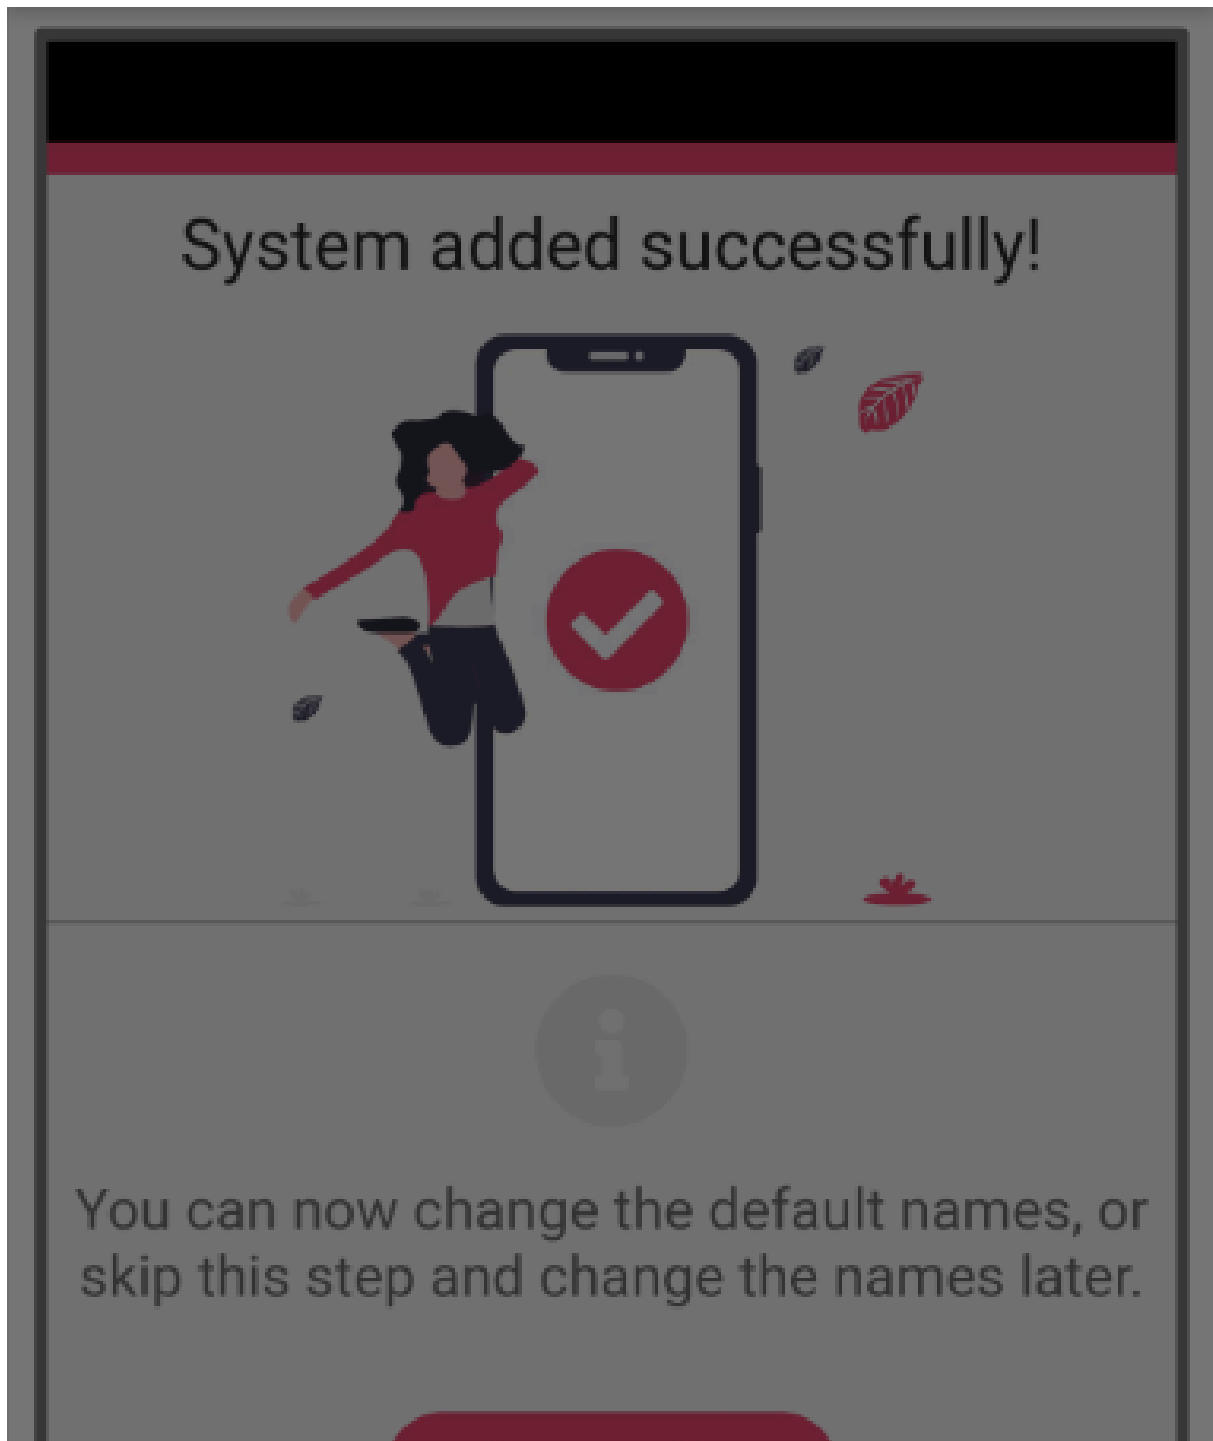

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




Paso 11. Pulse sobre el sistema.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



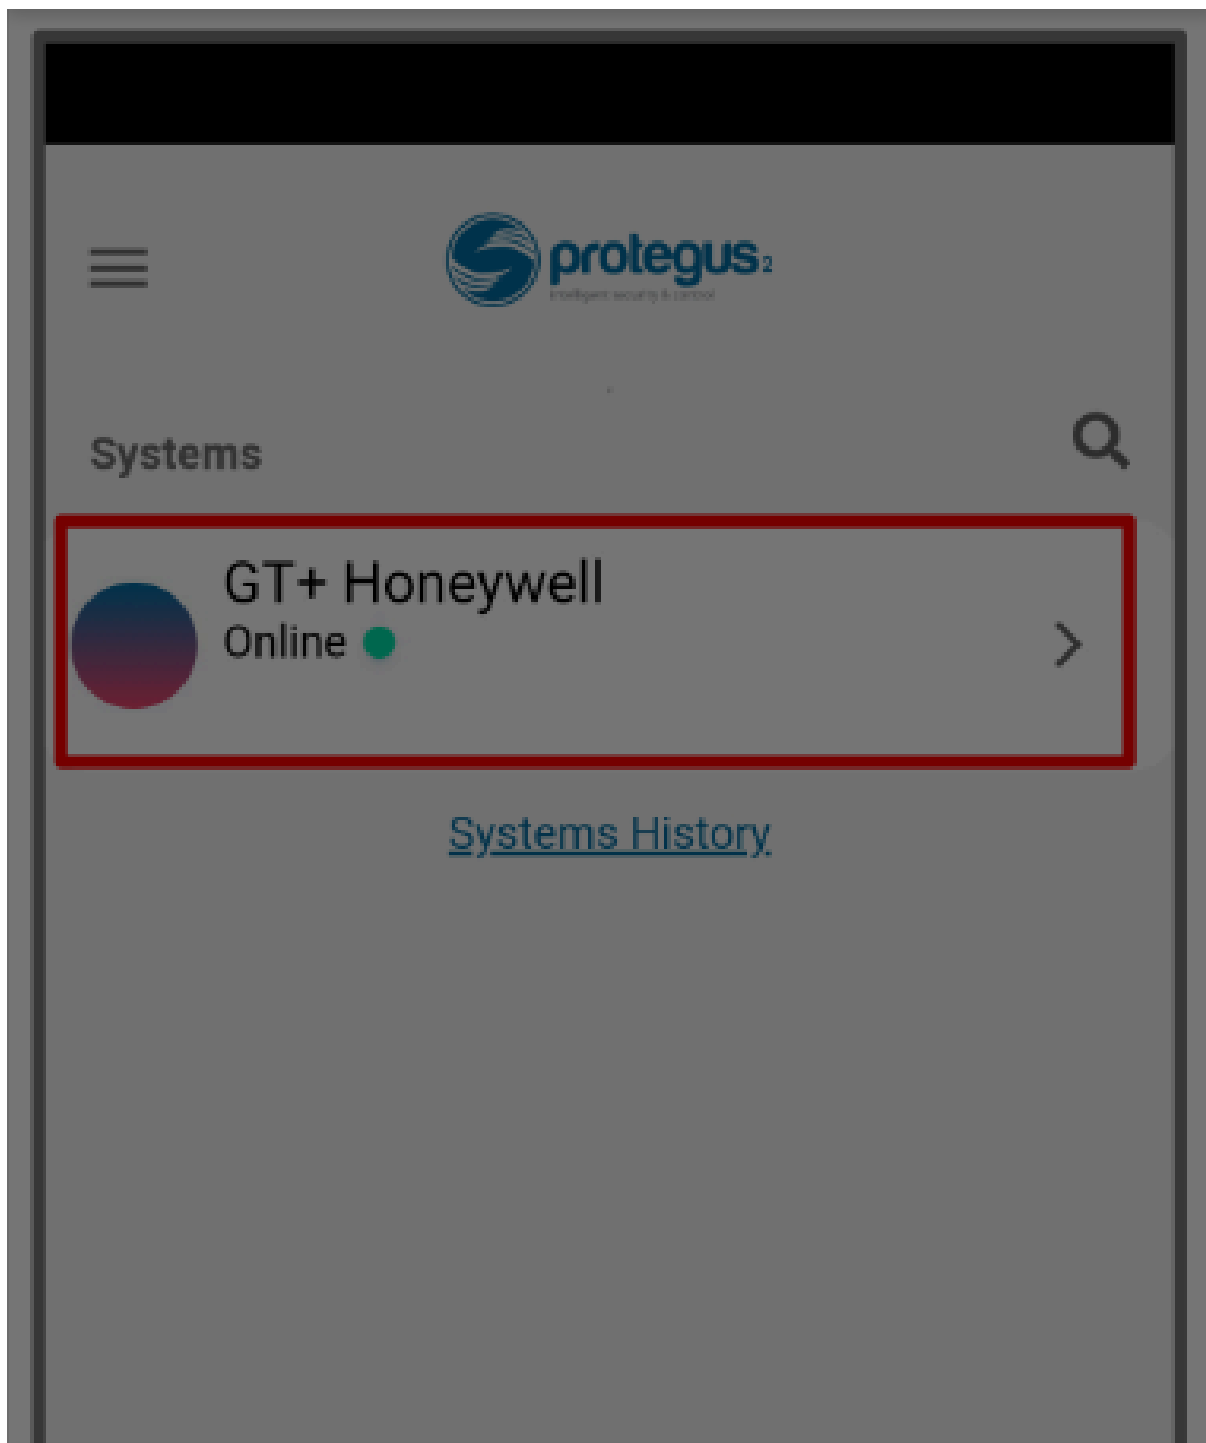

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Paso 12. Espere 1 minuto para completar y pulse **Transferir**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



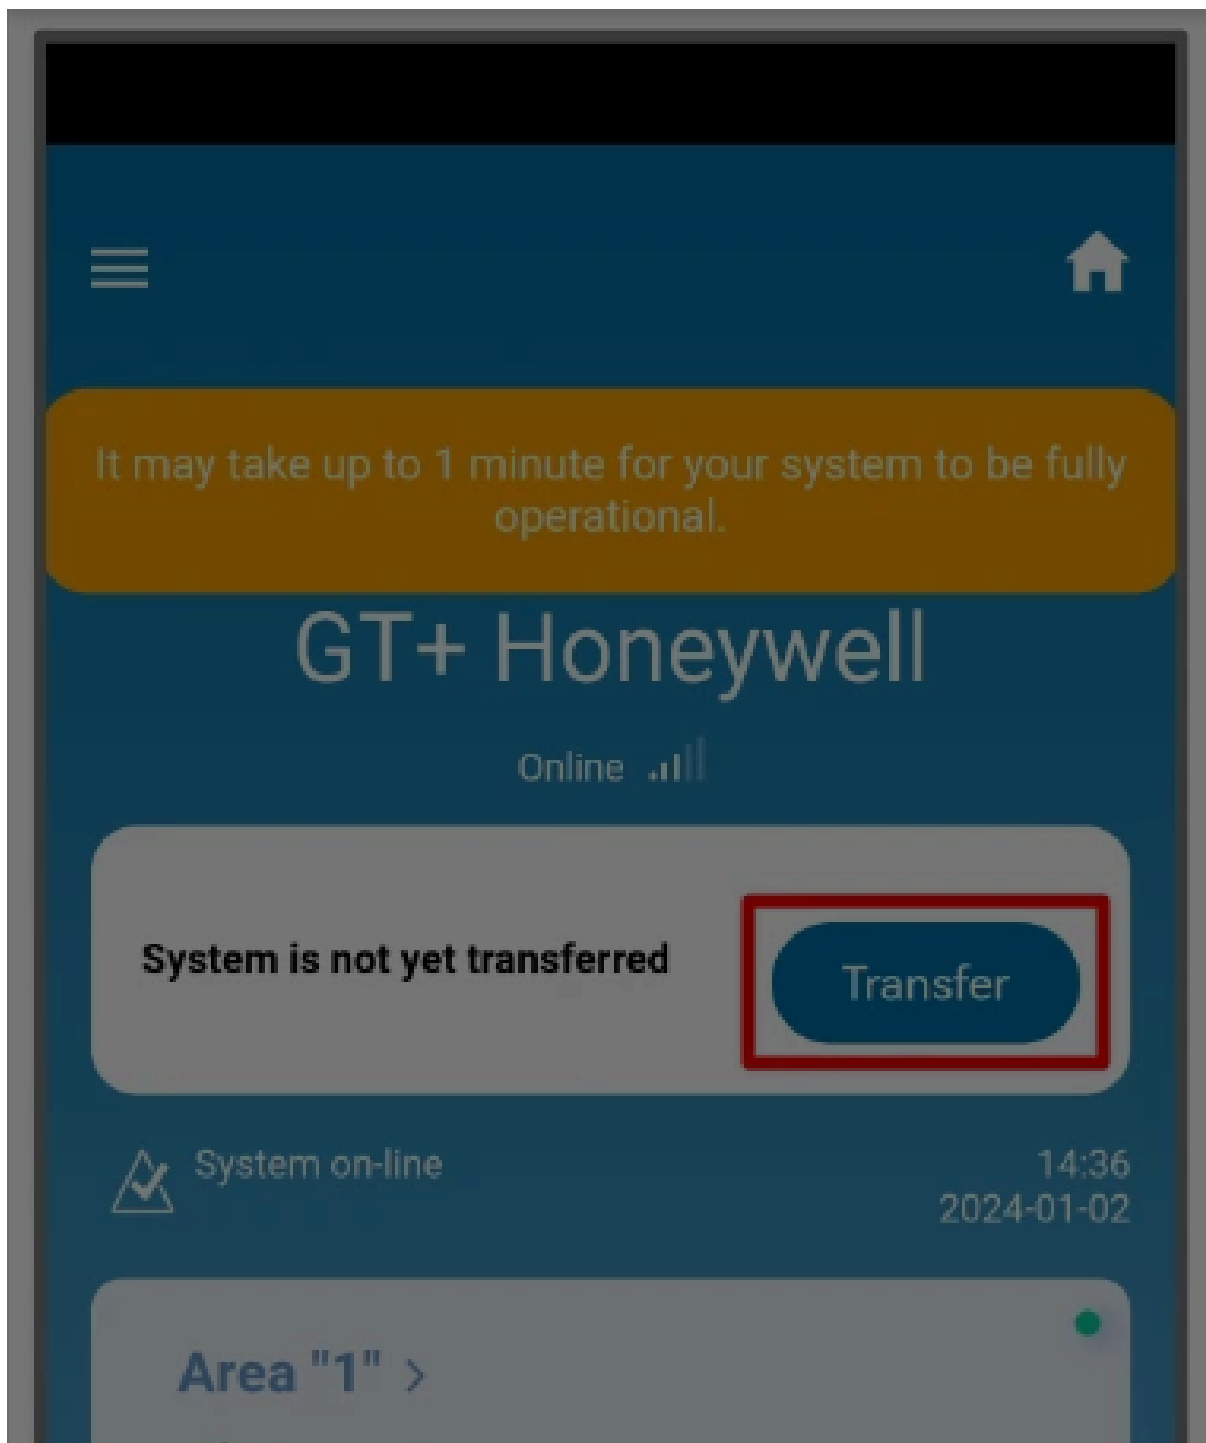


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



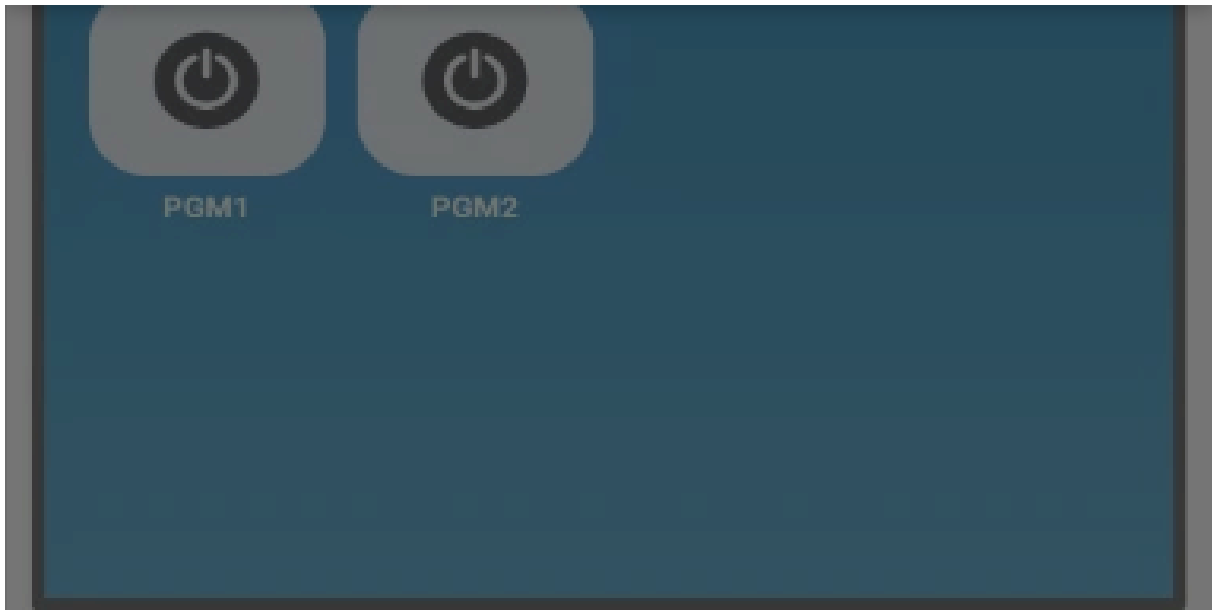


Paso 13. Introduzca el correo electrónico del usuario al que el instalador transferirá el sistema. Pulse **Transferir**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

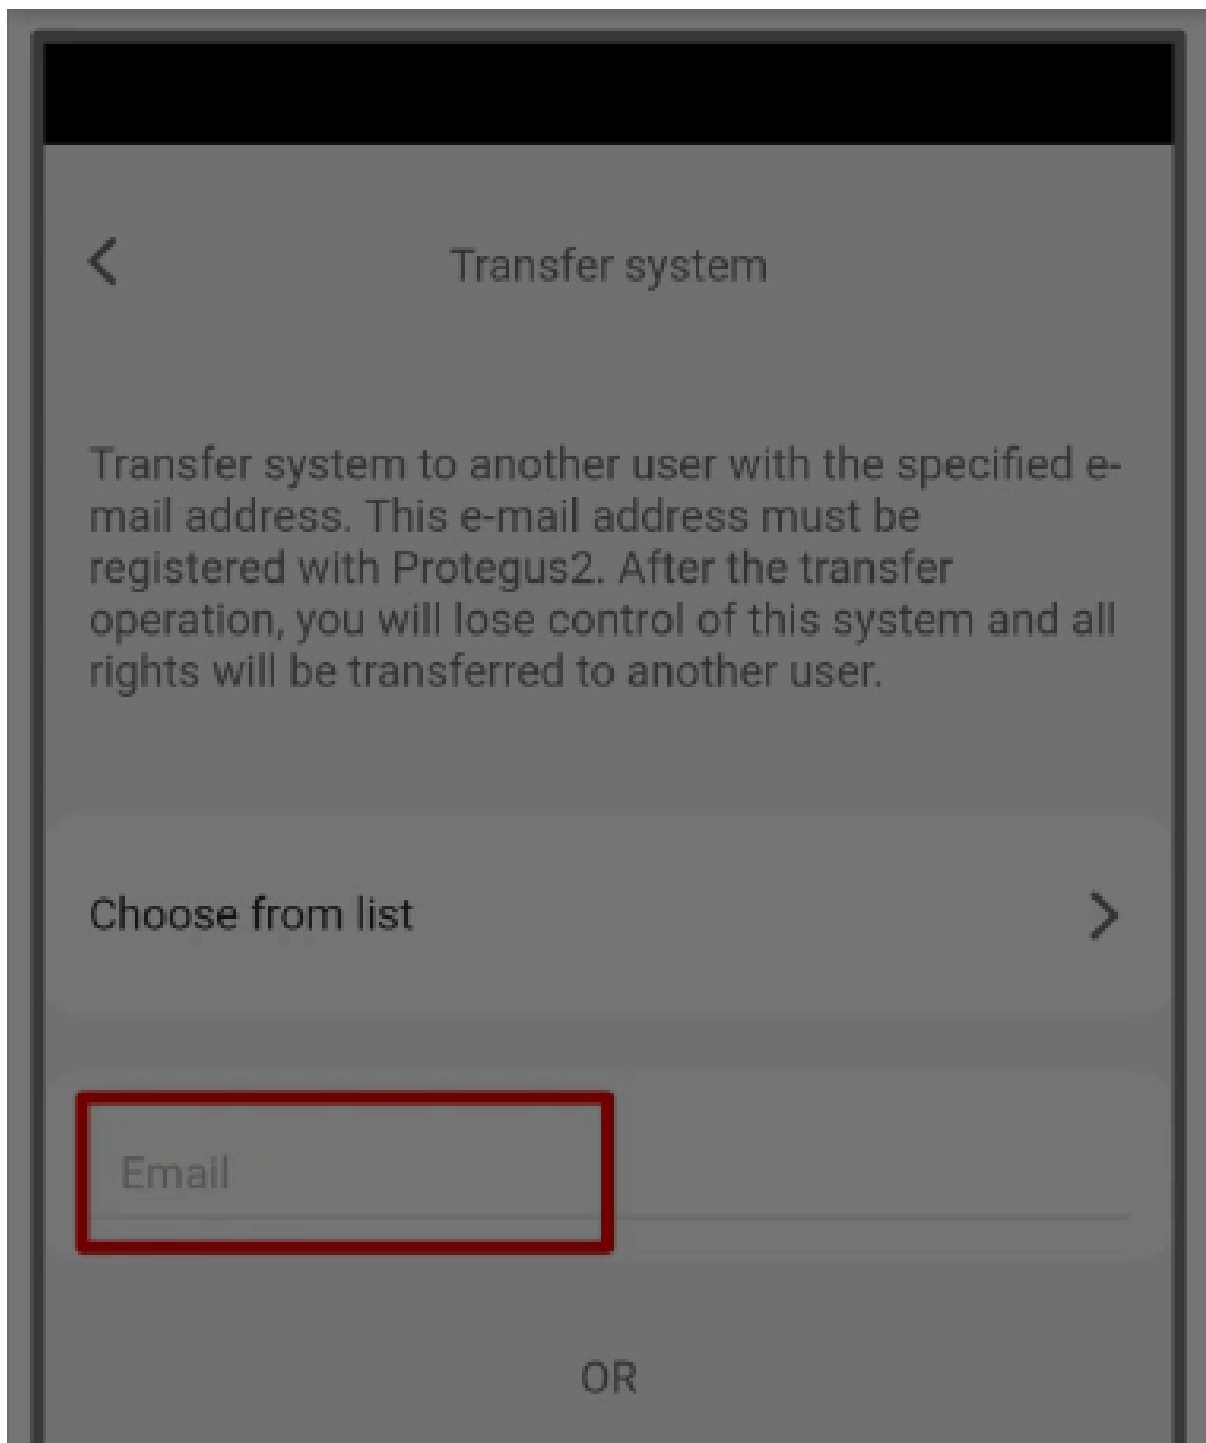


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



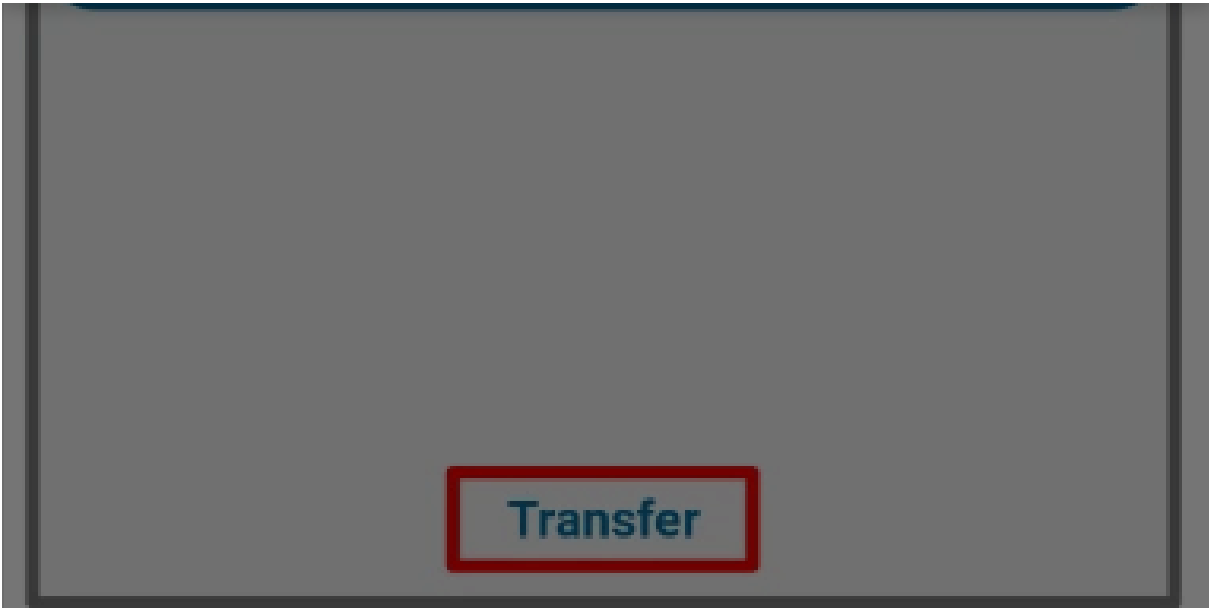

Transfer


Paso 14. El sistema aparecerá en Protegus en el teléfono del usuario.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



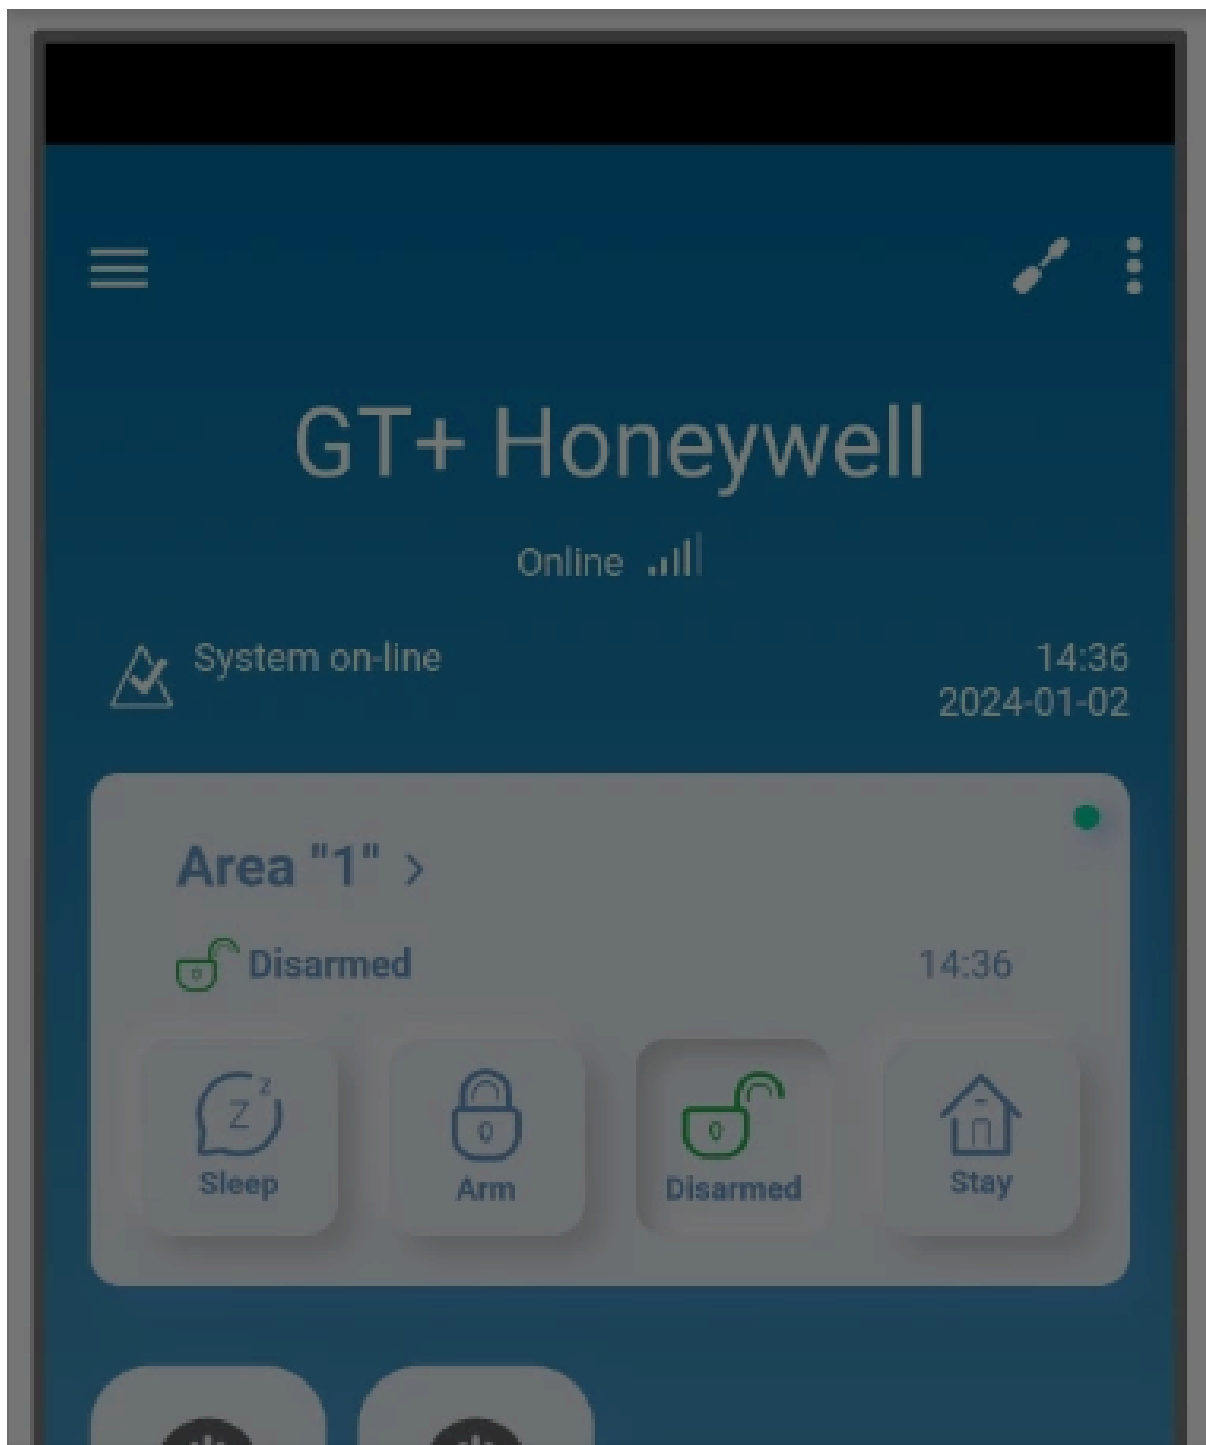

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



CONSEJO

Después de completar la configuración y la instalación realice una comprobación del sistema:

1. Cree un evento:

- armando/desarmando el sistema con el teclado del panel de control.
- provocando una alarma de zona cuando el sistema de seguridad está armado.

2. Asegúrese de que el evento llegue al CMS (Central Monitoring Station) y a la aplicación Protegus2.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

