

КОММУНИКАТОРЫ

Interlogix NX-4V2 / NX-6V2 с GT/GT+/GET быстрая настройка



GT product
image

GT



GT+ product
image

GT+



GET product
image

GET

Краткие шаги по подключению и программированию для подключения коммуникатора GT/GT+/GET к панелям Interlogix NX-4V2, Interlogix NX-6V2 через KeyBus, затем добавления системы в Protegus2. Используйте вместе с полными руководствами для остальных настроек. (Обозначения клемм на GT/GT+/GET могут немного отличаться, но подключения одинаковые.)



ОСТОРОЖНО

Установку и обслуживание должны выполнять только квалифицированные специалисты. Перед подключением отключите питание. Несанкционированные изменения аннулируют гарантию.

1. Требования

1. Прошивка GT/GT+/GET 1.21, SIM-карта установлена, PIN отключен, активен тариф с передачей данных.
2. Панель Interlogix NX-4V2 / NX-6V2 с доступом к клавиатуре (есть код установщика).
3. Номер учетной записи CMS, если используется передача в CMS.
4. Учетная запись компании/установщика Protegus2 и IMEI коммуникатора.

Cookie consent


We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.



Google Analytics

Accept

Reject

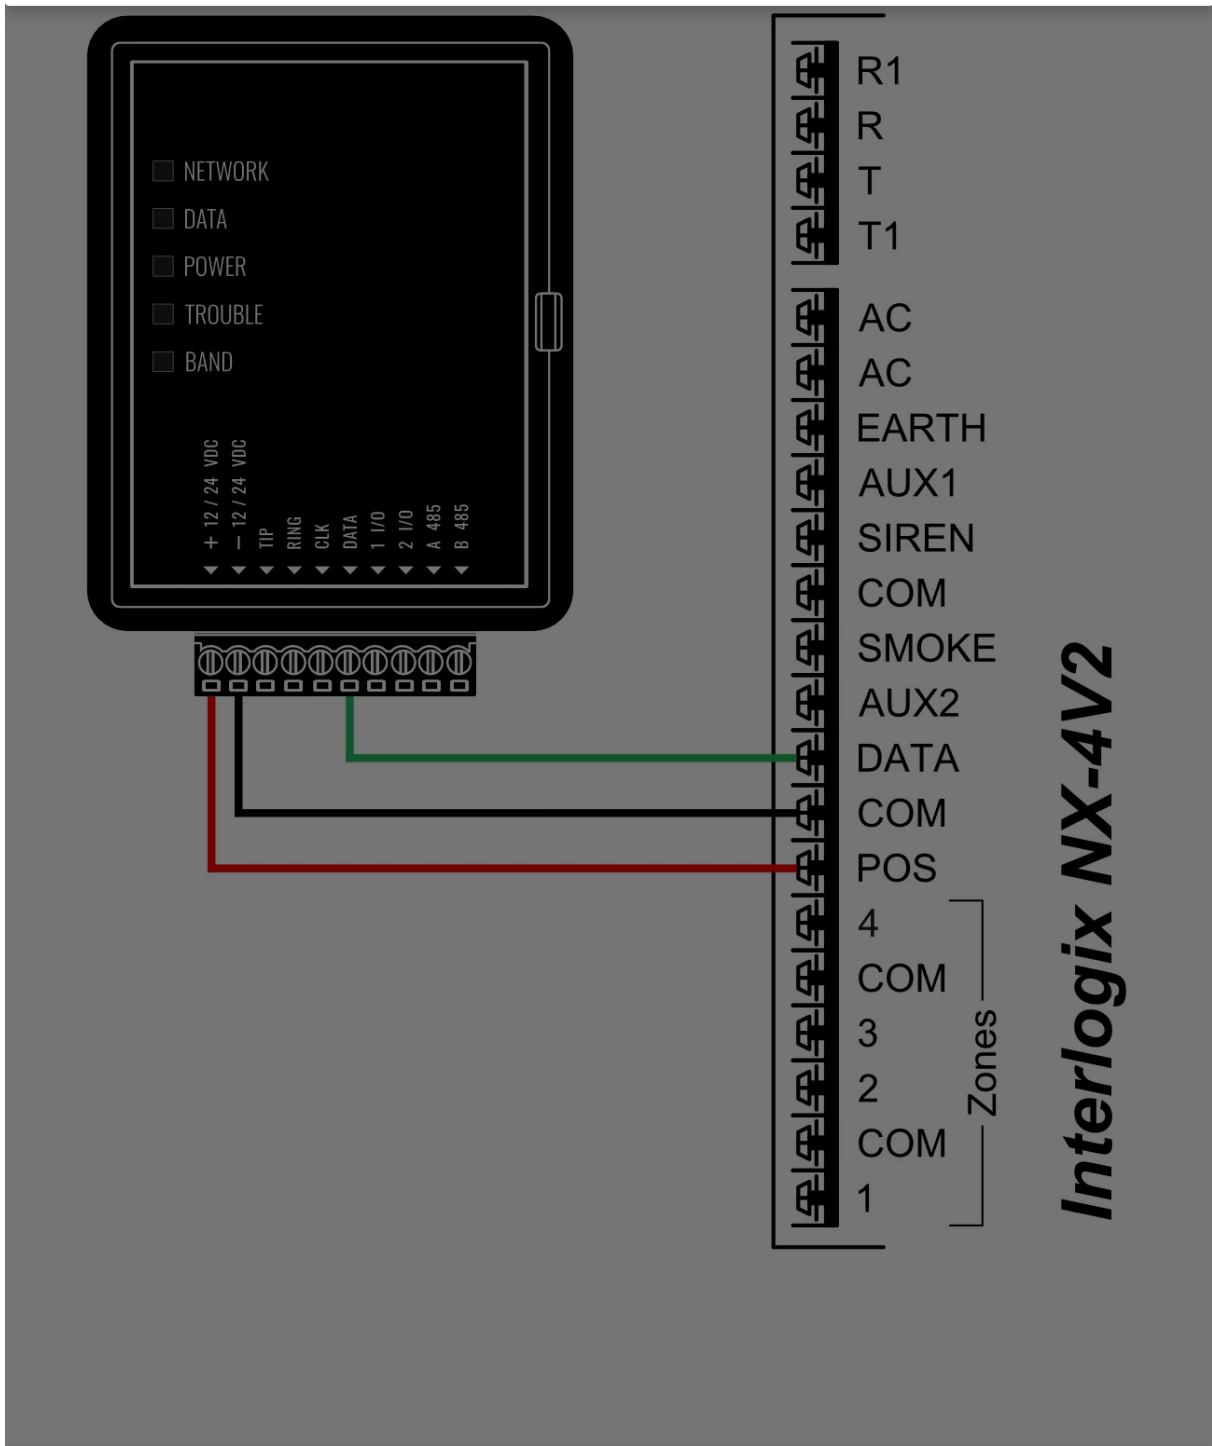


Interlogix NX-4V2

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



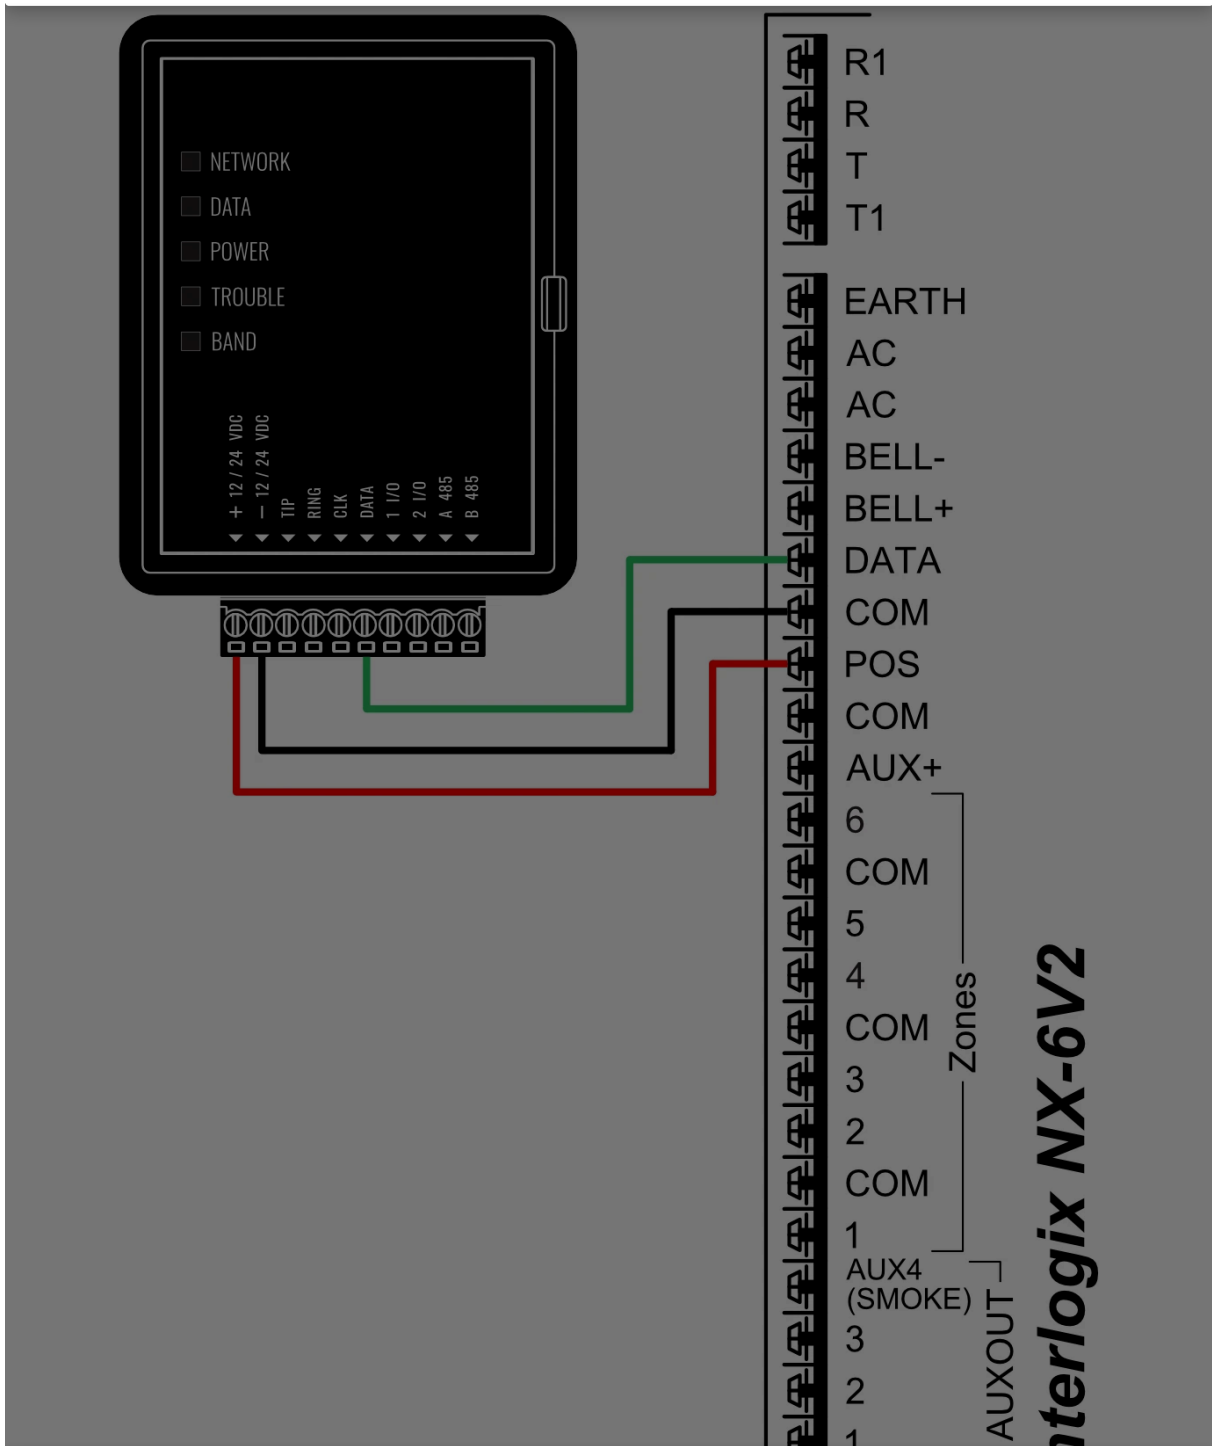

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics

**Включение отчетов Contact ID**

LCD клавиатура	Ввод с клавиатуры	Описание действия
System ready	*89713	Войти в режим программирования
Enter device address	0#	Перейти в главное меню программирования панели
Enter location	4#	Перейти в меню переключателей "Phone1 events reported"
Loc#4 Seg#1	12345678*	Все переключатели должны быть включены. * сохранить и перейти к следующему меню
Loc#4 Seg#2	12345678*	Все переключатели должны быть включены. * сохранить и вернуться назад
Enter location	23#	Перейти в меню "Partition features".
Loc#23 Seg#1	**	Нажмите * дважды, чтобы перейти в меню переключателей секции 3.
Loc#23 Seg#3	12345678*#	Секция 3. Все переключатели должны быть включены, нажмите * для сохранения, затем # для сохранения и # для возврата в главное меню.
Enter location	37#	Перейти в меню "Siren and system supervision".
Loc#37 Seg#1	**	Нажмите * дважды, чтобы перейти в меню переключателей секции 3.
Loc#37 Seg#3	12345678*	Секция 3. Все переключатели должны быть включены, нажмите * для сохранения.
Loc#37 Seg#4	12345678*#	Секция 4. Все переключатели должны быть включены, нажмите * для сохранения, затем # для сохранения и # для возврата в главное меню.
Enter location	EXIT EXIT	Нажмите "EXIT" дважды, чтобы выйти из режима программирования.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



LED клавиатура	Ввод с клавиатуры	Описание действия
Ready и Power горят постоянно	*89713	Войти в режим программирования
Service мигает	0#	Перейти в главное меню программирования панели
Service мигает, Armed горит постоянно	4#	Перейти в меню переключателей "Phone1 events reported"
Все светодиоды зон горят	12345678*	Все переключатели должны быть включены. * сохранить и перейти к следующему меню
Все светодиоды зон горят	12345678*	Все переключатели должны быть включены. * сохранить и вернуться назад
Service мигает, Armed горит постоянно	23#	Перейти в меню "Partition features and reporting selection".
Service мигает, Ready горит постоянно	**	Нажмите * дважды, чтобы перейти в меню переключателей секции 3.
Service мигает, Ready горит постоянно	12345678*#	Секция 3. Все переключатели должны быть включены, нажмите * для сохранения, затем # для сохранения и # для возврата в главное меню.
Service мигает, Armed горит постоянно	37#	Перейти в меню "Siren and system supervision".
Service мигает, Ready горит постоянно	**	Нажмите * дважды, чтобы перейти в меню переключателей секции 3.
Service мигает, Ready горит постоянно	12345678*	Секция 3. Все переключатели должны быть включены, нажмите * для сохранения.
Service мигает, Ready горит постоянно	12345678*#	Секция 4. Все переключатели должны быть включены, нажмите * для сохранения, затем # для сохранения и # для возврата в главное меню.
Service мигает, Armed горит постоянно	EXIT EXIT	Нажмите "EXIT" дважды, чтобы выйти из режима программирования.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Шаг 2. Введите **IMEI** коммуникатора, нажмите **Next**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




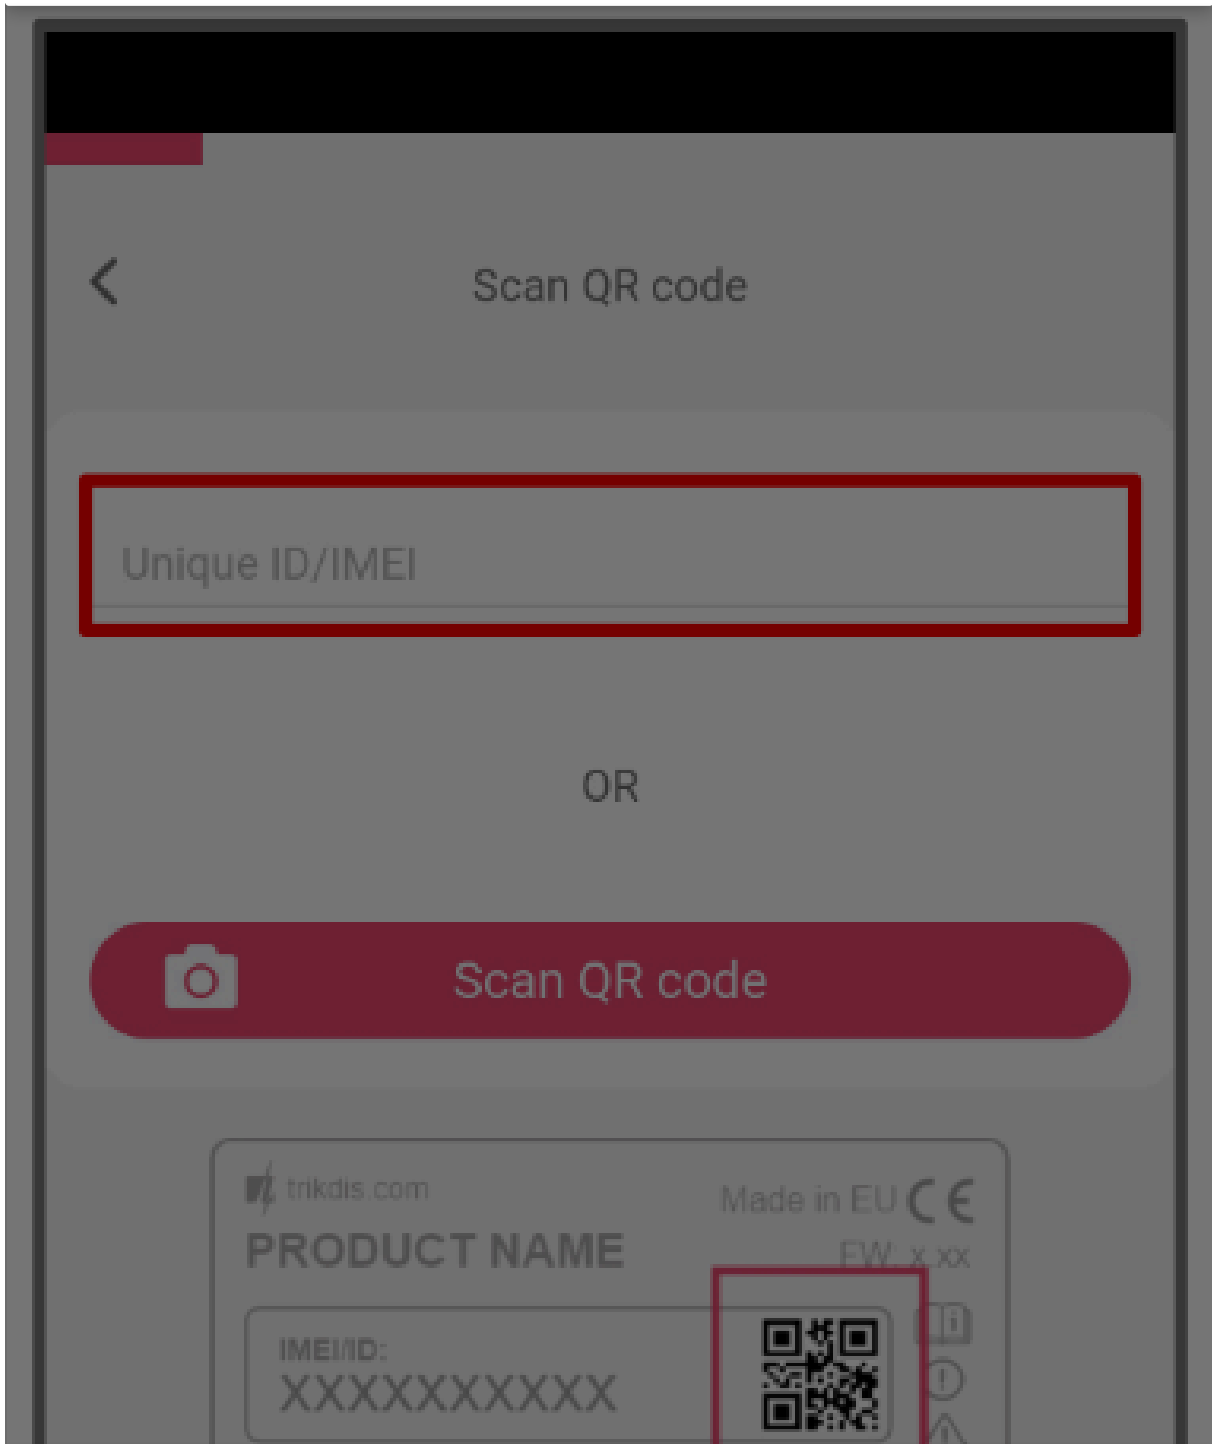

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

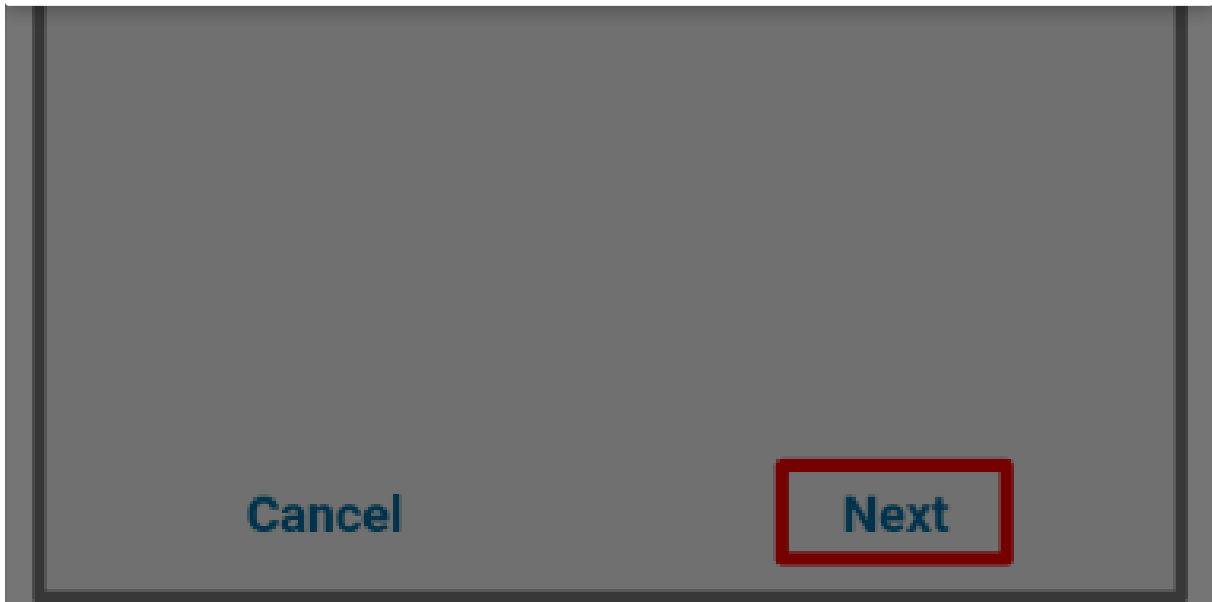


Шаг 3. Выберите охранную компанию.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



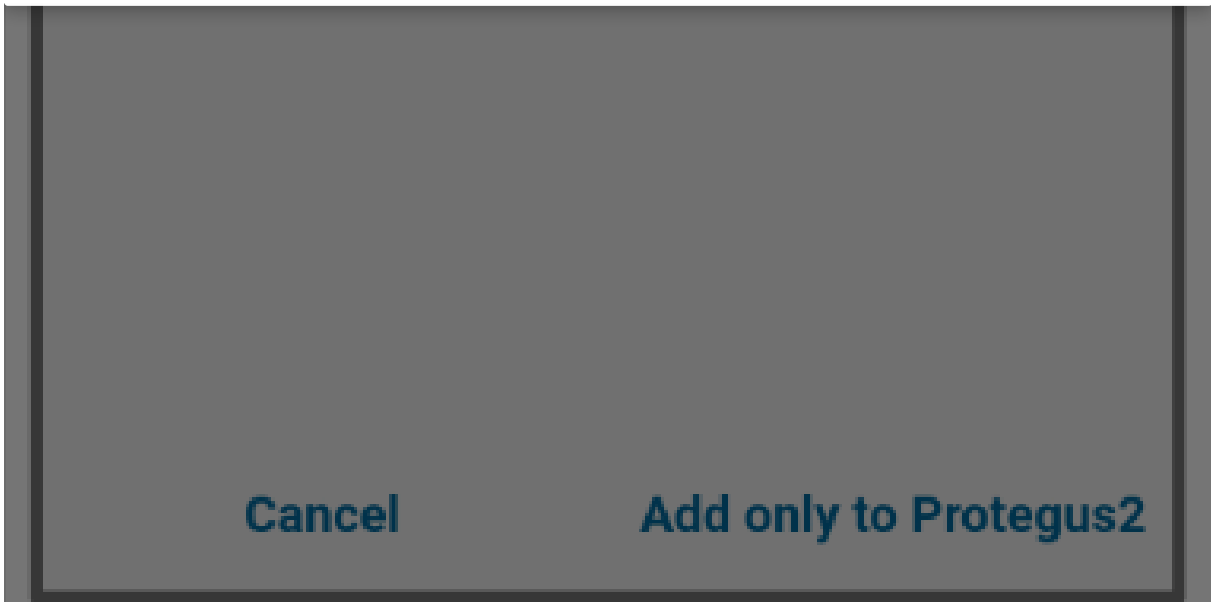


Шаг 4. Выберите **Interlogix**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



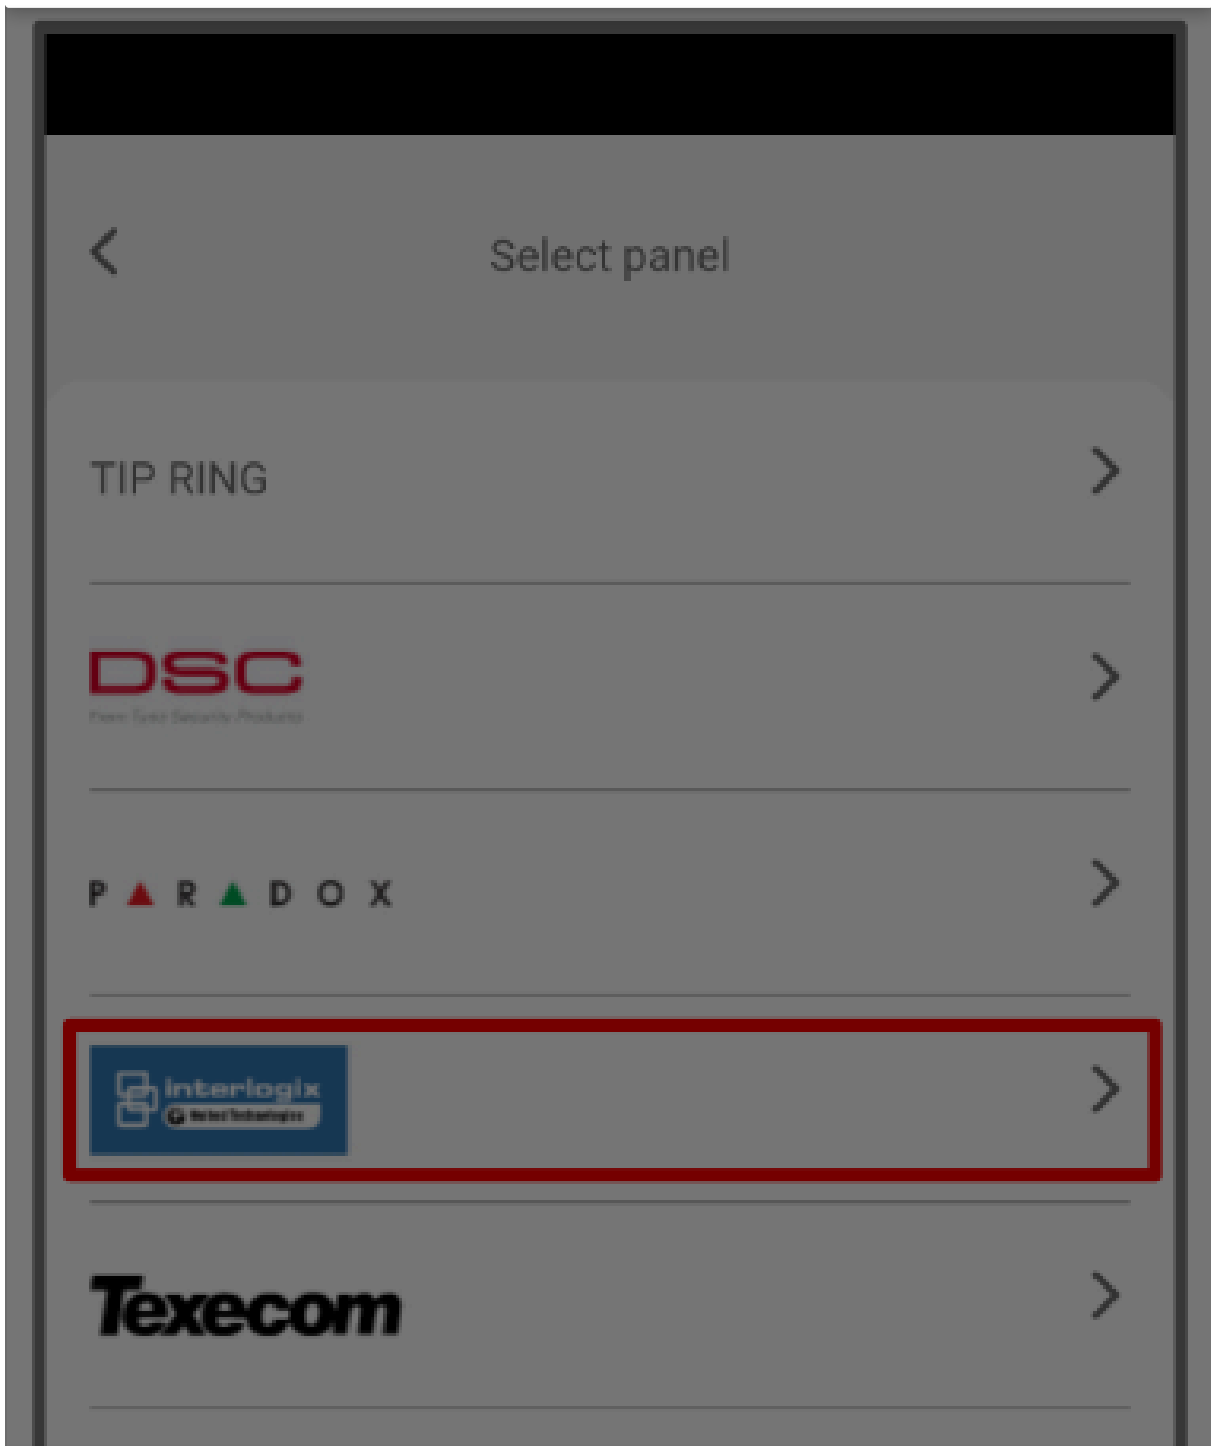

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel

Шаг 5. Выберите **NX-4 (NX-6)**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Шаг 6. Введите **Object ID** и **Module ID**, нажмите **Next**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



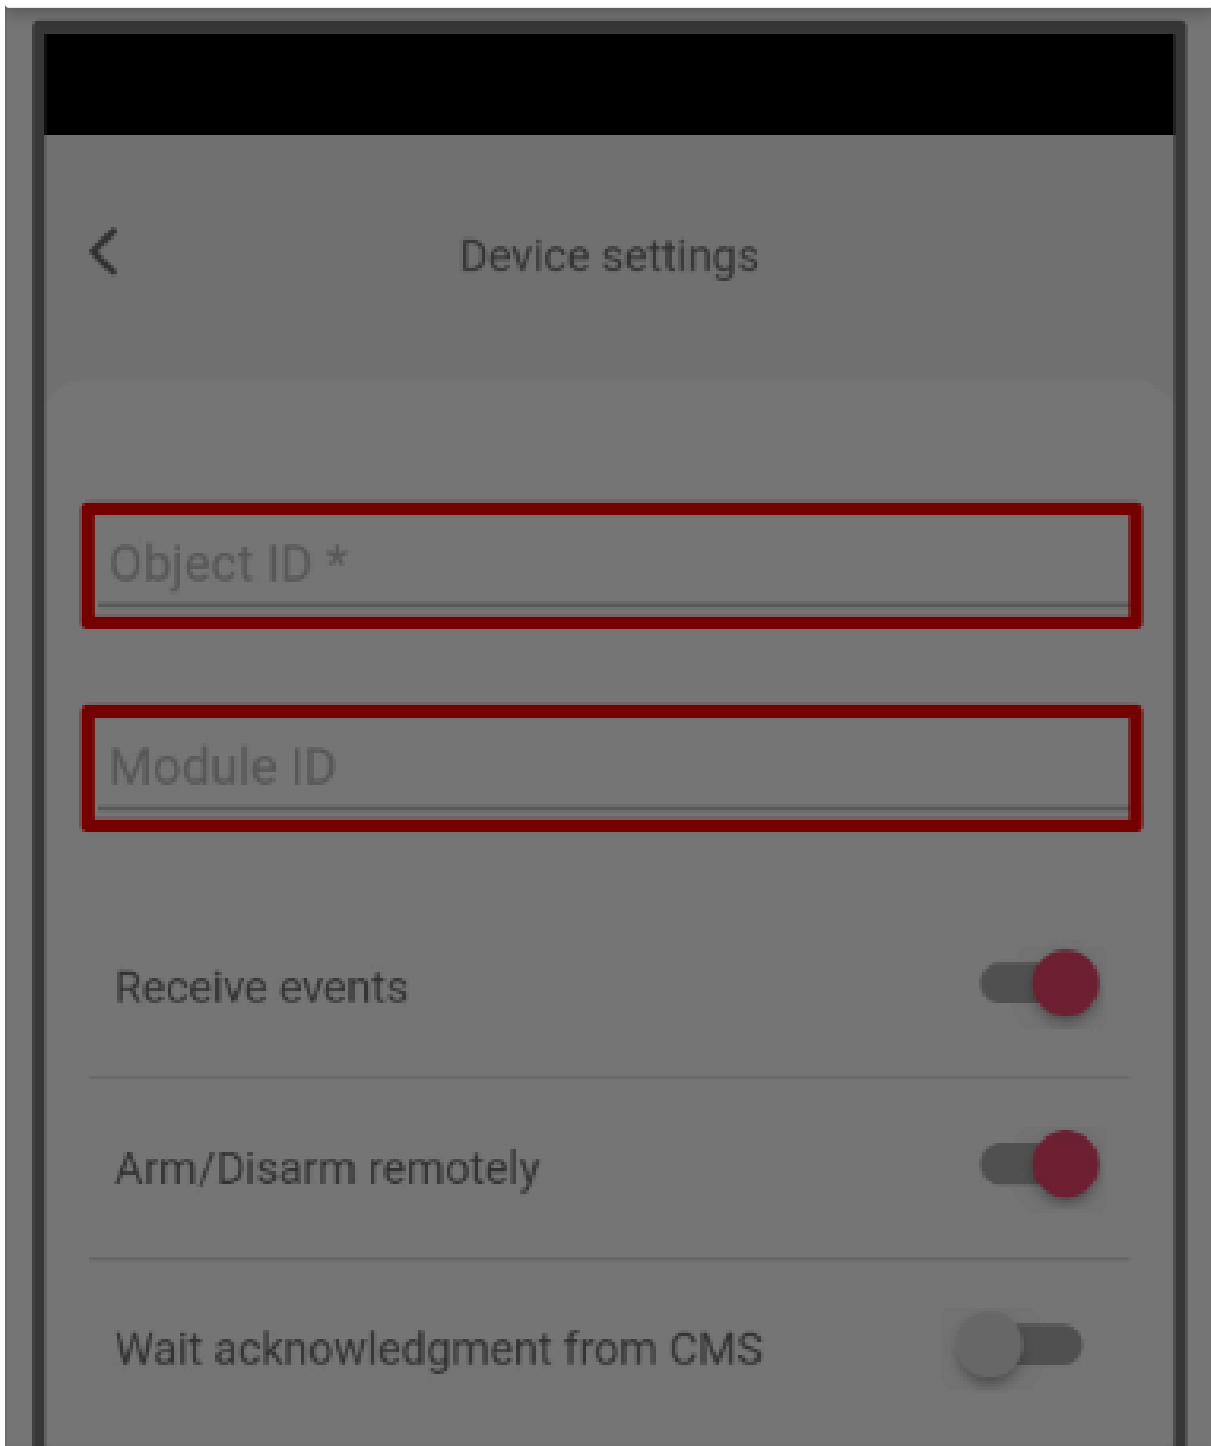


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



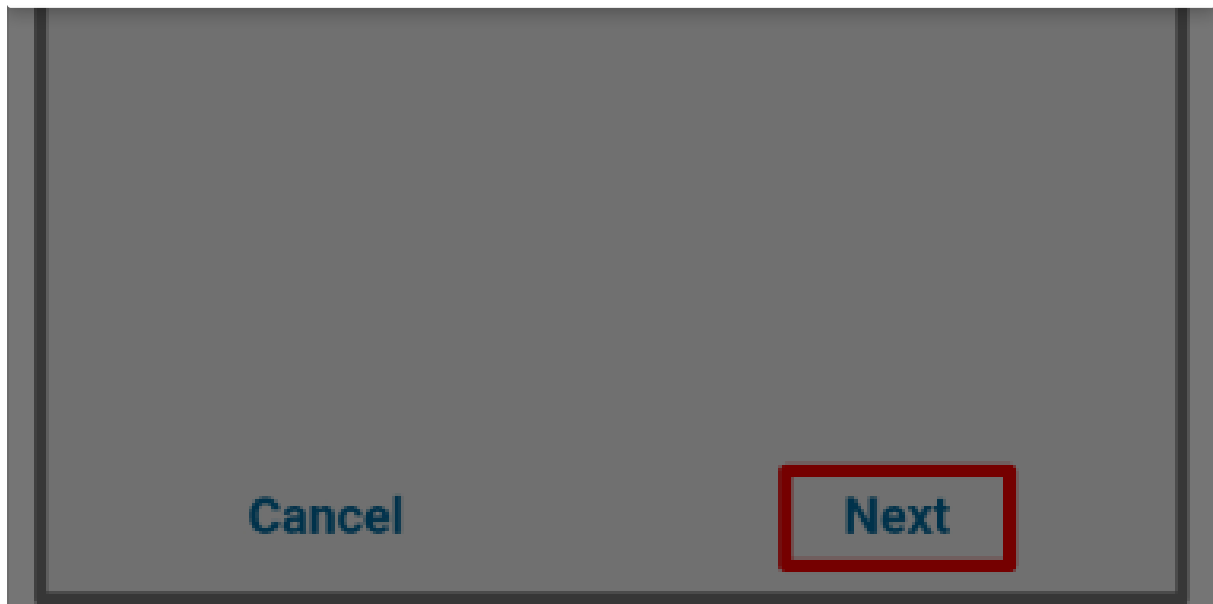


Шаг 7. Подождите, пока записываются данные.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



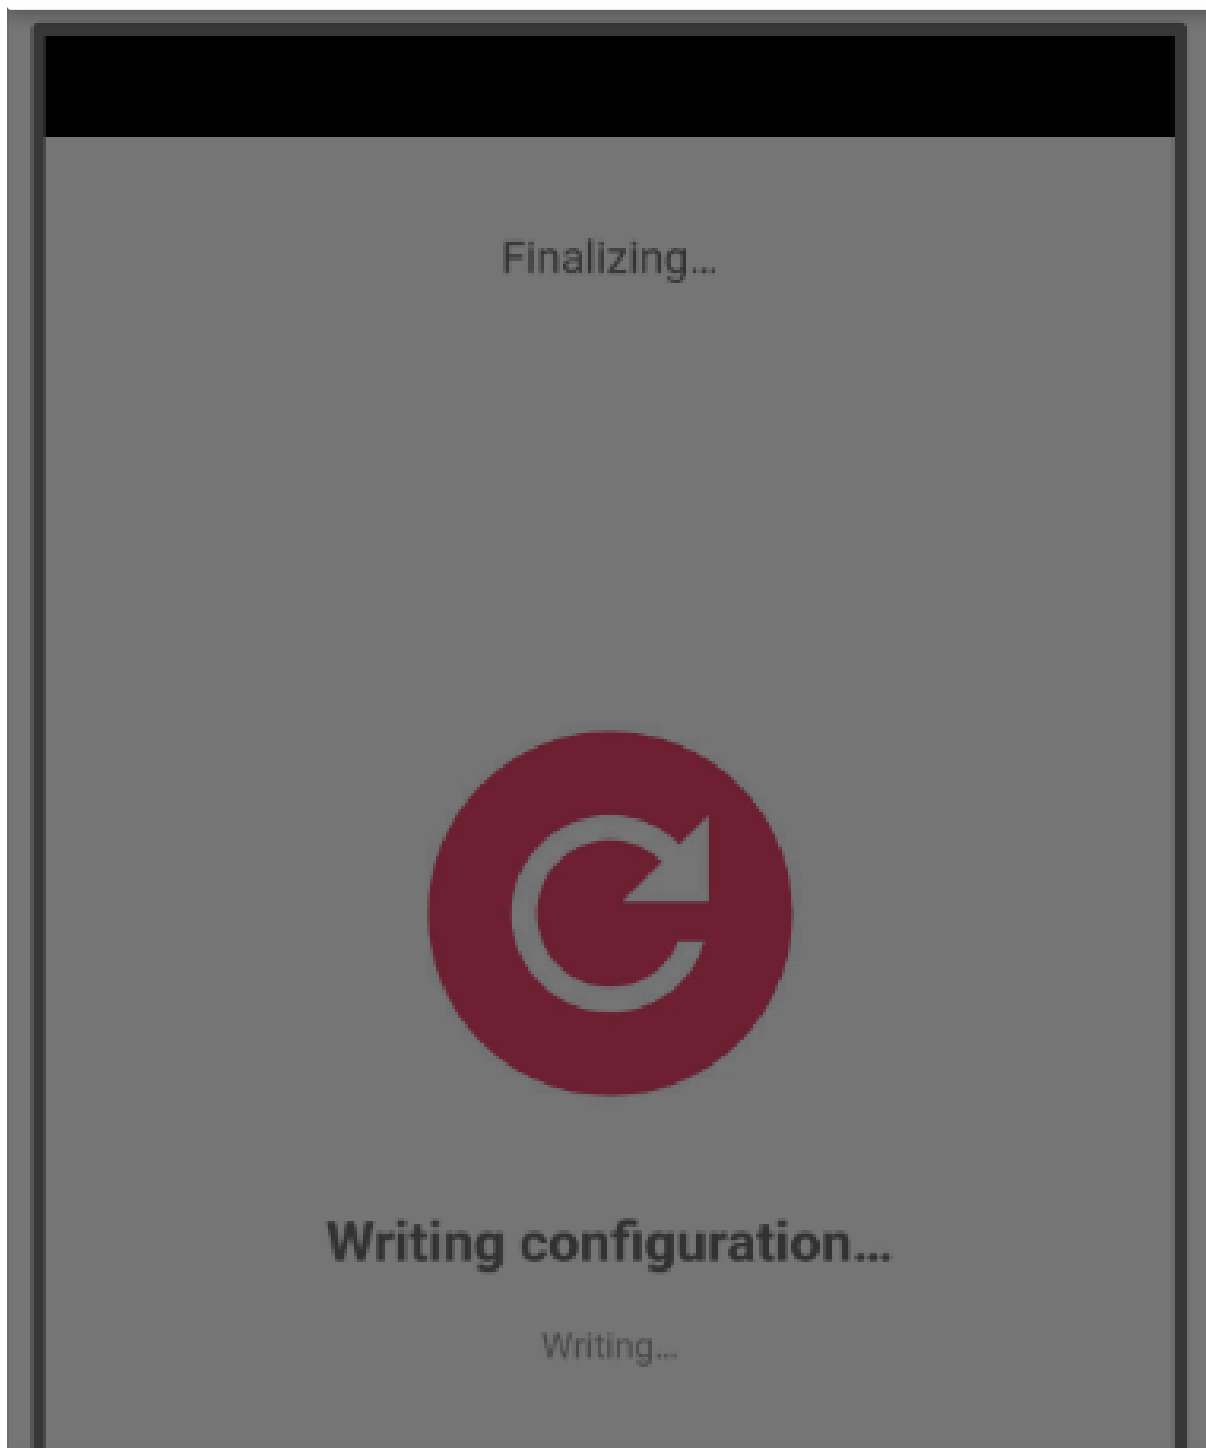

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


Шаг 8. Нажмите **Add to Protegus2**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




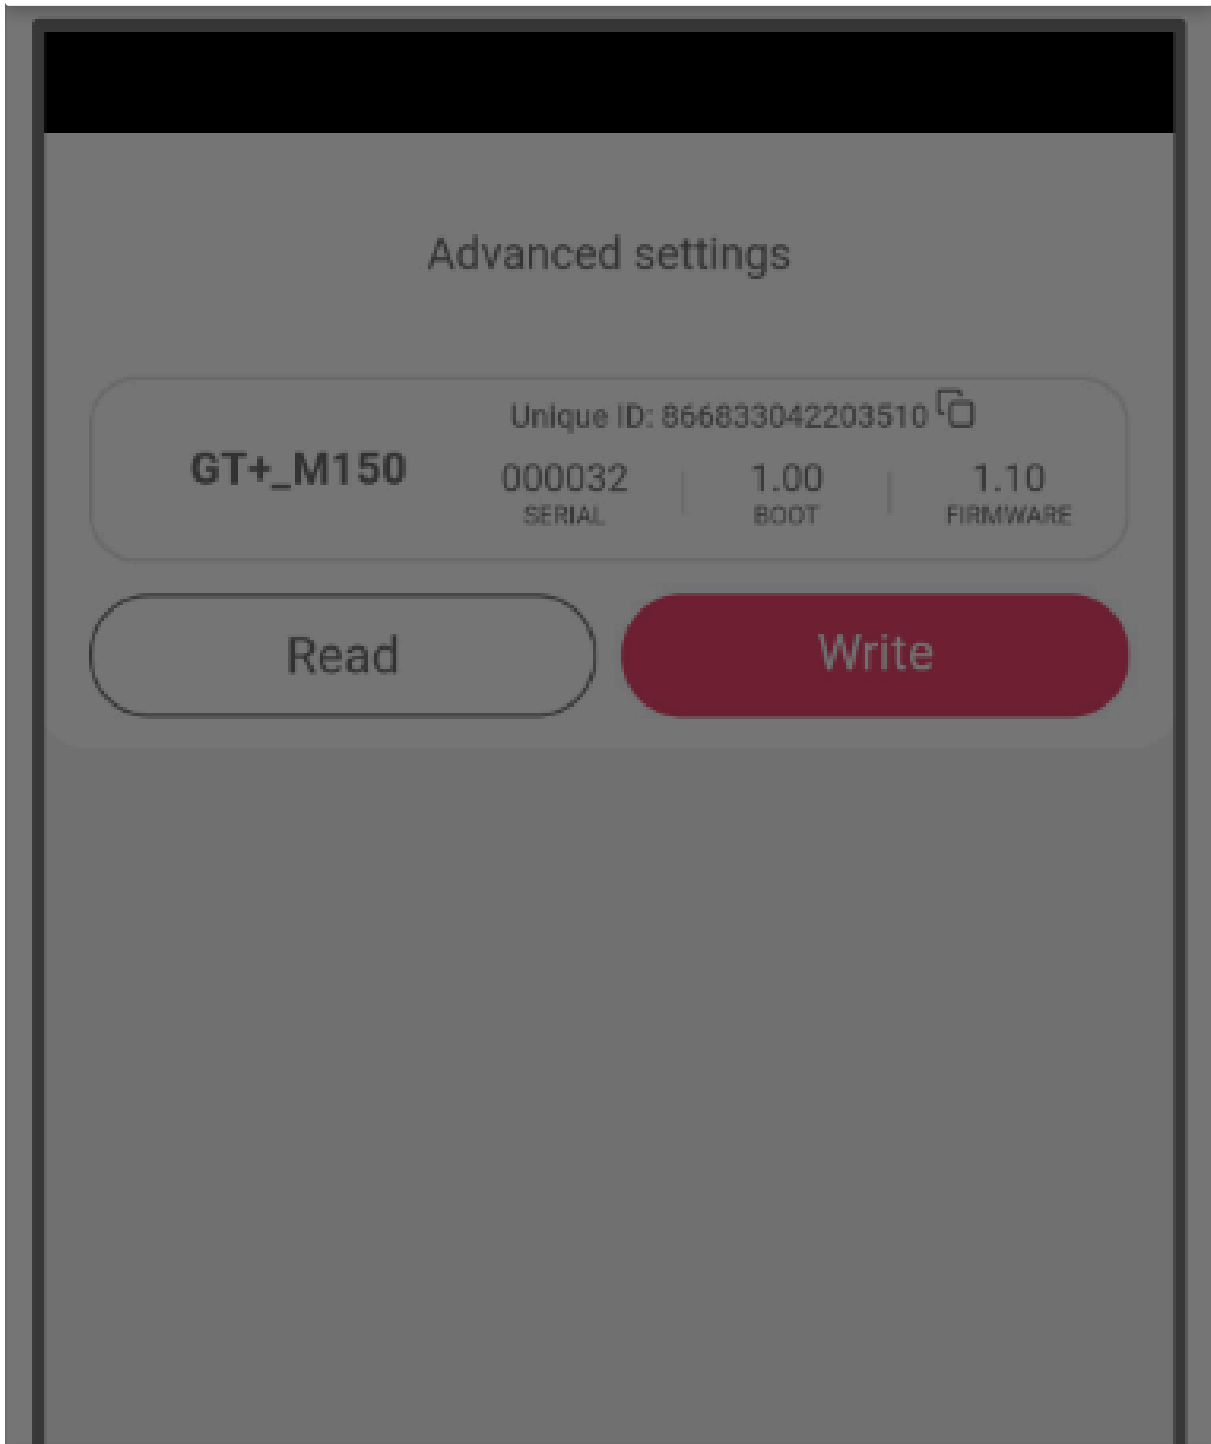

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

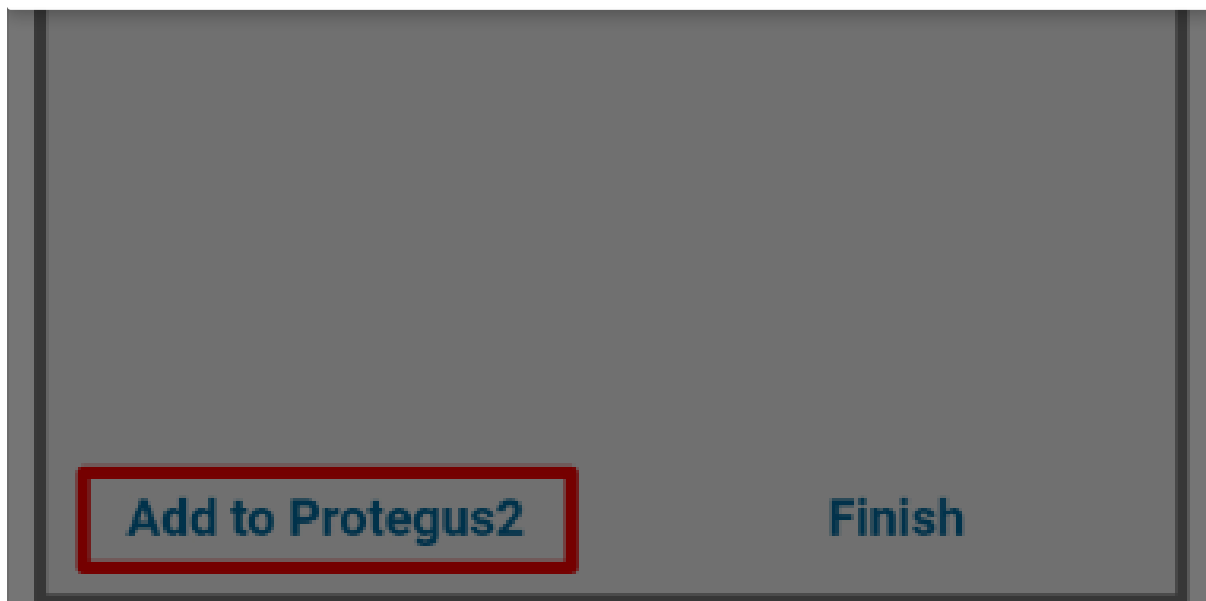


Шаг 9. Введите **Name** системы, нажмите **Next**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



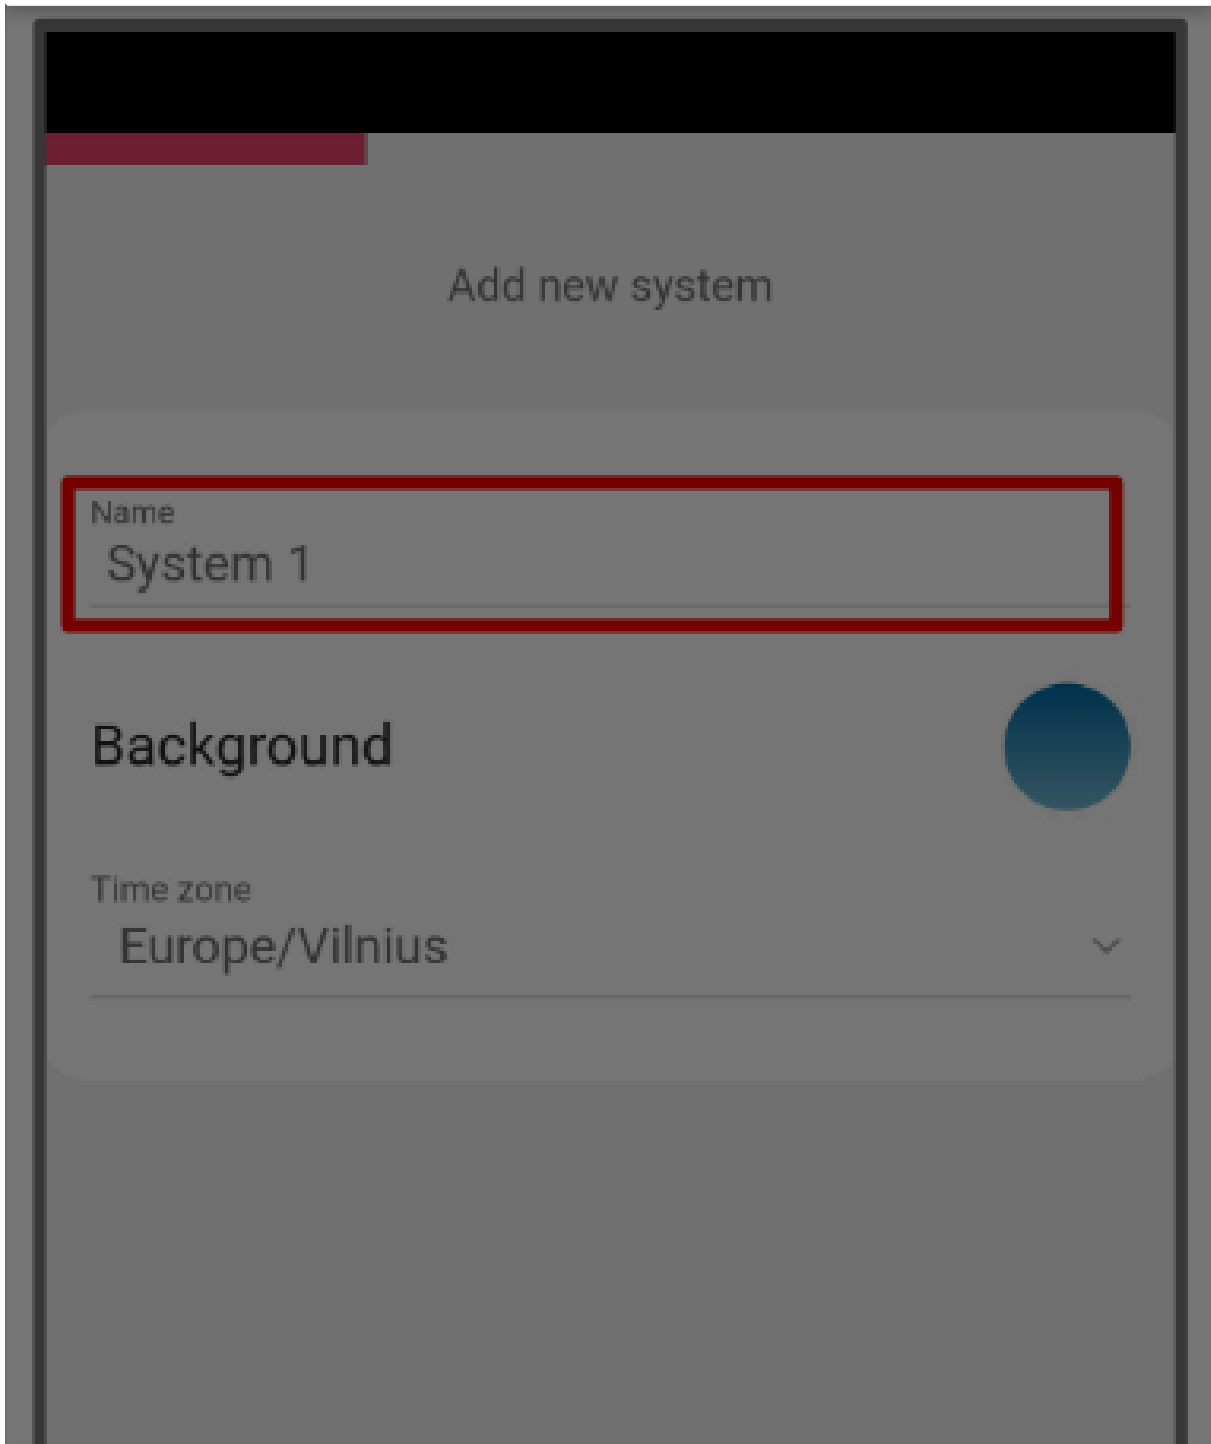


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



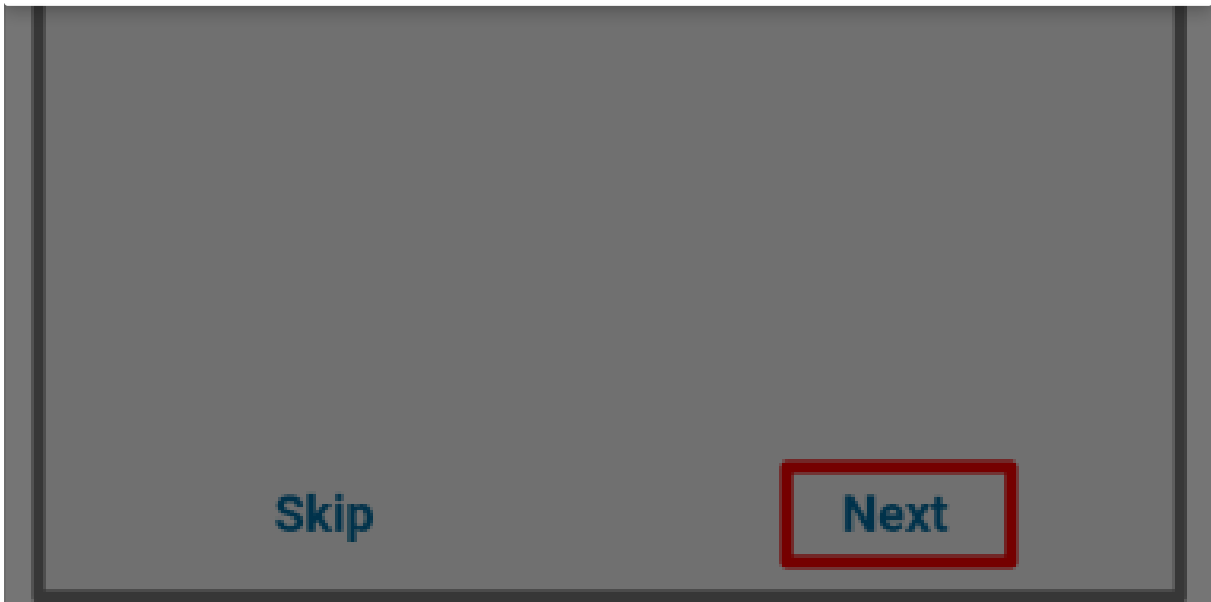


Шаг 10. Нажмите **Skip**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




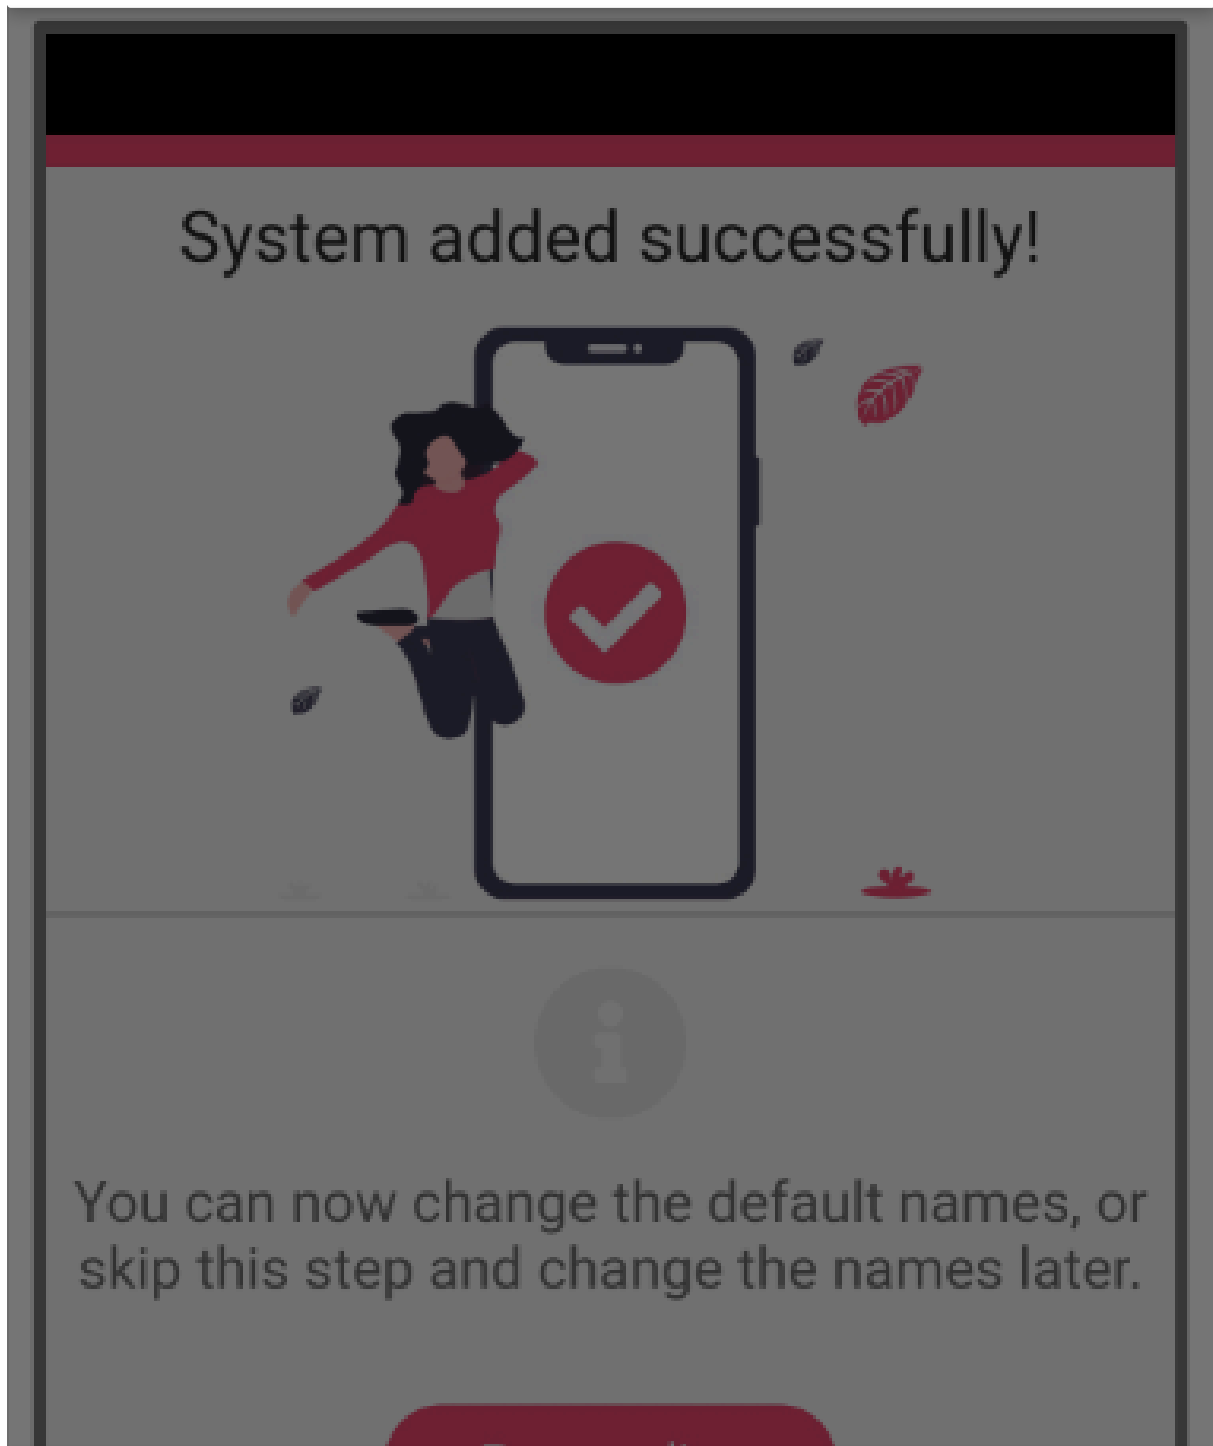

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




Шаг 11. Нажмите на систему.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



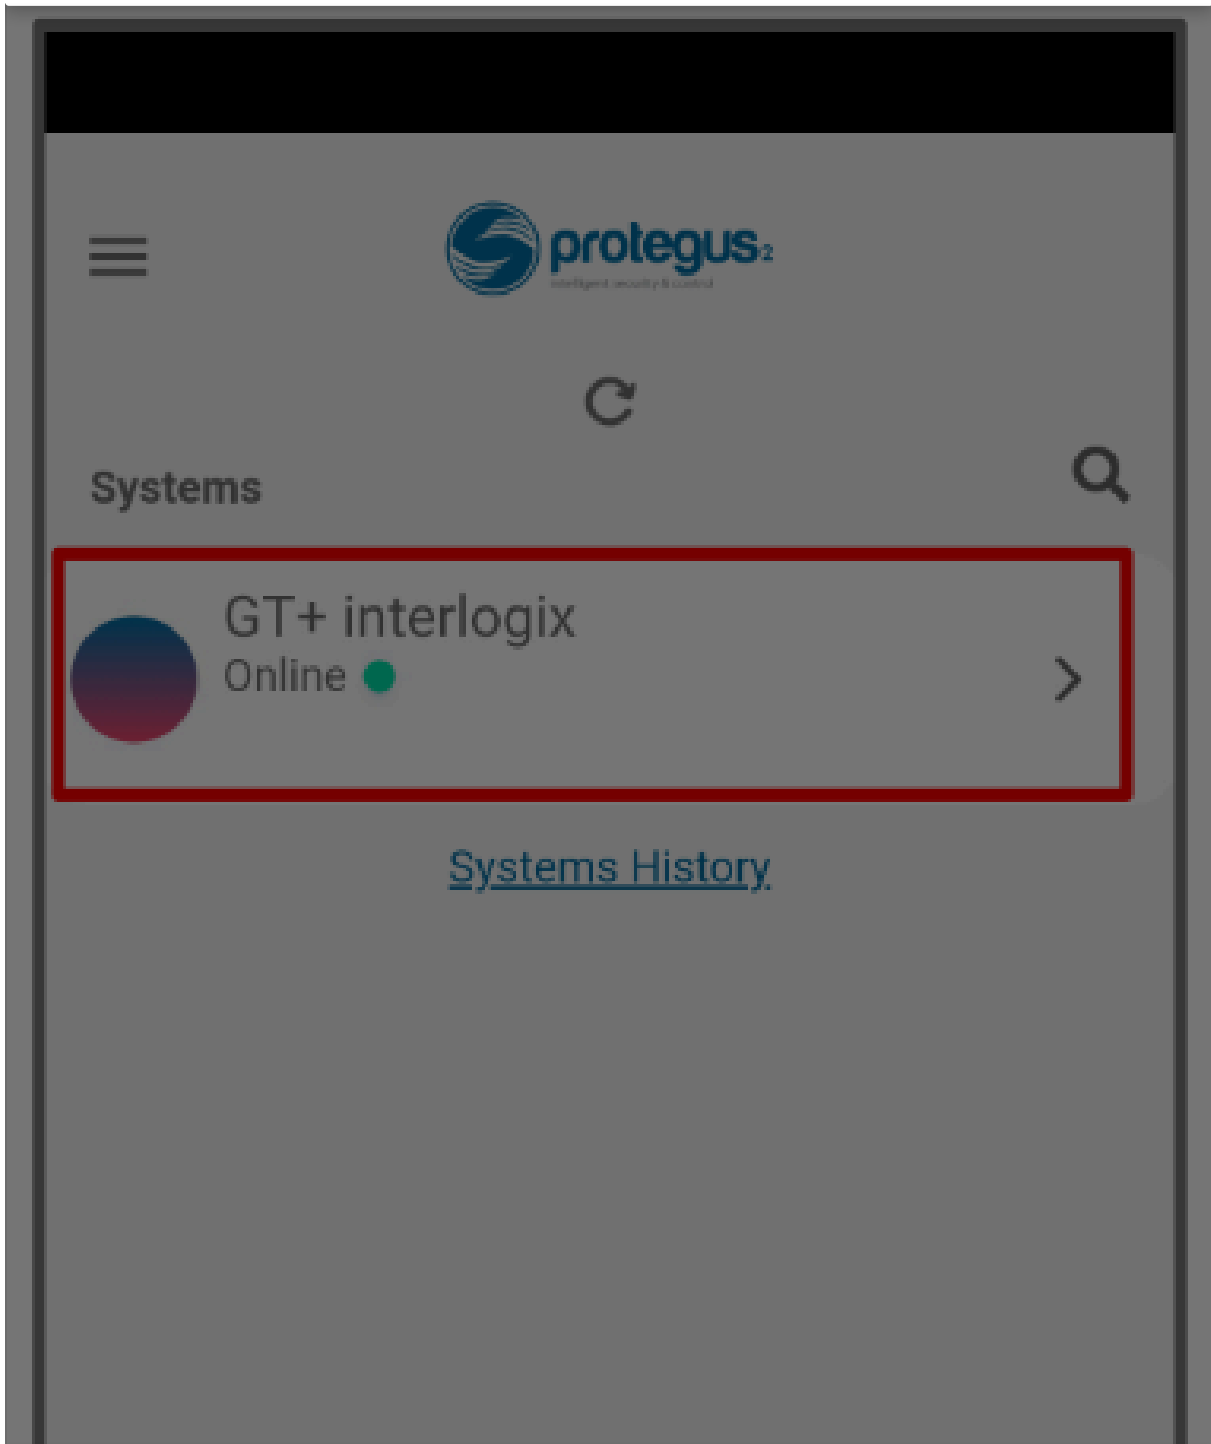

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






Шаг 12. Подождите 1 минуту для завершения и нажмите **Transfer**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




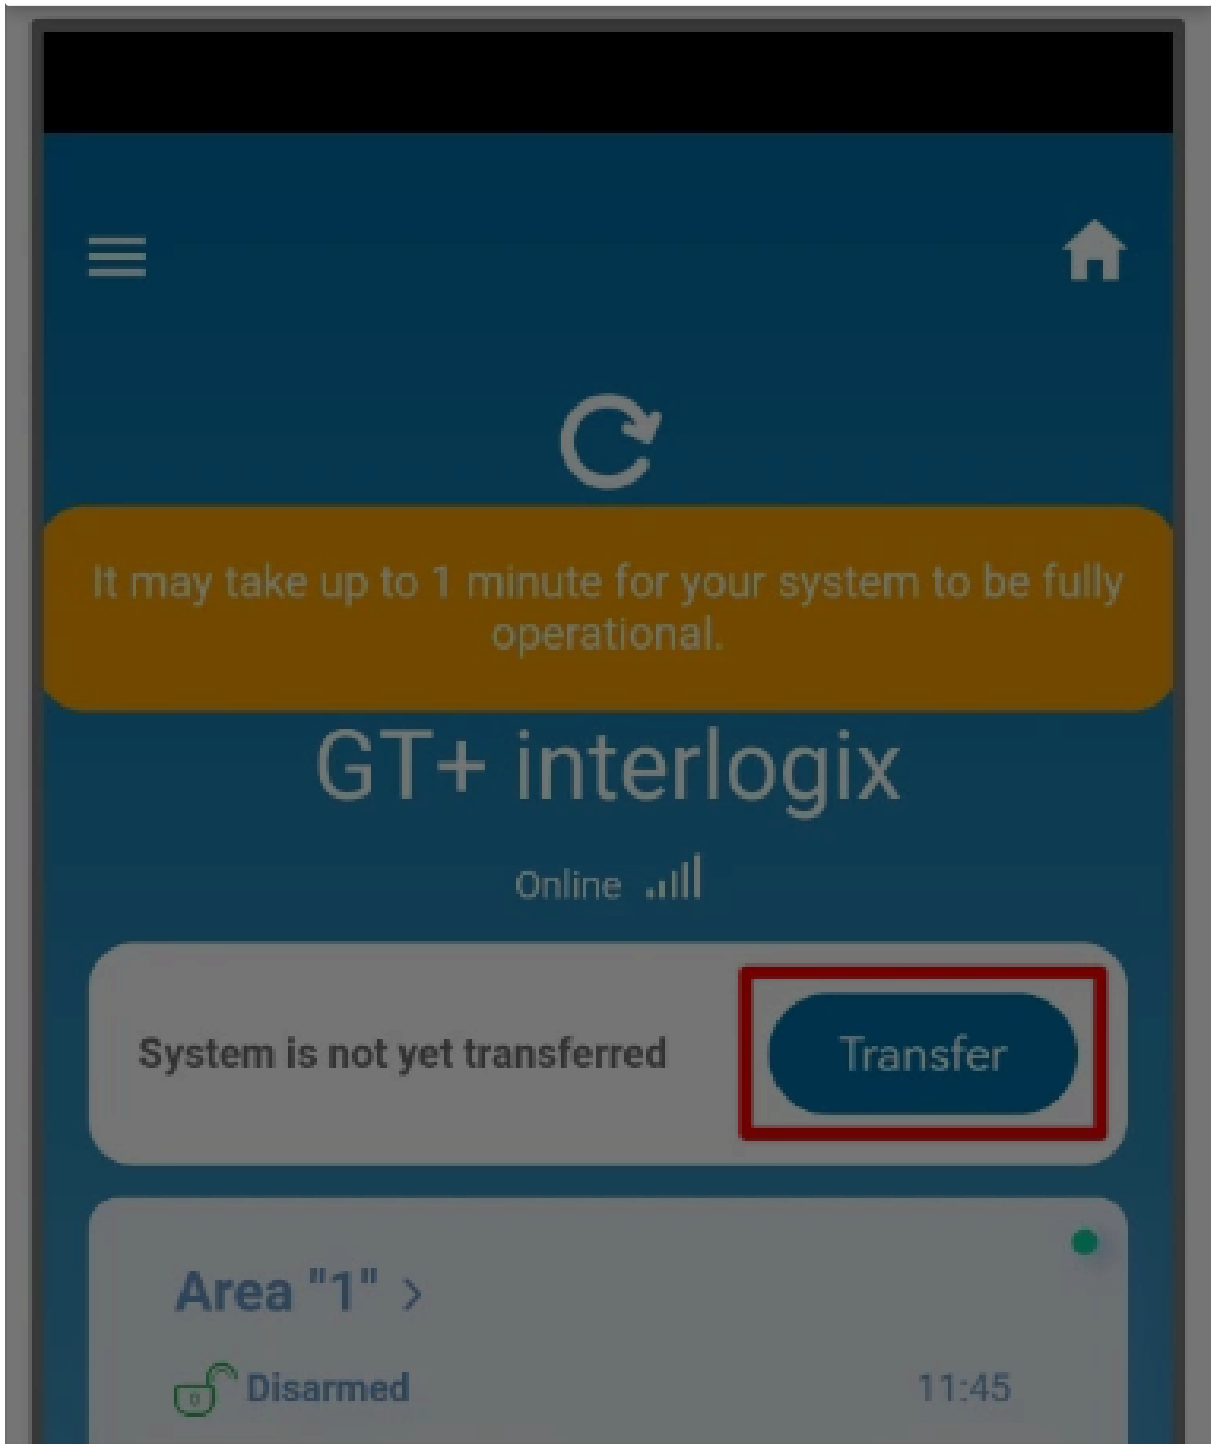

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

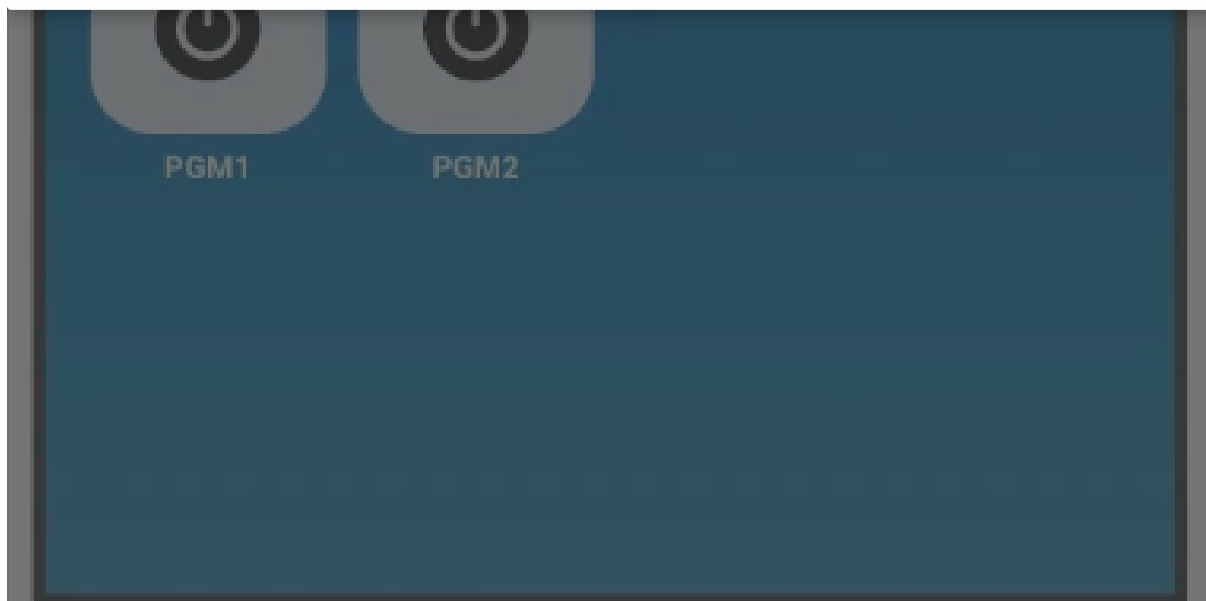


Шаг 13. Введите e-mail пользователя, которому установщик передаст систему.
Нажмите **Transfer**.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



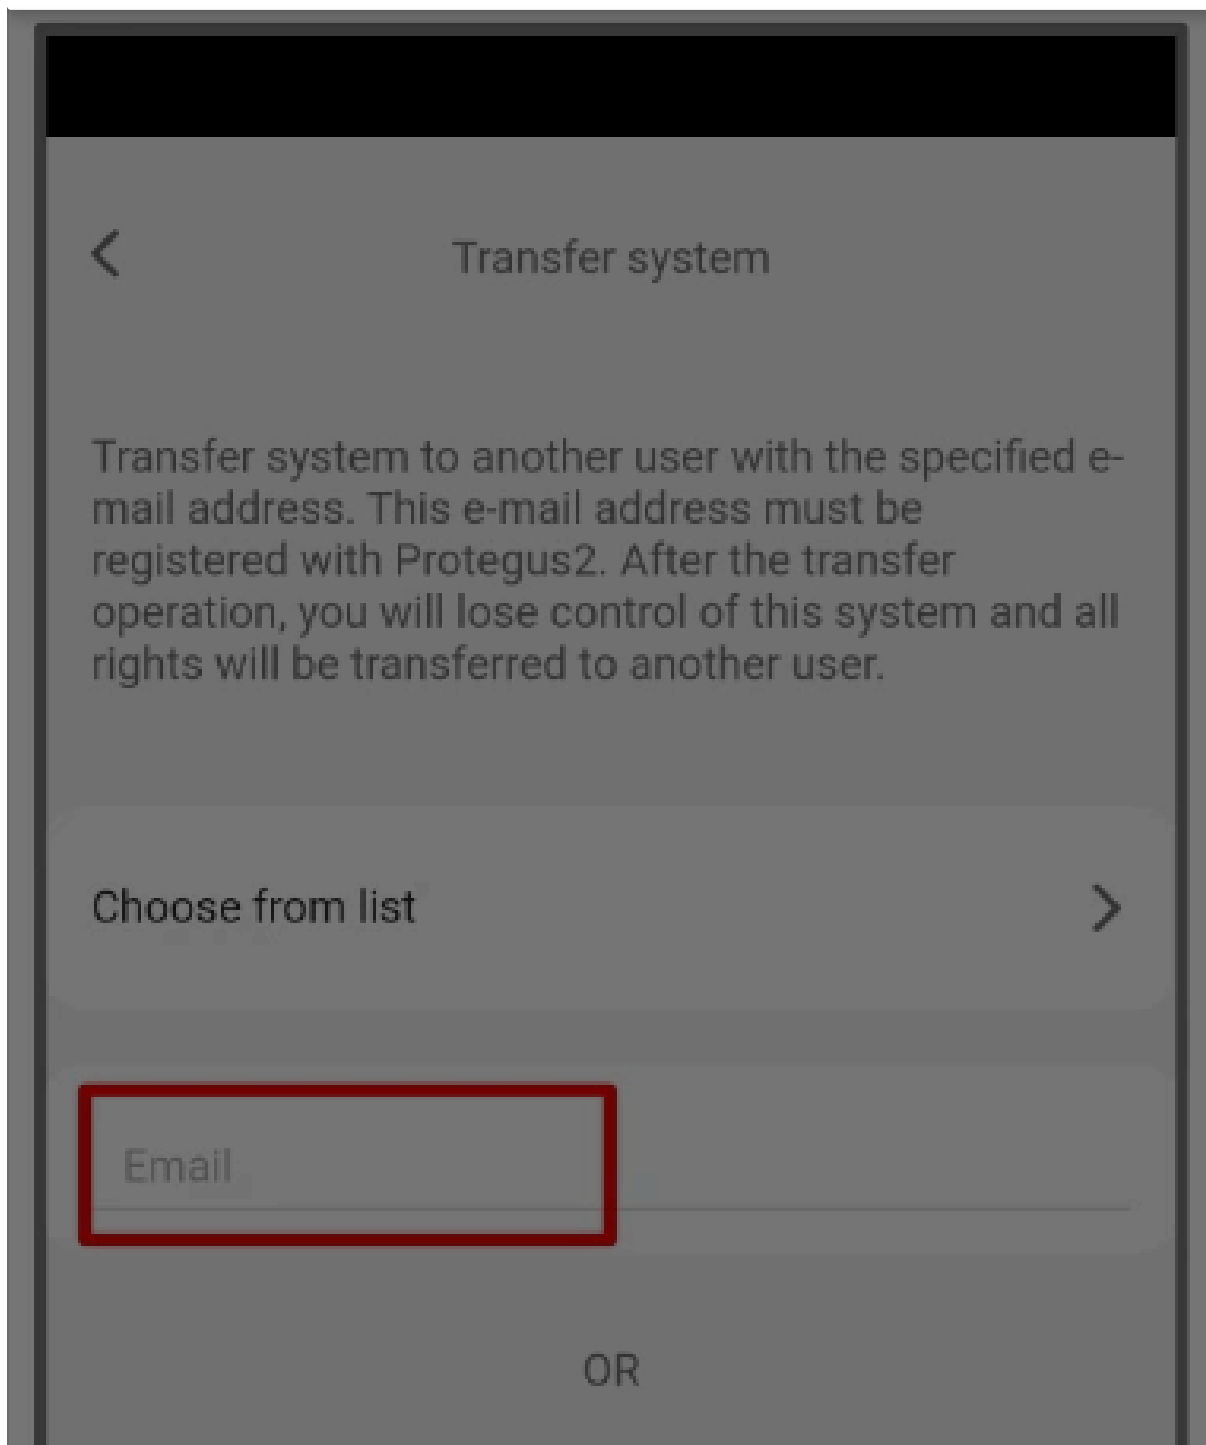


Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



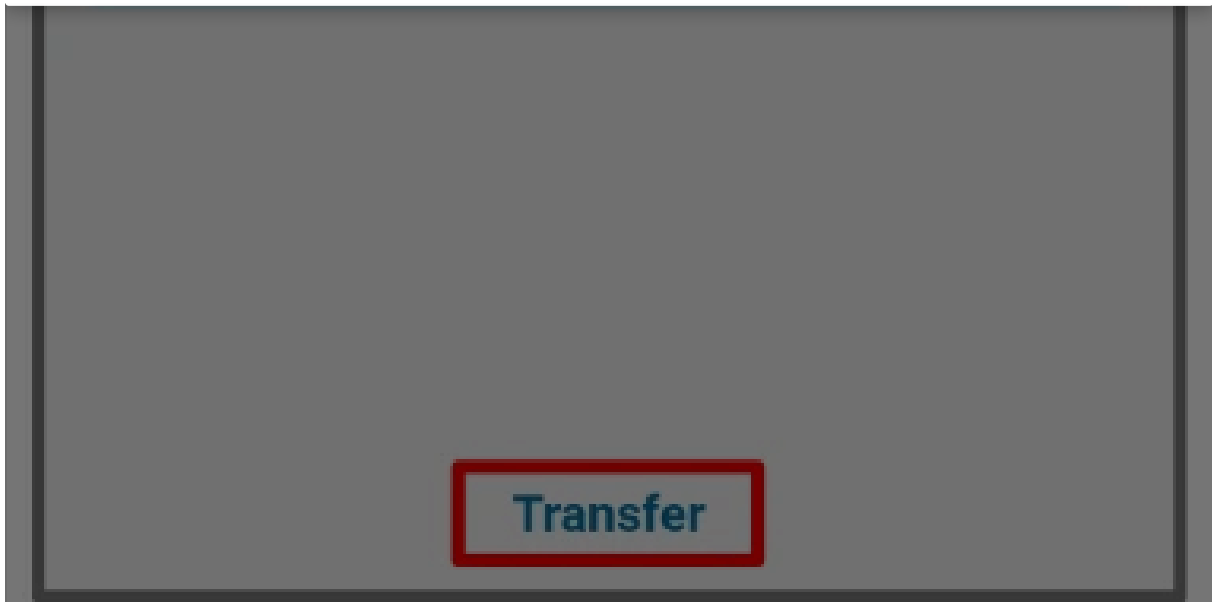


Шаг 14. Система появится в Protegus на телефоне пользователя.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



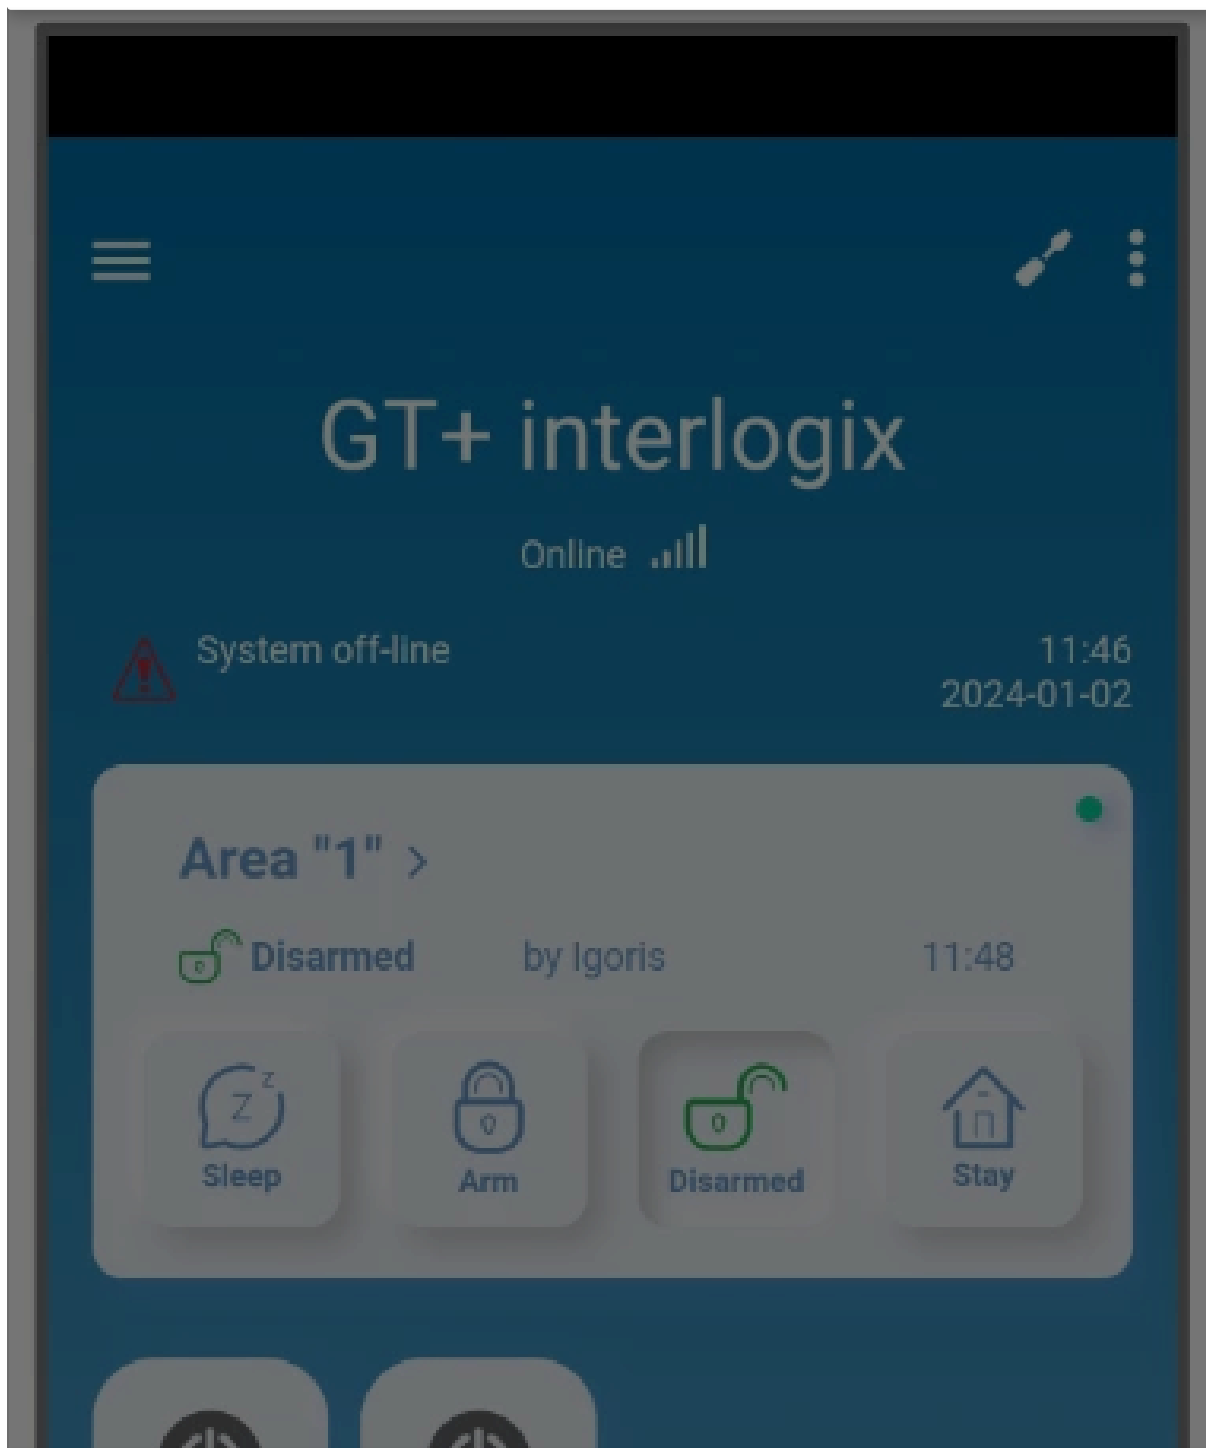

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





СОВЕТ

После завершения установки и настройки выполните проверку системы:

1. Создайте событие:

- поставьте/снимите систему с охраны с клавиатуры панели управления.
- вызовите тревогу зоны при включенной охране.

2. Убедитесь, что событие поступает в CMS (Central Monitoring Station) и в приложение Protegus2.

Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

