

COMMUNICATORS

# Interlogix NX-4v2 / NX-6v2 with GT/GT+/GET quick setup



GT product image

GT



GT+ product image

GT+



GET product image

GET

Short wiring and programming steps to connect the GT/GT+/GET communicator to Interlogix NX-4v2, Interlogix NX-6v2 panels using KeyBus, then enroll the system in Protegus2. Use this alongside the full manuals for all other settings. (Terminal labels differ slightly between GT/GT+/GET, but the connections are the same.)



**CAUTION**

Install and service only by qualified personnel. Disconnect power before wiring. Unauthorized changes void warranty.

## 1. Prerequisites

1. GT/GT+/GET firmware 1.21, SIM inserted, PIN disabled, data plan active.
2. Interlogix NX-4v2 / NX-6v2 panel with keypad access (installer code available).
3. CMS account number if reporting to CMS.
4. Protegus2 company/installer account and communicator IMEI.

## 2. Wiring

### Cookie consent


We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.



Google Analytics

Accept

Reject

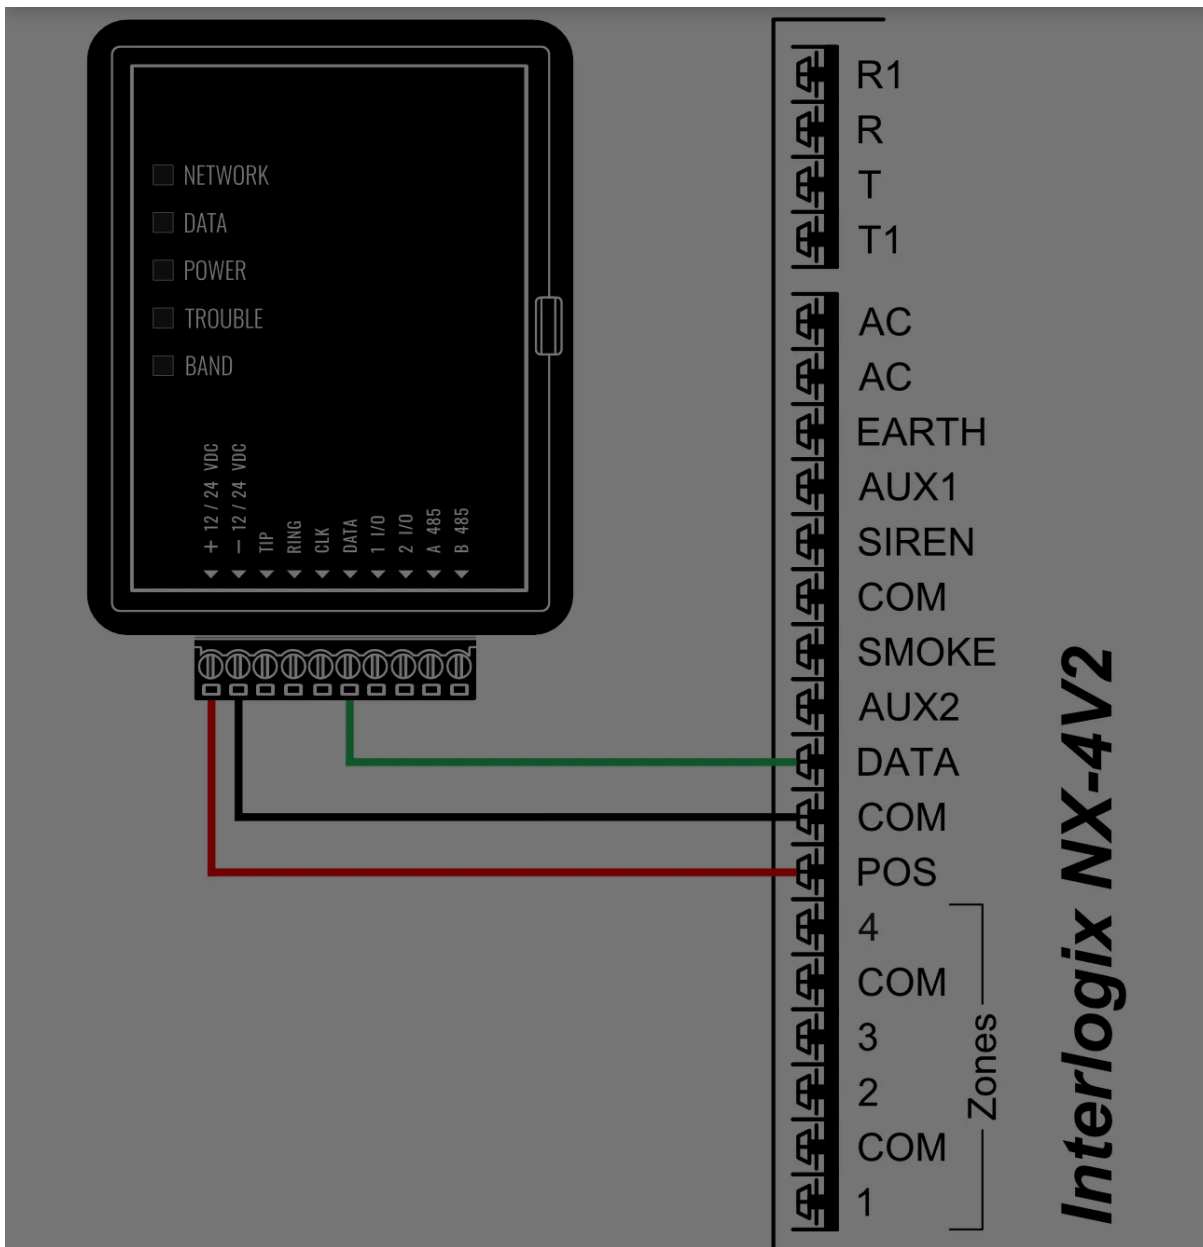

**Interlogix NX-4V2**

### 3. Programming the Interlogix NX-4v2, Interlogix NX-6v2 Alarm Panel via the LCD Keypad

#### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



LCD keypad	Keypad Entry	Action Description
System ready	*89713	Enter programming mode
Enter device address	0#	To go to main panel programming menu
Enter location	4#	To go to "Phone1 events reported" toggle menu
Loc#4 Seg#1	12345678*	All toggle options should be enabled. * to save and go to next menu
Loc#4 Seg#2	12345678*	All toggle options should be enabled. * to save and go back.
Enter location	23#	To go to "Partition features" menu.
Loc#23 Seg#1	**	Press * twice to go to section 3 toggle options menu.
Loc#23 Seg#3	12345678*#	Segment 3. All toggle options should be enabled, press * to save and then # to save and # to go back to the main menu.
Enter location	37#	To go to "Siren and system supervision" menu.
Loc#37 Seg#1	**	Press * twice to go to segment 3 toggle options menu.
Loc#37 Seg#3	12345678*	Segment 3. All toggle options should be enabled press * to save.
Loc#37 Seg#4	12345678*#	Segment 4. All toggle options should be enabled press * to press and then # to save and # to go back to the main menu.
Enter location	EXIT EXIT	Press "EXIT" twice to exit programming mode.

## 4. Programming the Interlogix NX-4v2, Interlogix NX-6v2 Alarm Panel via the LED Keypad

Using the control panel's keypad enter these sections and set them as described:

**Enable Contact ID reporting**

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



LCD keypad	Keypad Entry	Action Description
LEDs of Ready, Power steady ON	*89713	Enter programming mode
Service LED blinks	0#	To go to main panel programming menu
Service LED blinks, Armed LED steady ON	4#	To go to "Phone1 events reported" toggle menu
All zone LEDs are ON	12345678*	All toggle options should be enabled. * to save and go to next menu
All zone LEDs are ON	12345678*	All toggle options should be enabled. * to save and go back.
Service LED blinks, Armed LED steady ON	23#	To go to "Partition features and reporting selection" menu.
Service LED blinks, Ready LED steady ON	**	Press * twice to go to section 3 toggle options menu.
Service LED blinks, Ready LED steady ON	12345678*#	Segment 3. All toggle options should be enabled, press * to save and then # to save and # to go back to the main menu.
Service LED blinks, Armed LED steady ON	37#	To go to "Siren and system supervision" menu.
Service LED blinks, Ready LED steady ON	**	Press * twice to go to segment 3 toggle options menu.
Service LED blinks, Ready LED steady ON	12345678*	Segment 3. All toggle options should be enabled press * to save.
Service LED blinks, Ready LED steady ON	12345678*#	Segment 4. All toggle options should be enabled press * to press and then # to save and # to go back to the main menu.
Service LED blinks, Armed LED steady ON	EXIT EXIT	Press "EXIT" twice to exit programming mode.

## 5. Add system to Protegus2

**Step 1. Tap Add new system.**

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






**Step 2.** Enter the communicator **IMEI**, tap **Next**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

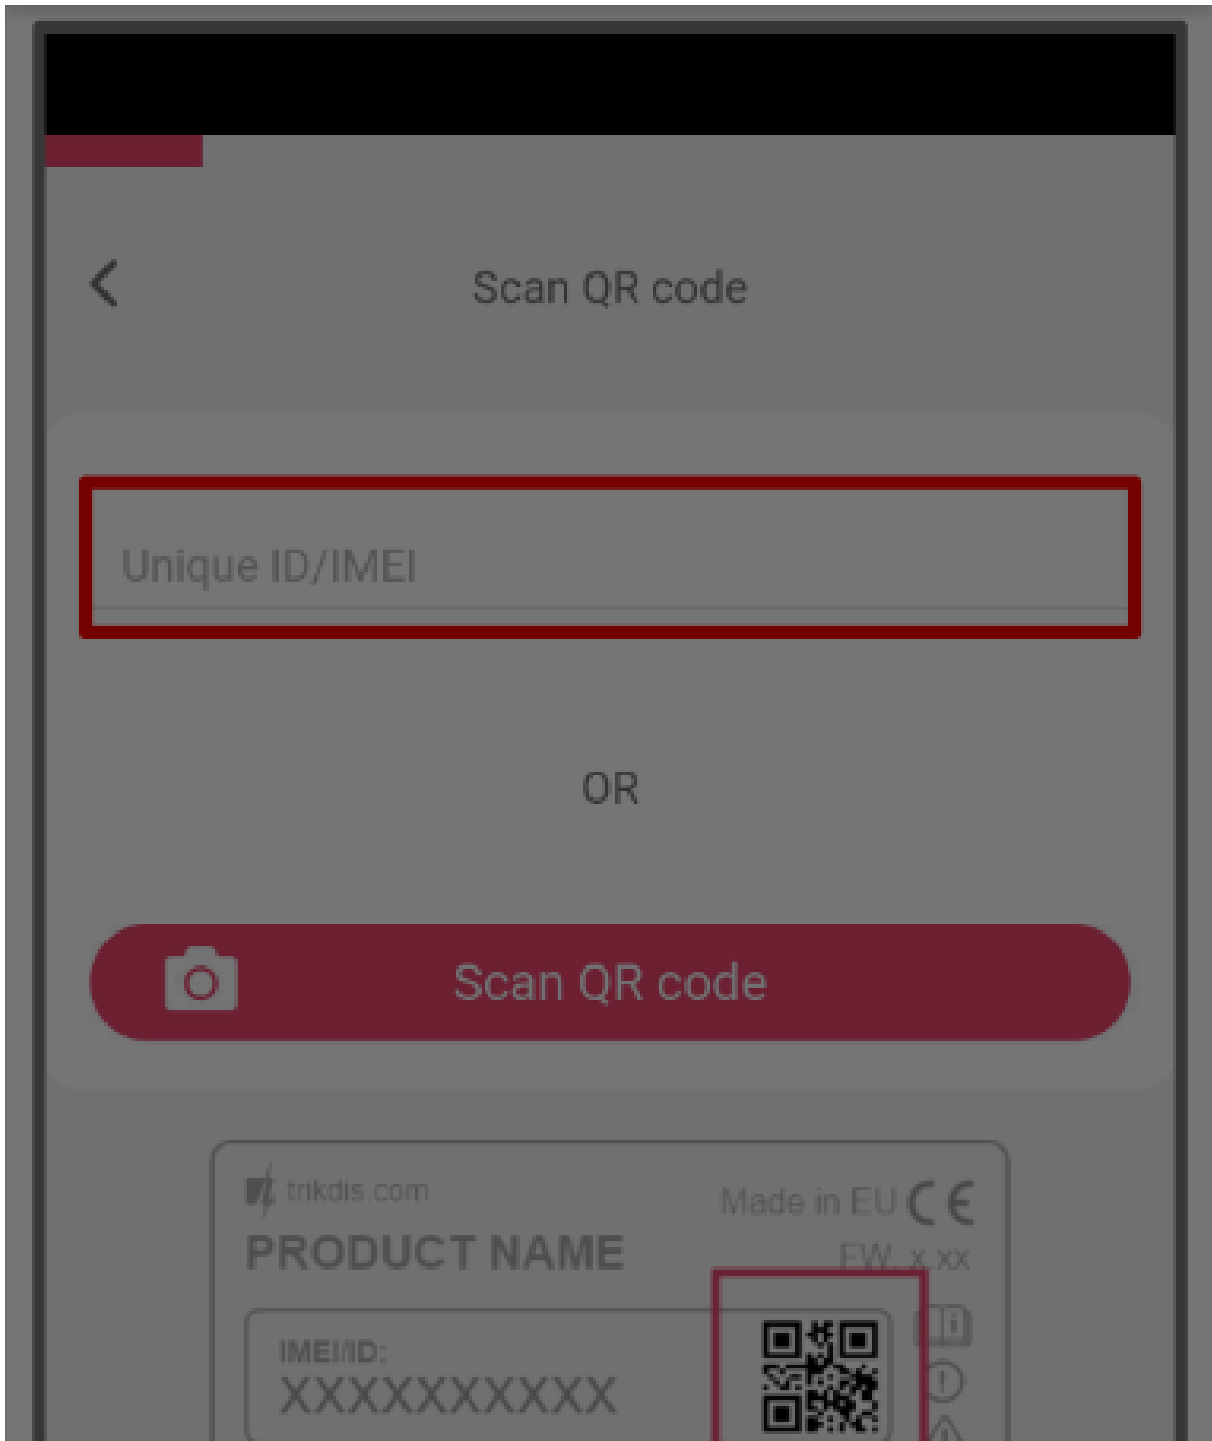


### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics



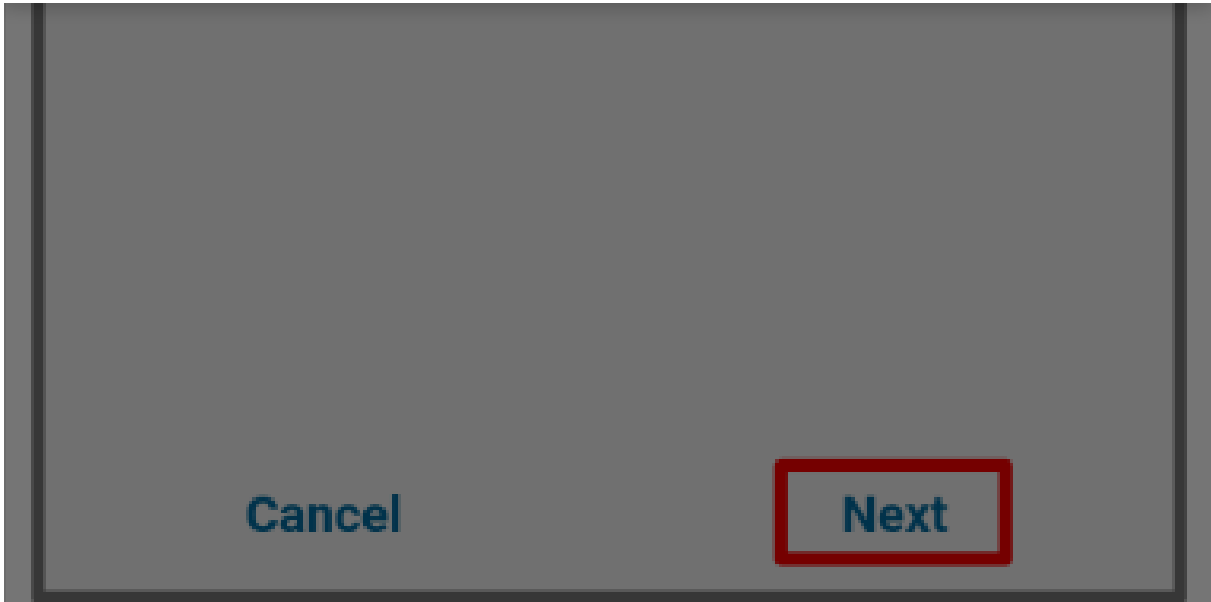


**Step 3.** Select security company.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel

Add only to Protegus2


#### Step 4. Choose **Interlogix**.

#### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



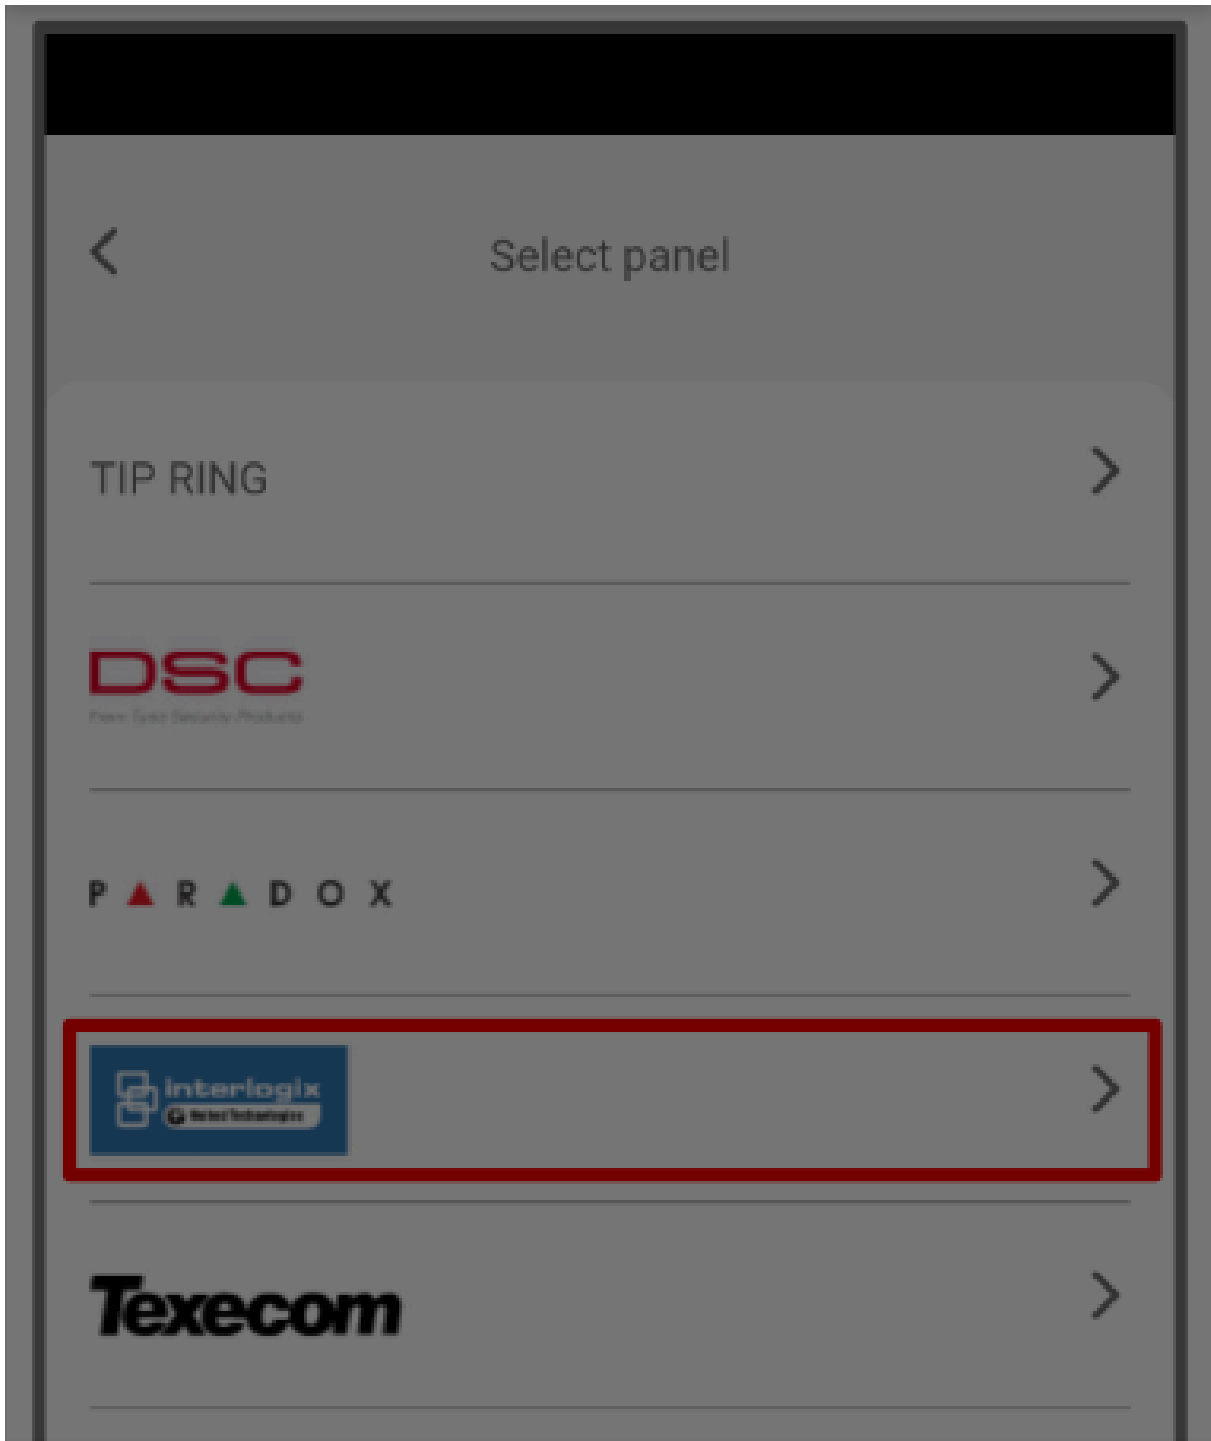

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cancel


**Step 5.** Choose **NX-4 (NX-6)**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



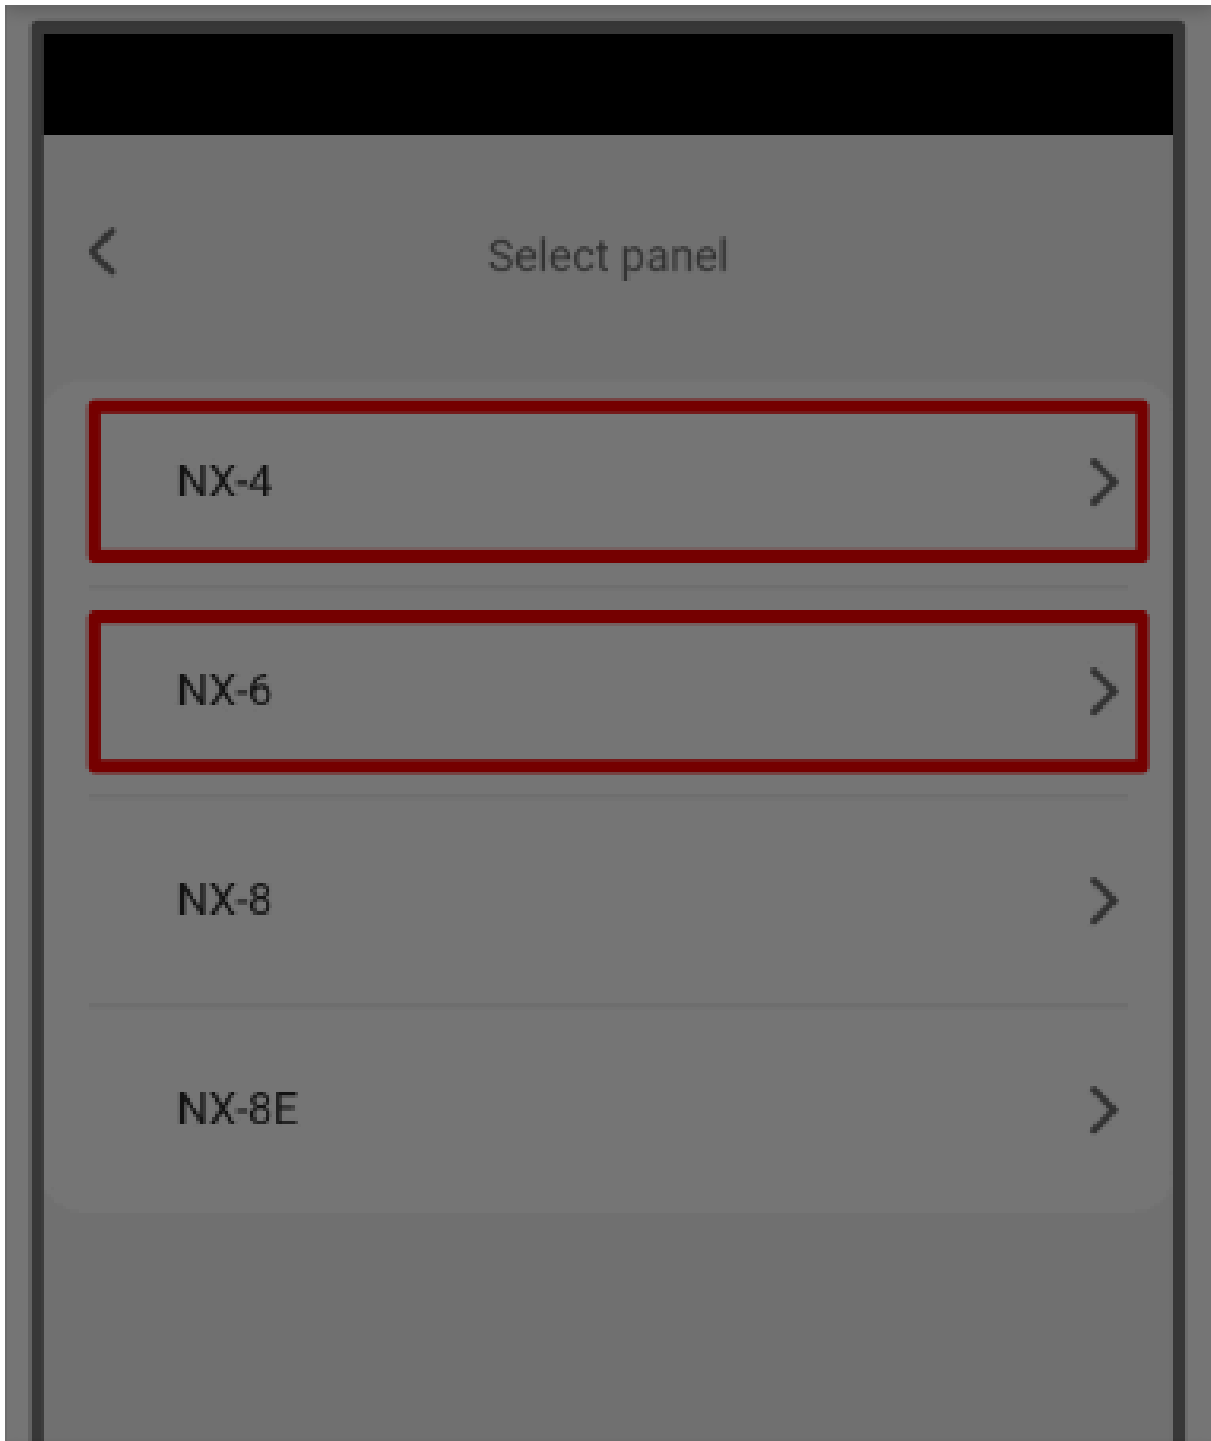

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics





Cancel


**Step 6.** Enter **Object ID** and **Module ID**, tap **Next**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




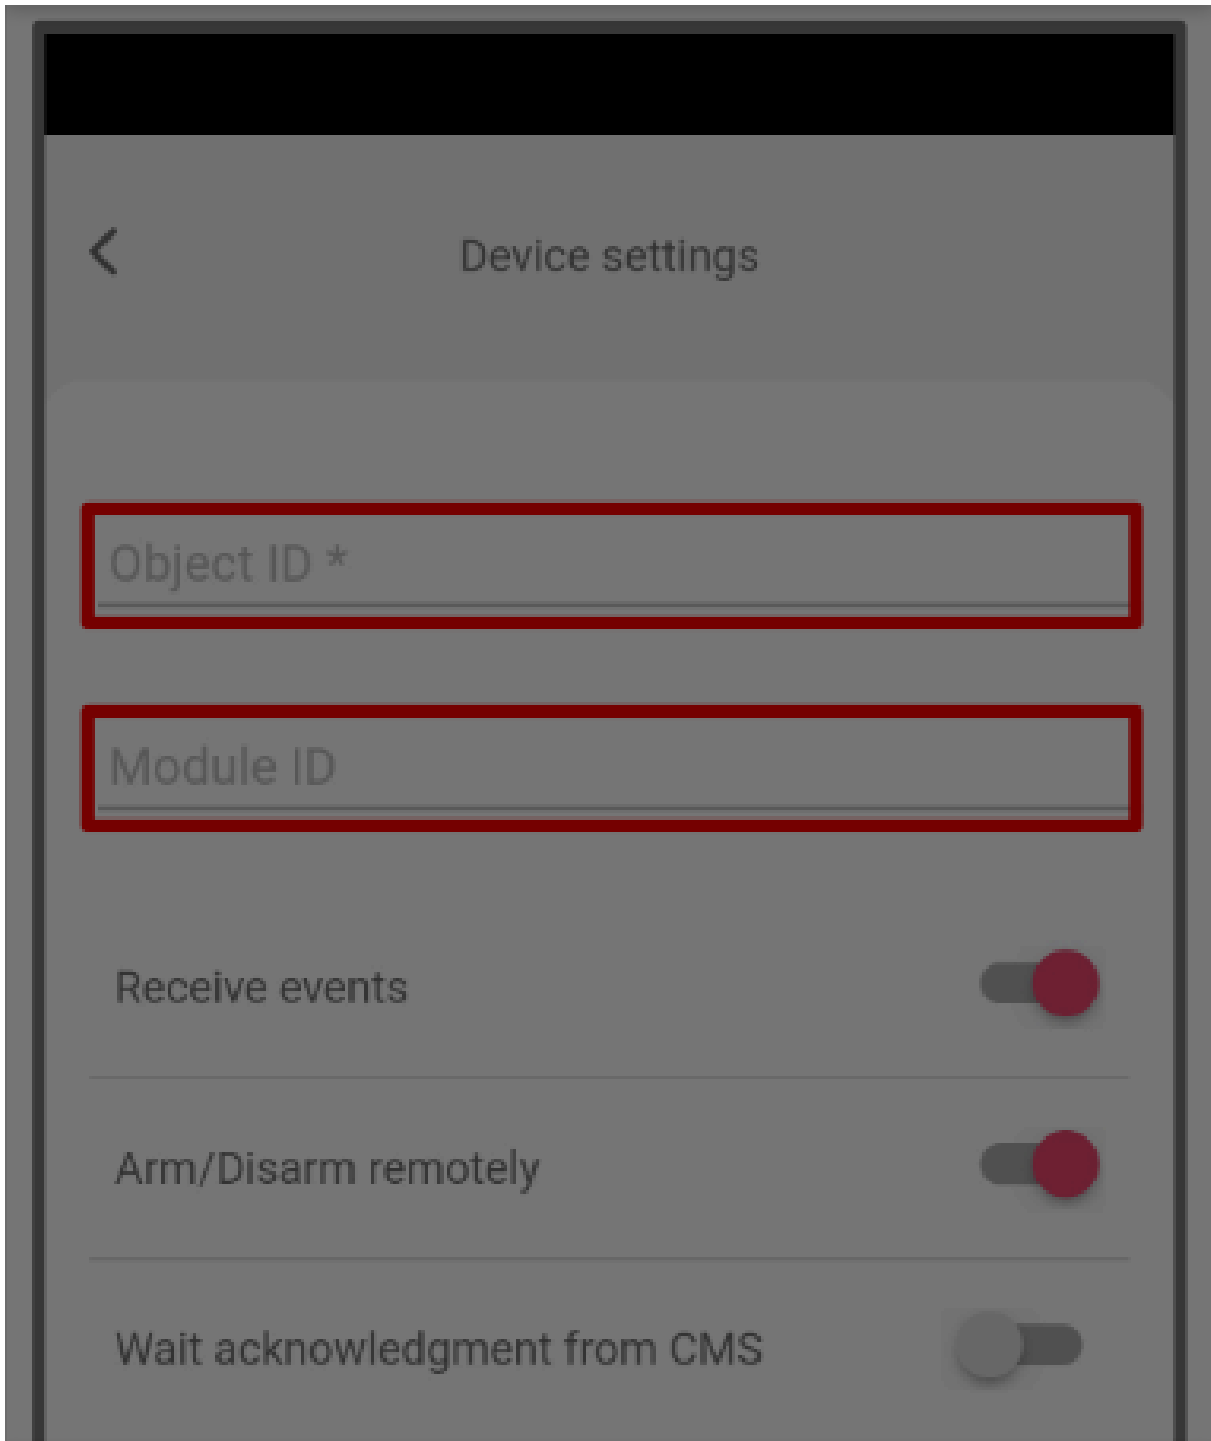

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

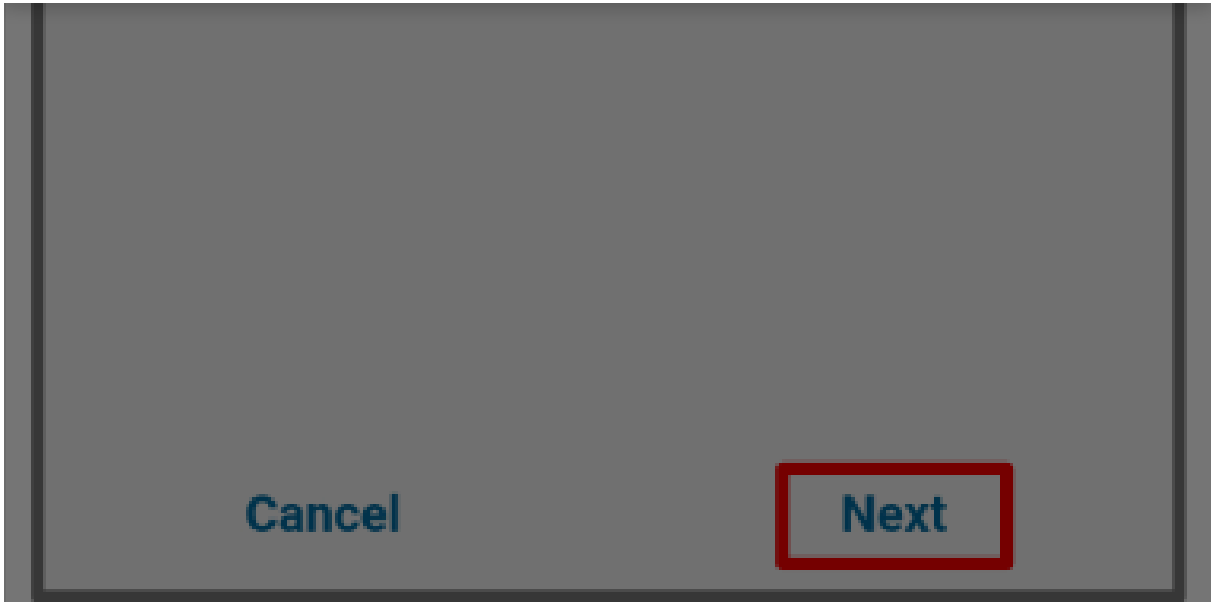


**Step 7.** Wait while data is written.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



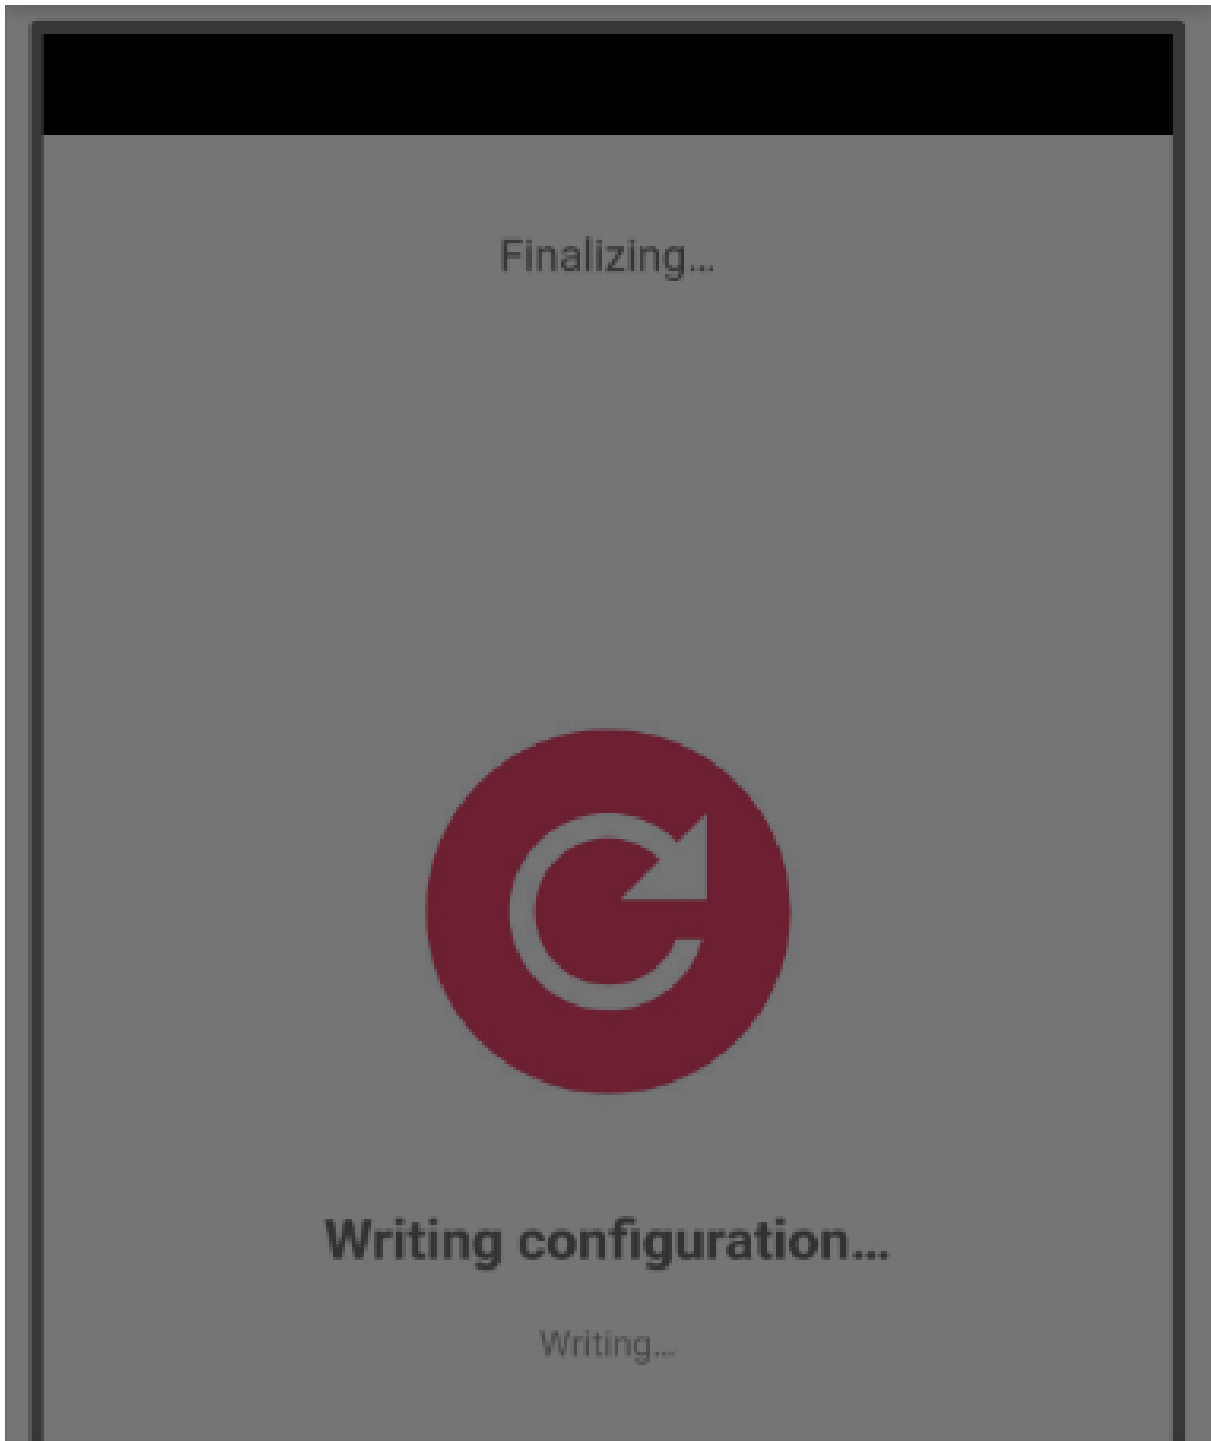

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Cancel


**Step 8. Tap Add to Protegus2.**

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



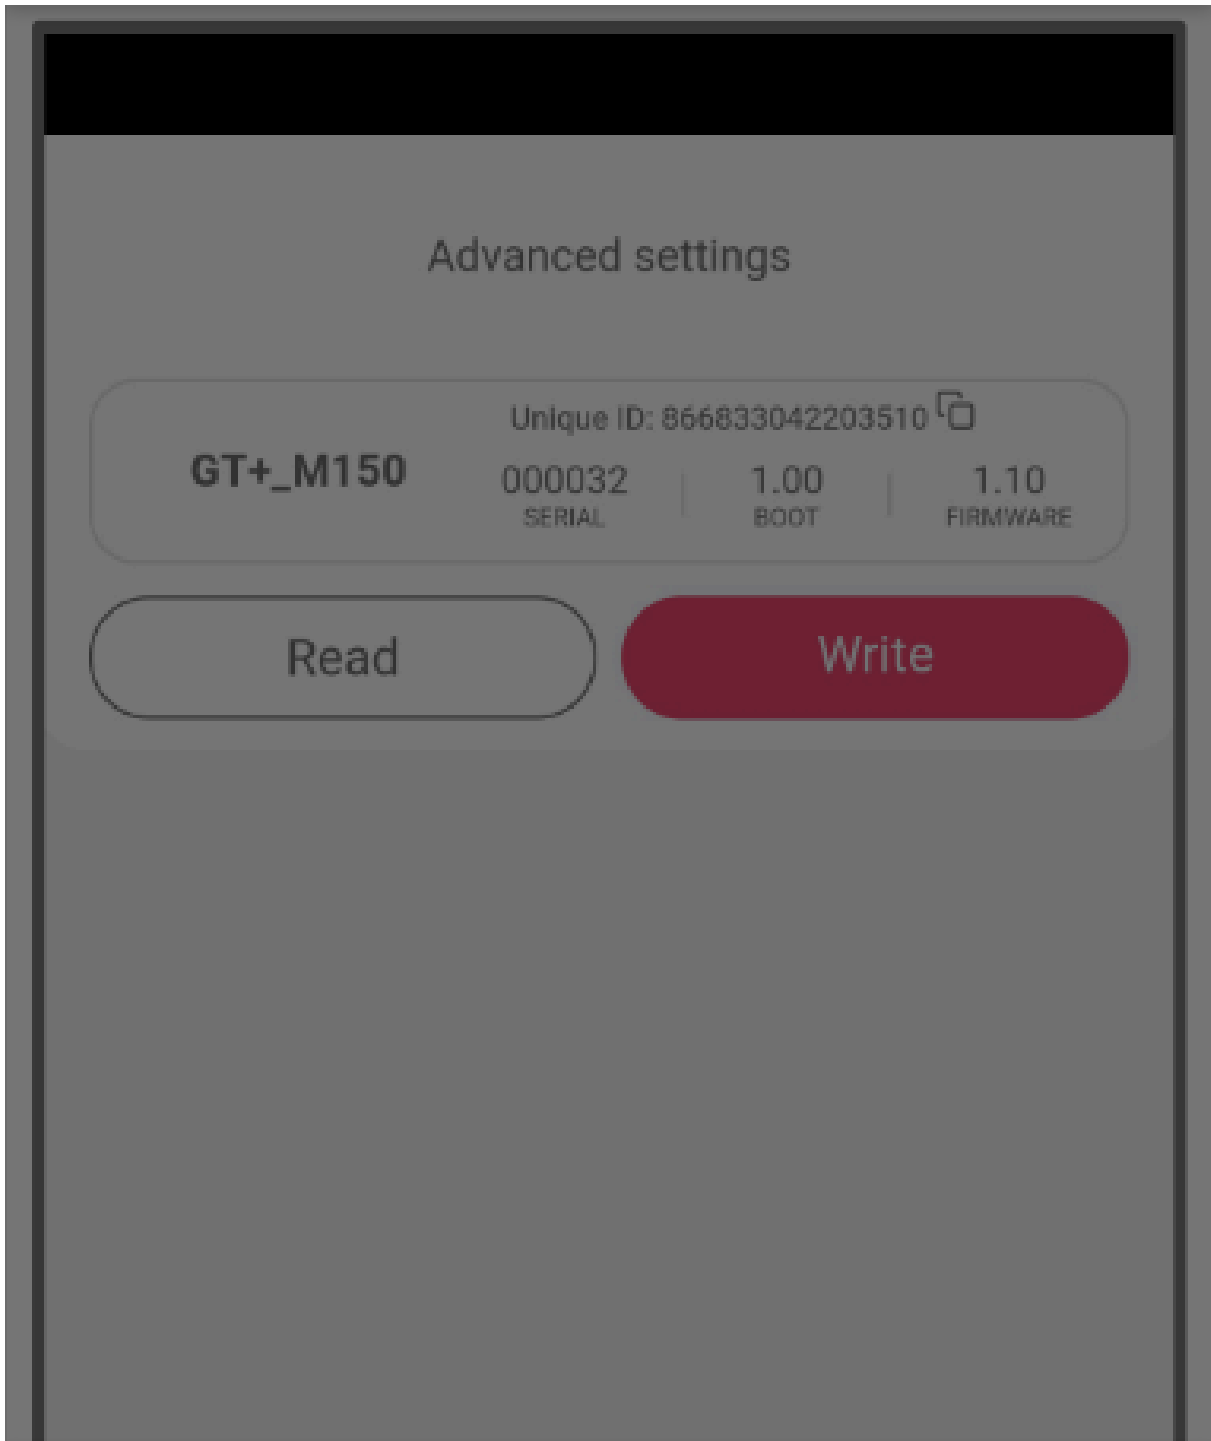


### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



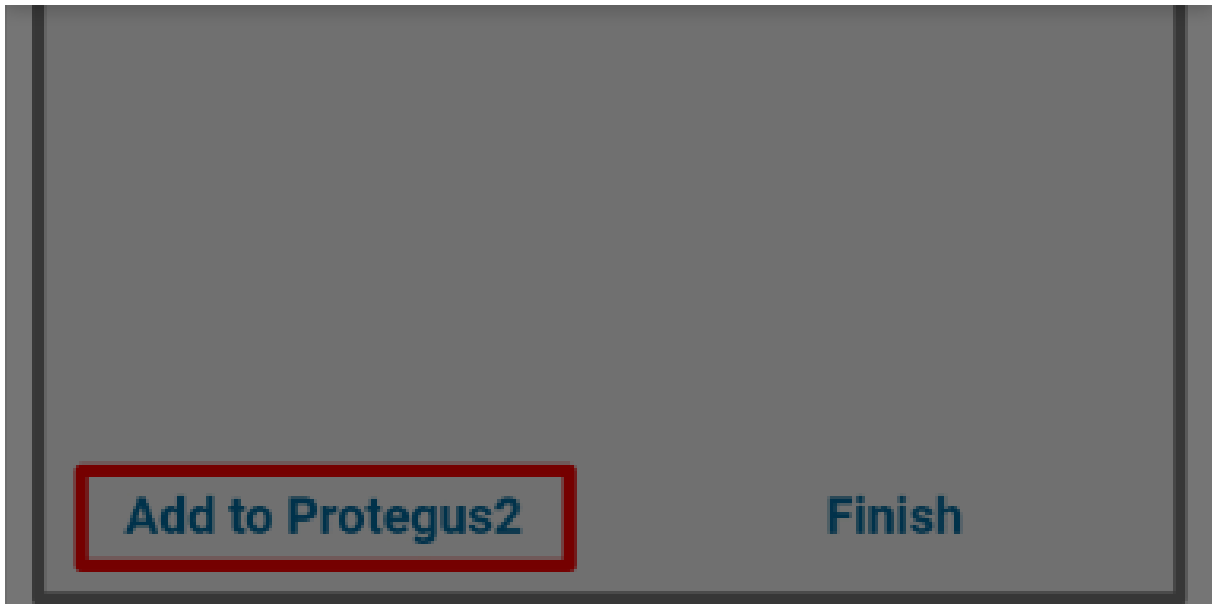

**Step 9.** Enter system **Name**, tap **Next**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



Add new system

Name  
System 1

Background


Time zone  
Europe/Vilnius

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



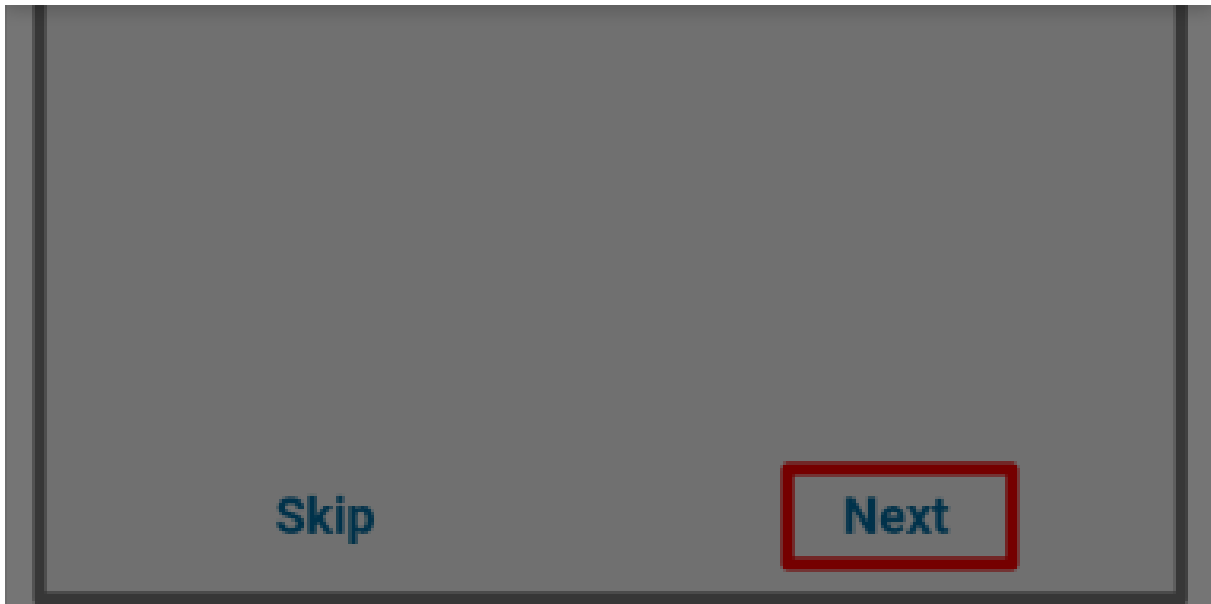


**Step 10.** Tap **Skip**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




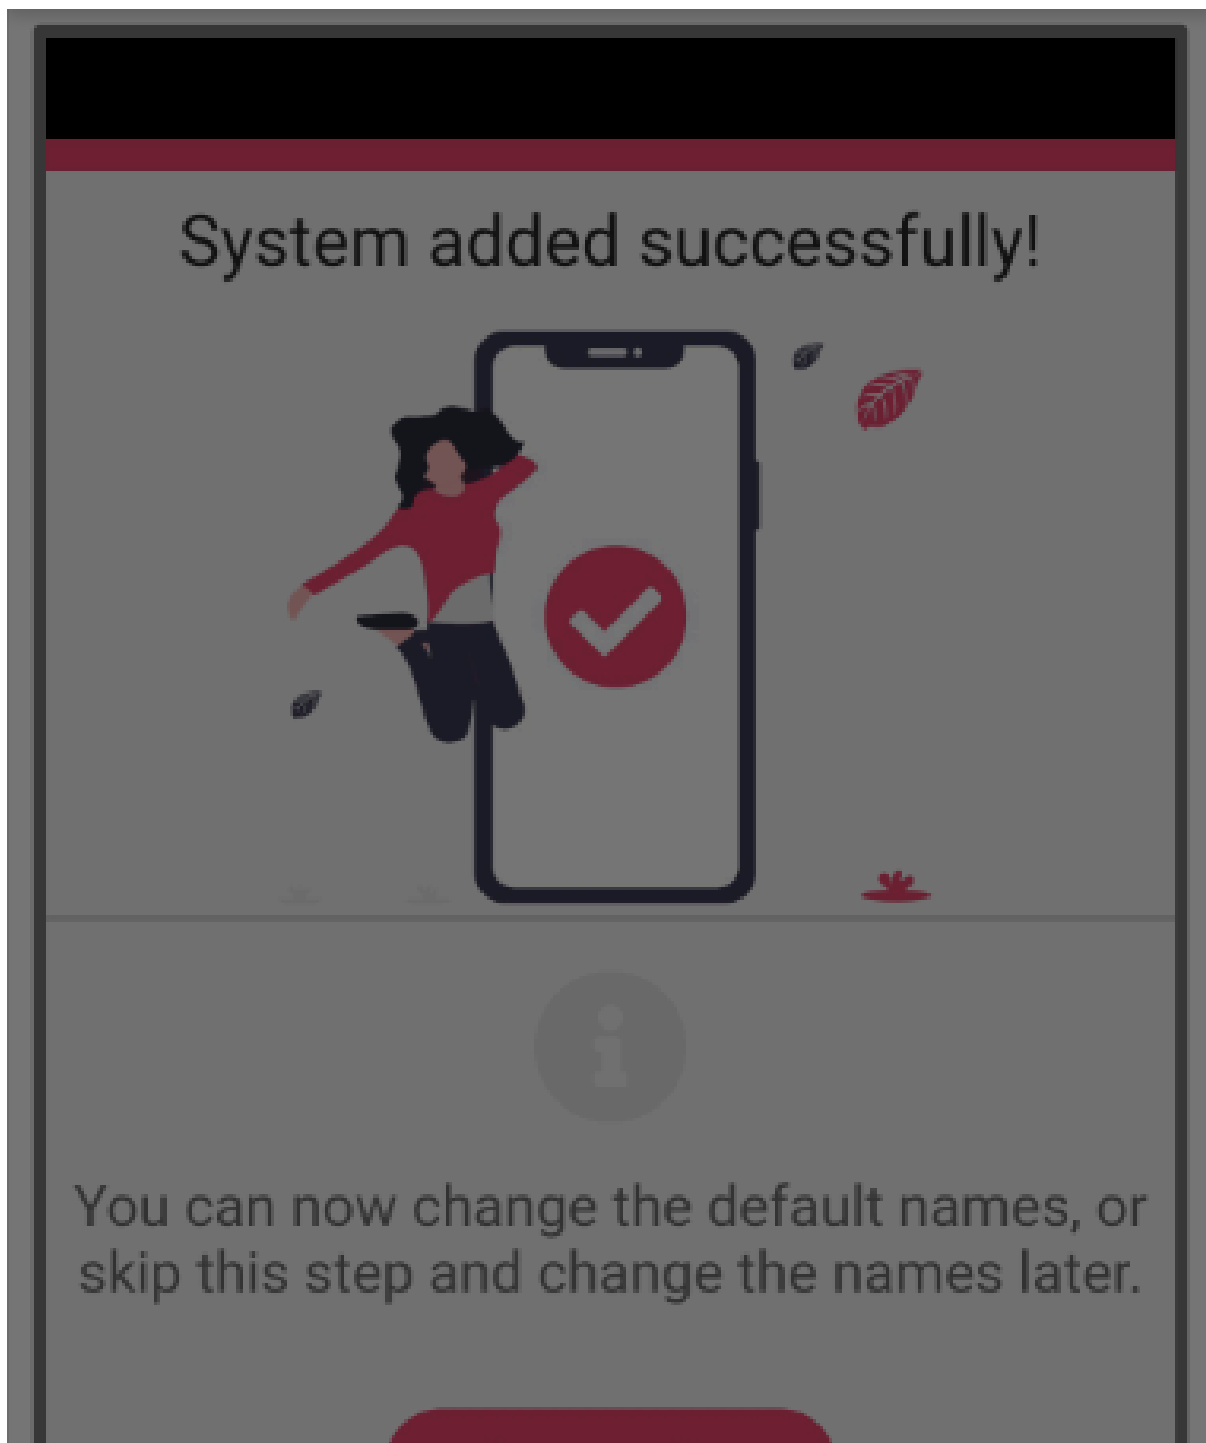

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics




**Step 11.** Tap on system.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



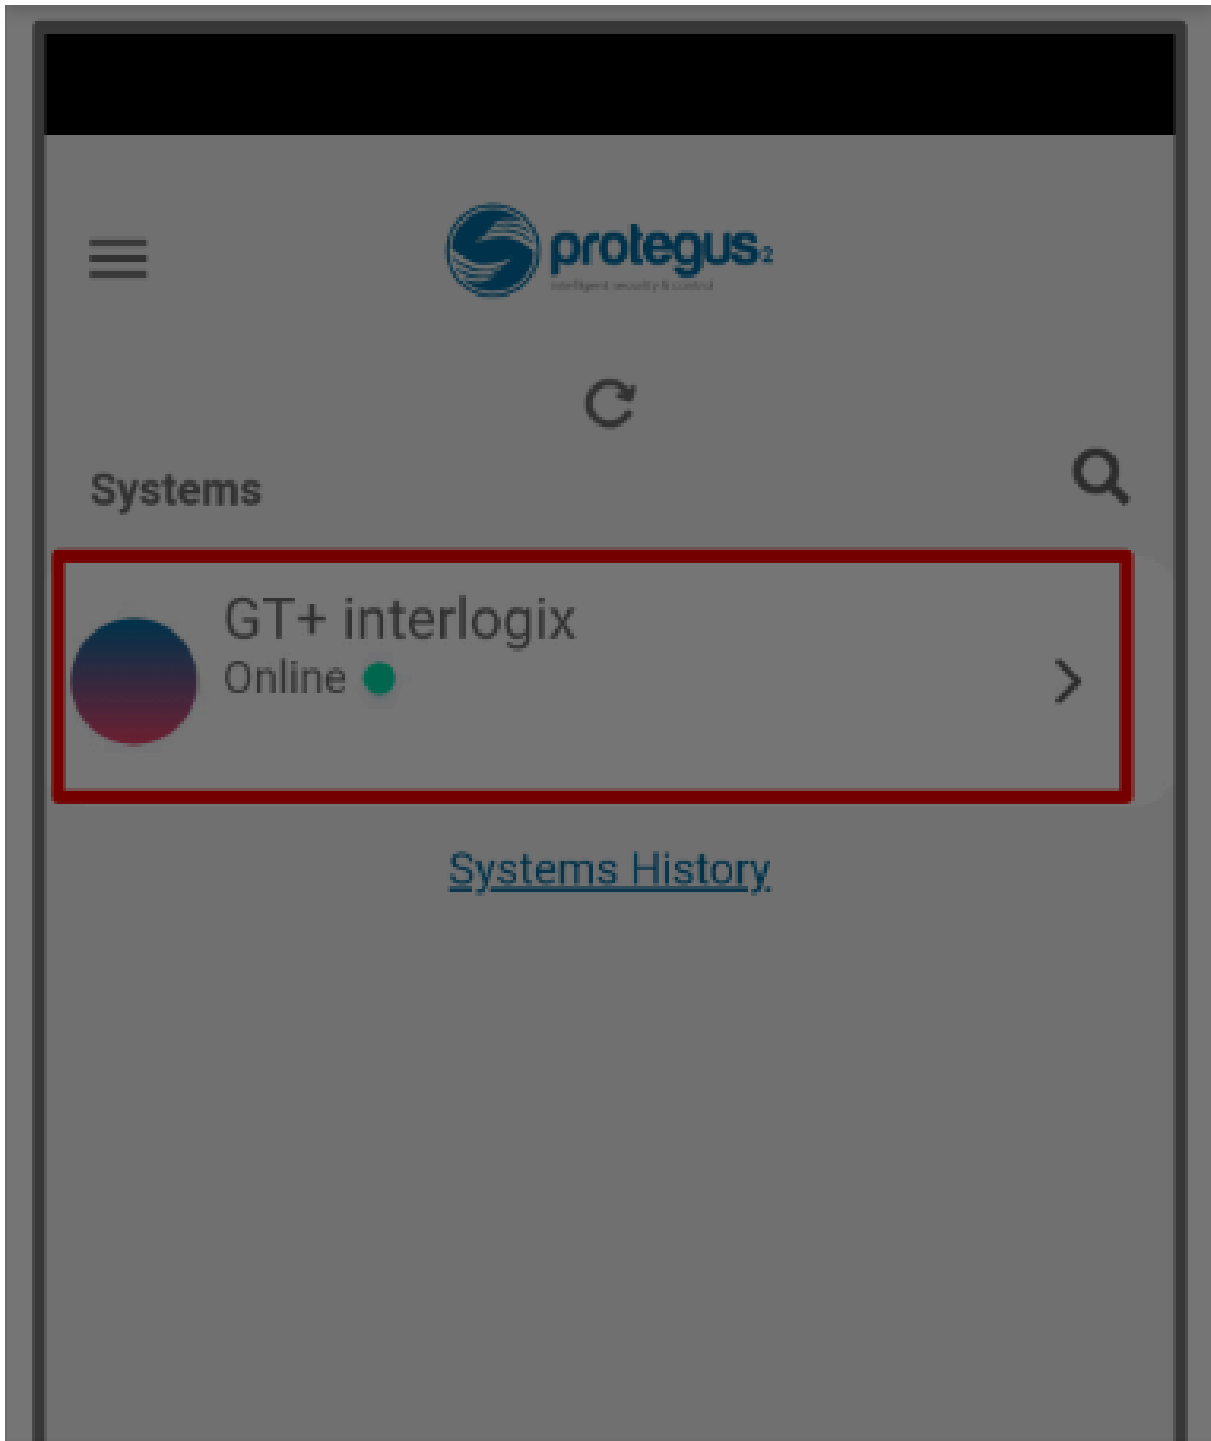

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics






**Step 12.** Wait 1 minute for completion and tap **Transfer**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



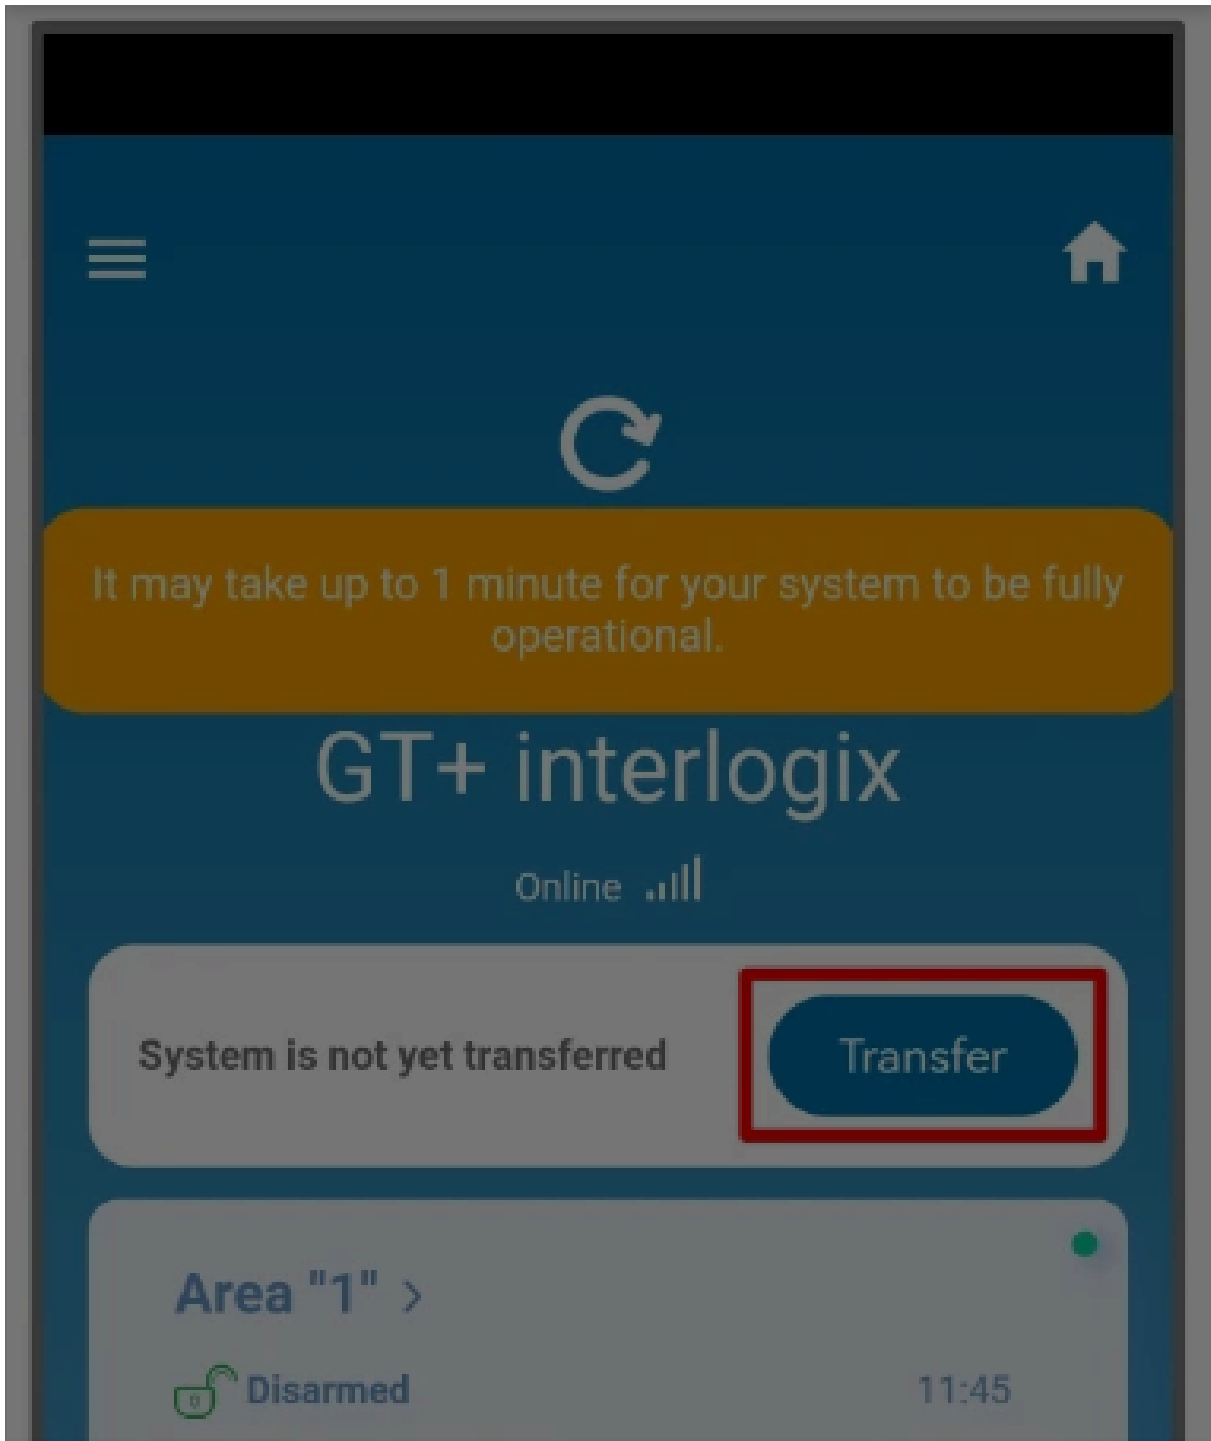


### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



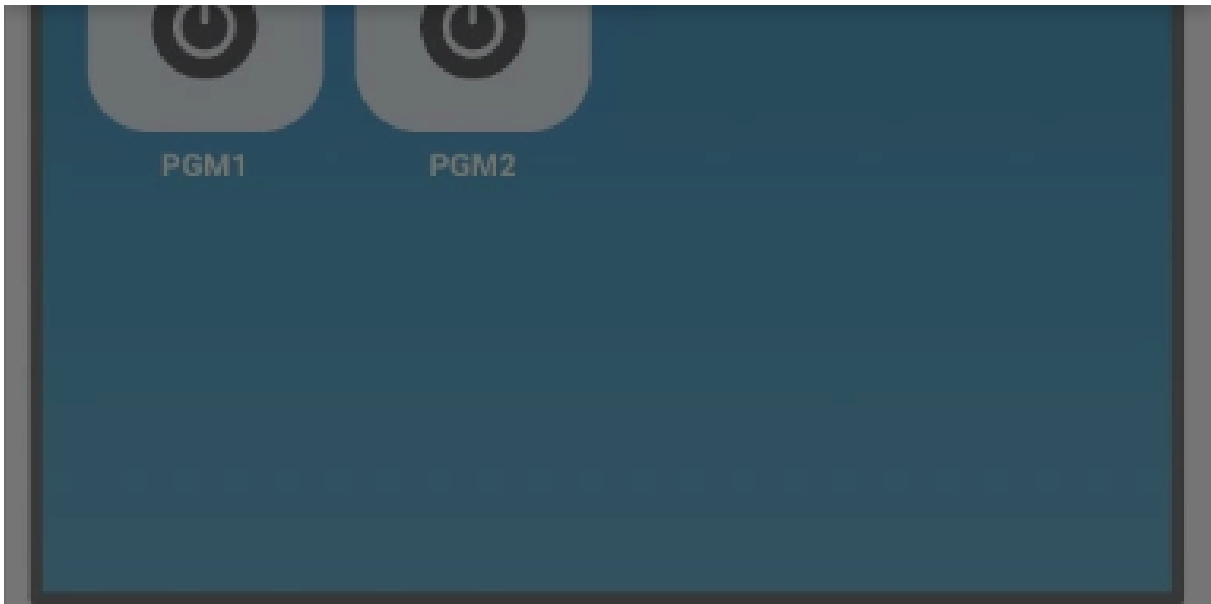


**Step 13.** Enter the e-mail of the user to whom the installer will transfer the system. Tap **Transfer**.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



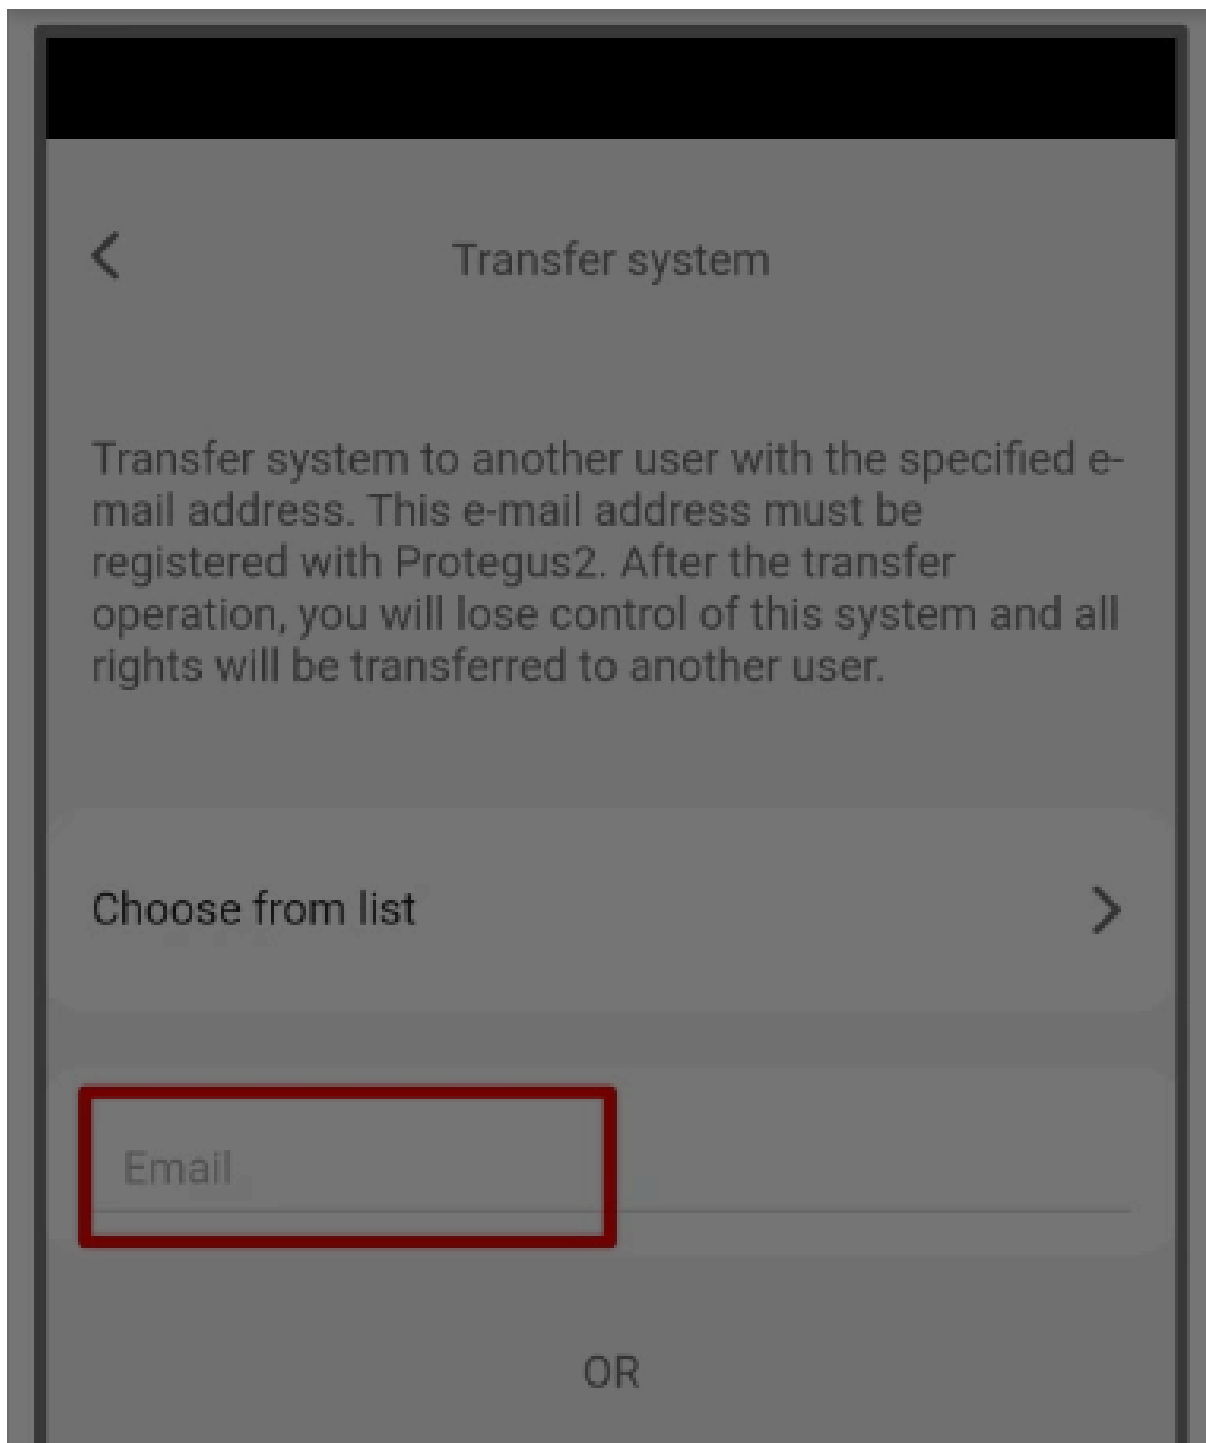


### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



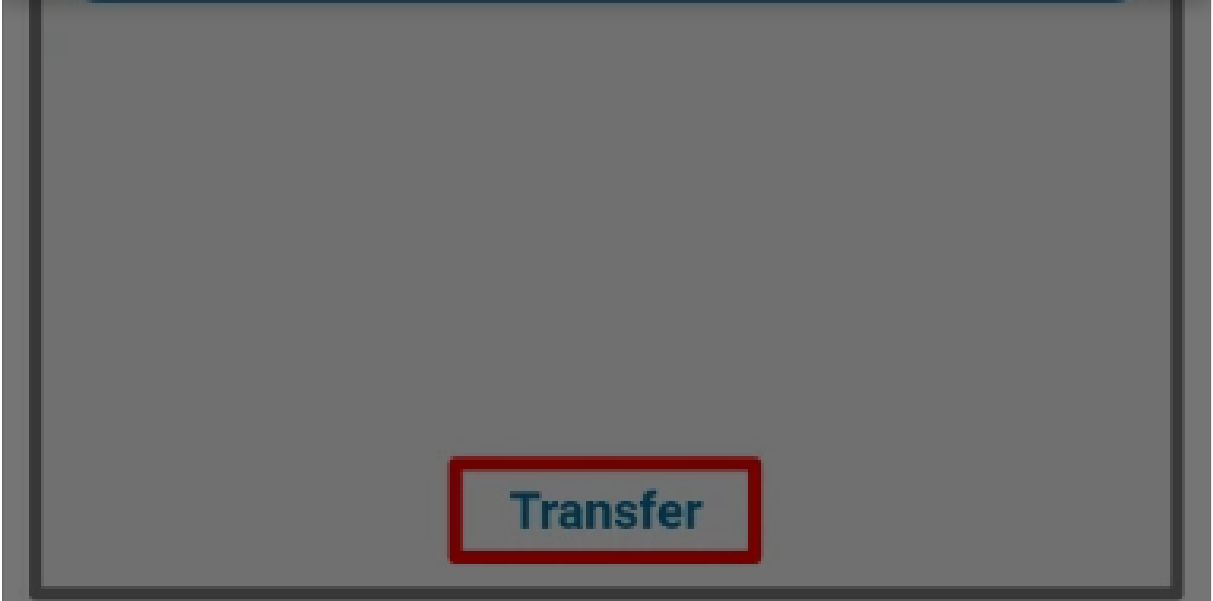


Transfer

**Step 14.** The system will appear in Protegus on the user's phone.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics

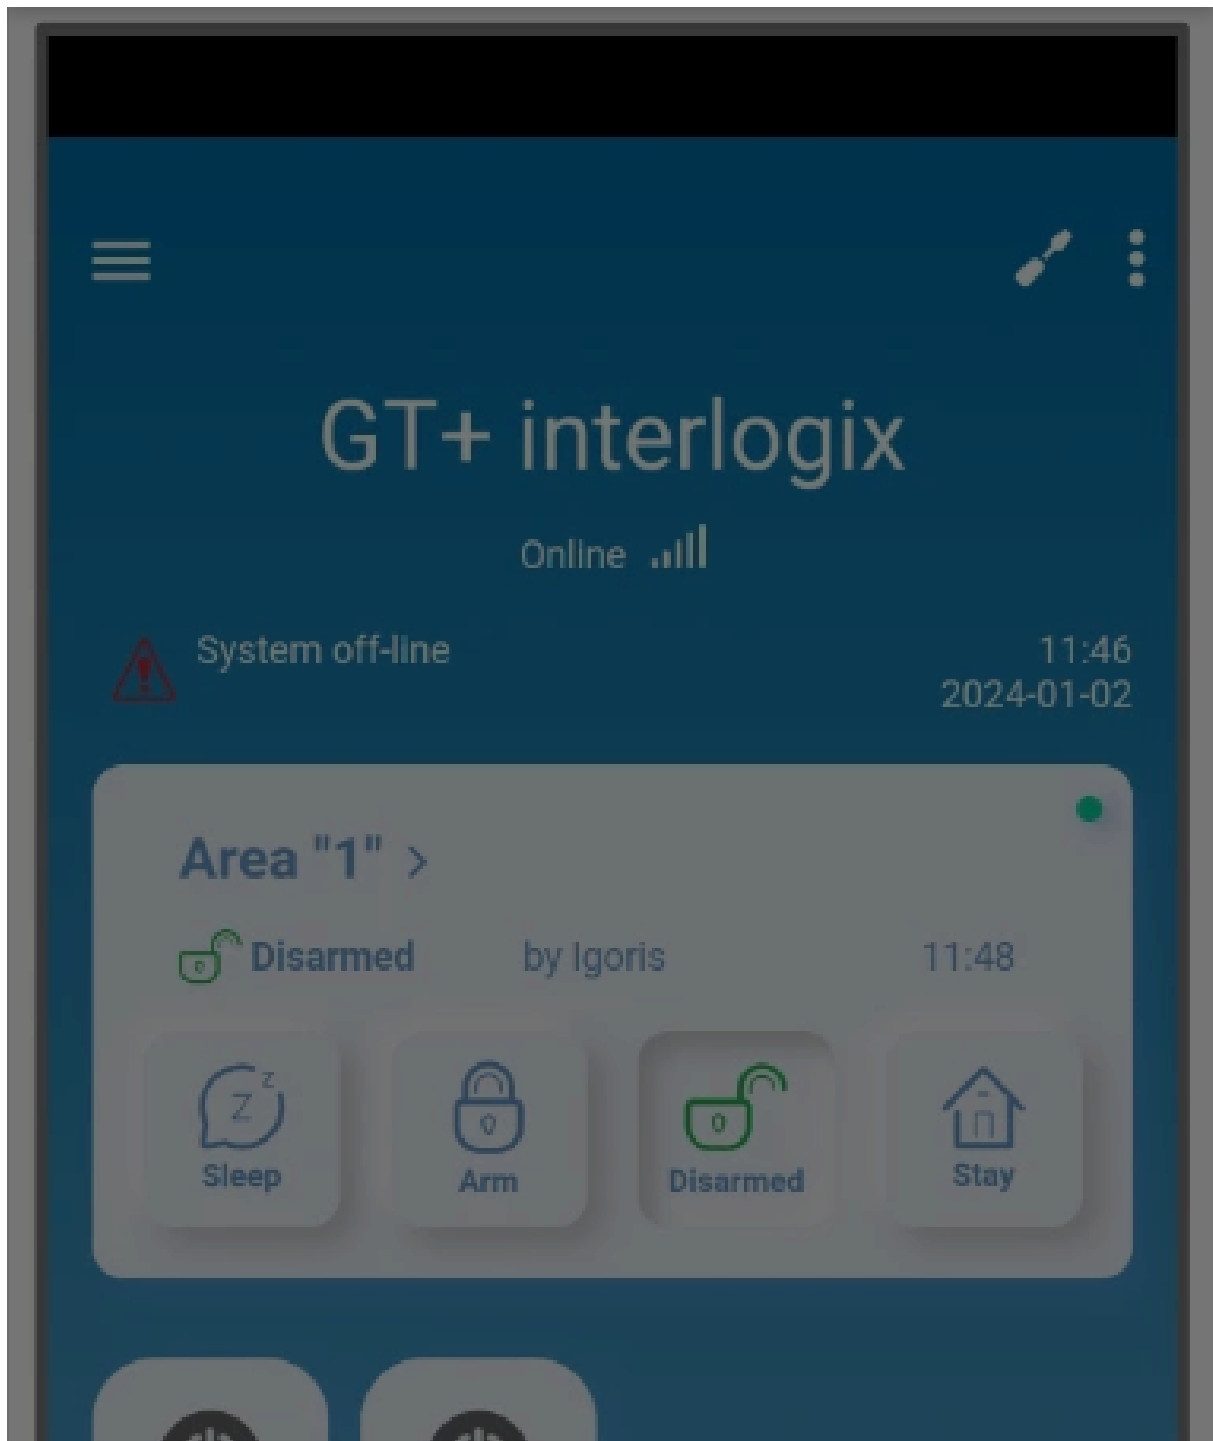

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

Google Analytics



### TIP

After completing the setup and installation perform a system check:

1. Create an event:

- by arming/disarming the system with the control panel's keypad.
- by triggering a zone alarm when the security system is armed.

2. Make sure that the event arrives to the CMS (Central Monitoring Station) and the Protegus2 app.

### Cookie consent

We use cookies to measure the effectiveness of our documentation and whether users find what they're searching for. With your consent, you're helping us to make our documentation better.

- Google Analytics